


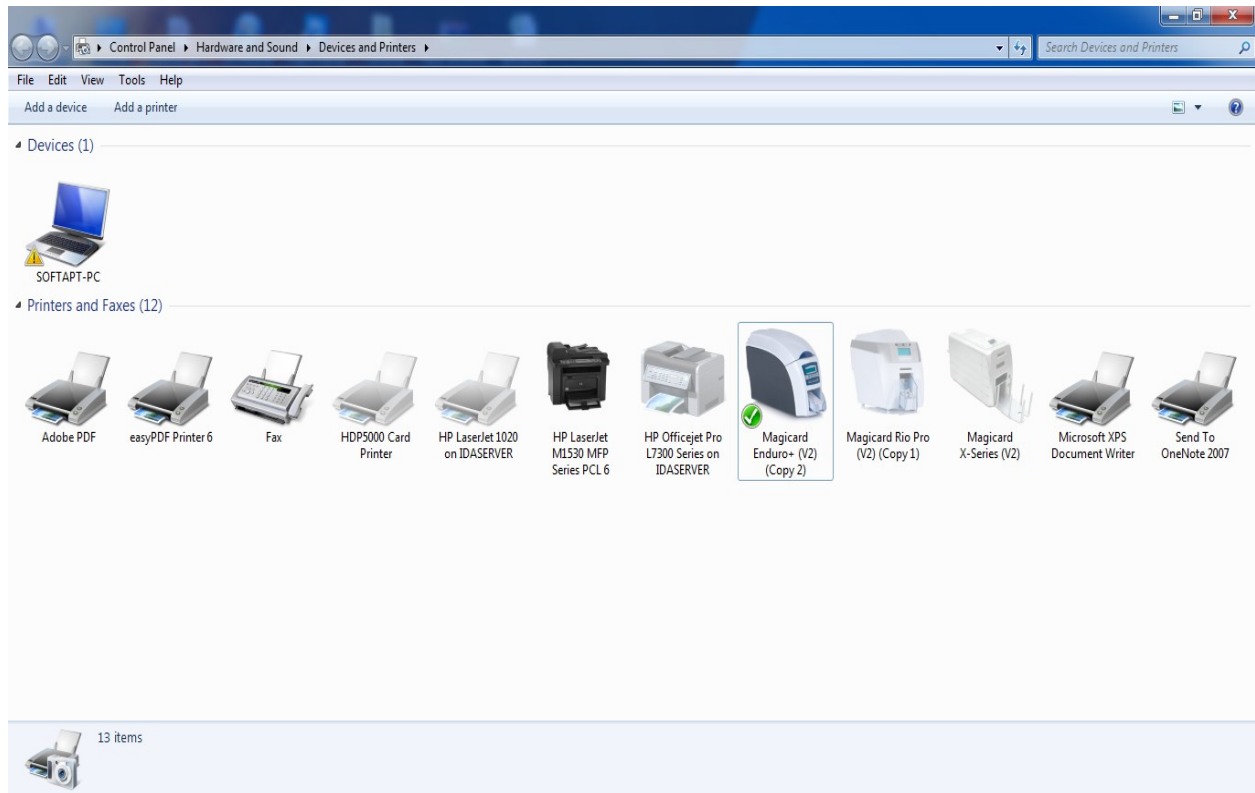

➤ **STEP 1: GO TO PRINTING PREFERENCES TAKE THE MOUSE ARROW MARK ON THE PRINTER BOOK MARK, THE STATUS OF PRINTER SHOULD SHOW (PRINTER READY) AS SHOWN IN THE IMAGE.**




➤ **STEP 2: RIGHT CLICK THE MOUSE SELECT PRINTING PREFERENCE, PRINTER PROPERTY WINDOW WILL BE OPENED.**

➤ **THE PRINTER SHOULD BE SELECTED BOTH SIDE.**


➤ **CARD OREANTATION – POTRAIT.**

➤ **CLICK APPLY AFTER SELECTING THE OPTIONS.**

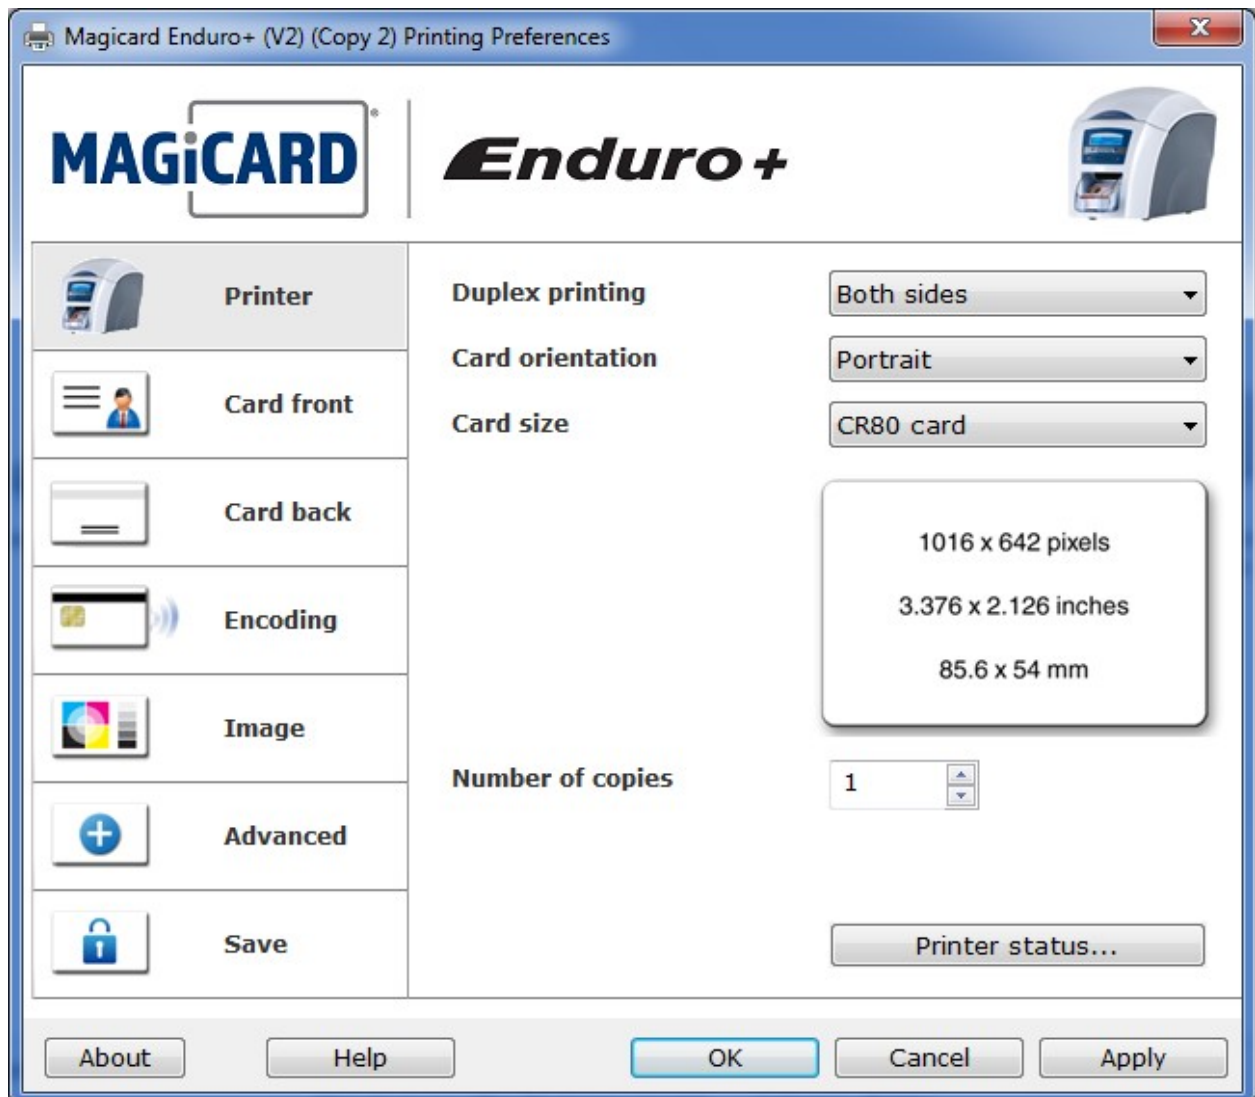


STEP 3: SELECT CARD FRONT OPTION

- SELECT COLOUR FORMAT YMCK.
- SELECT PRINT OVERCOAT. .
- CLICK APPLY AFTER CHANGING THE SETTINGS IN CARD FRONT OPTION.

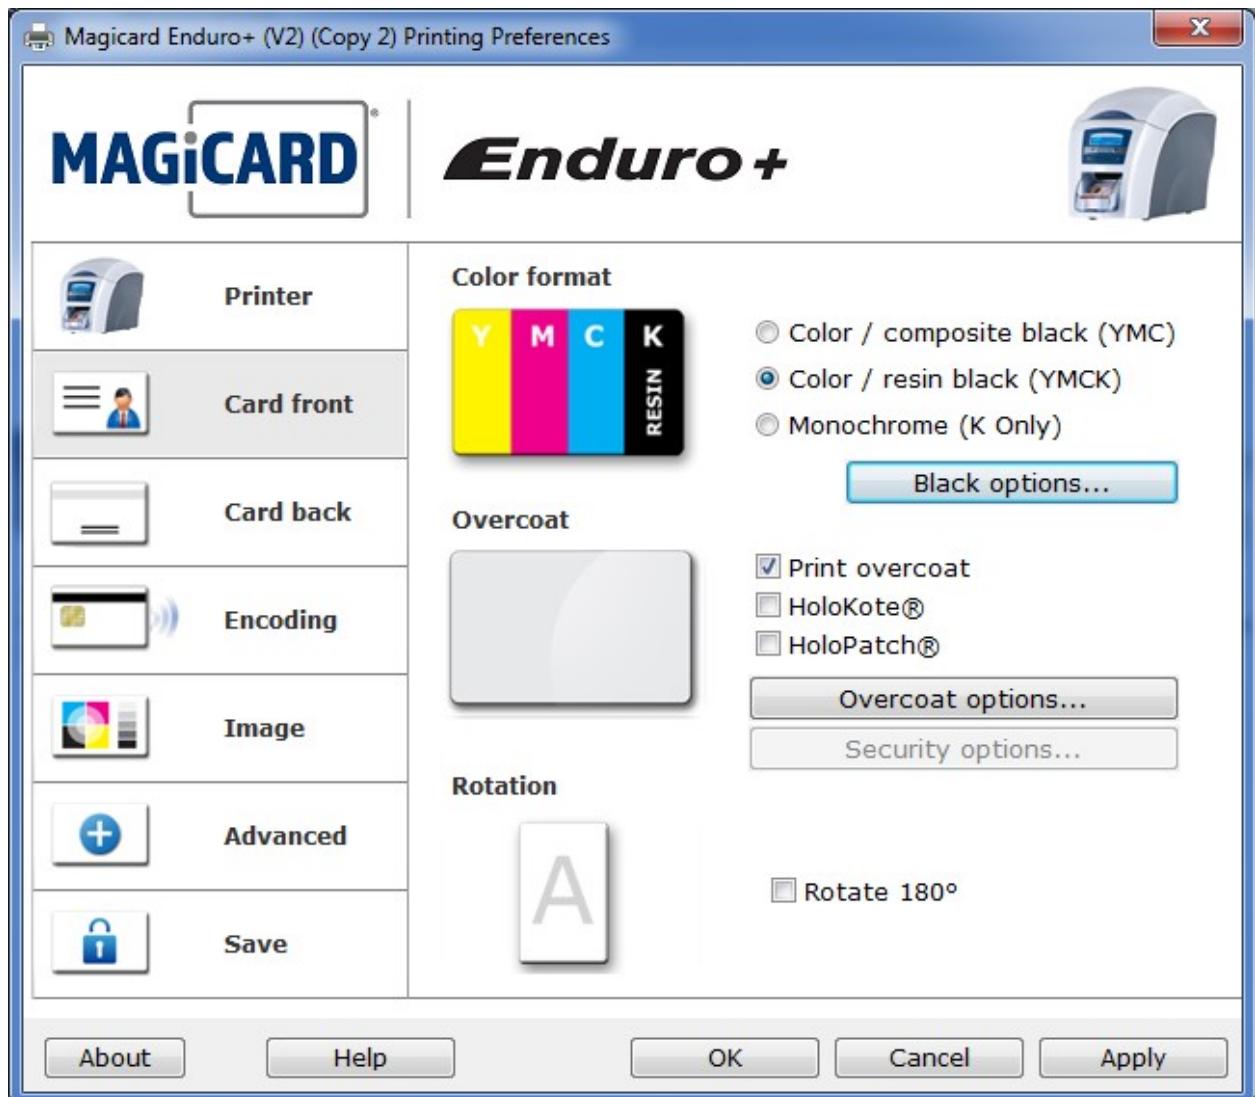

STEP 4: SELECT BLACK OPTION IN CARD FRONT.


- REMOVE THE RIGHT MARK FROM PICTURE USING YMC ONLY.
- LATER CLICK OK THAN APPLY.

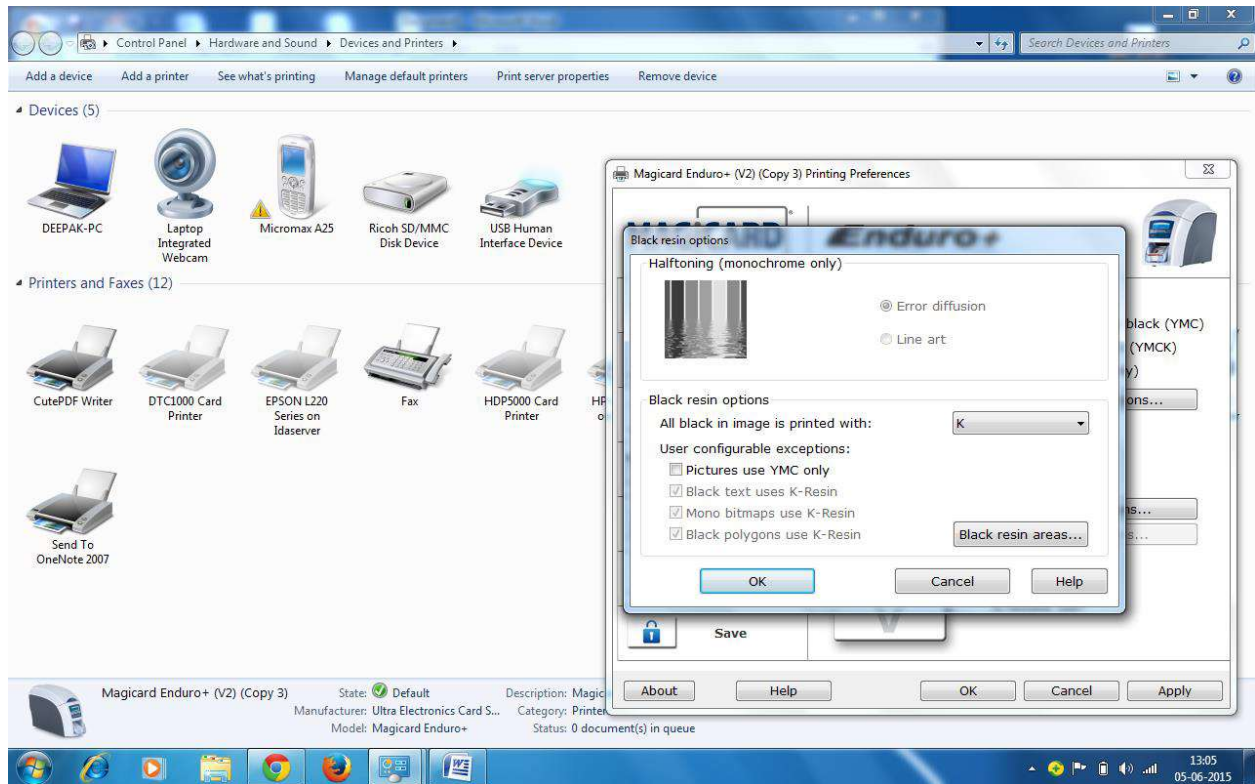

STEP 5: SELECT CARD BACK

- **IN COLOUR FORMAT SELECT MONOCROME (K ONLY).**
- **RIGHT CHECK PRINT OVERCOAT.**
- **AFTER CHANGING THIS CHICK ON APPLY.**

-
-

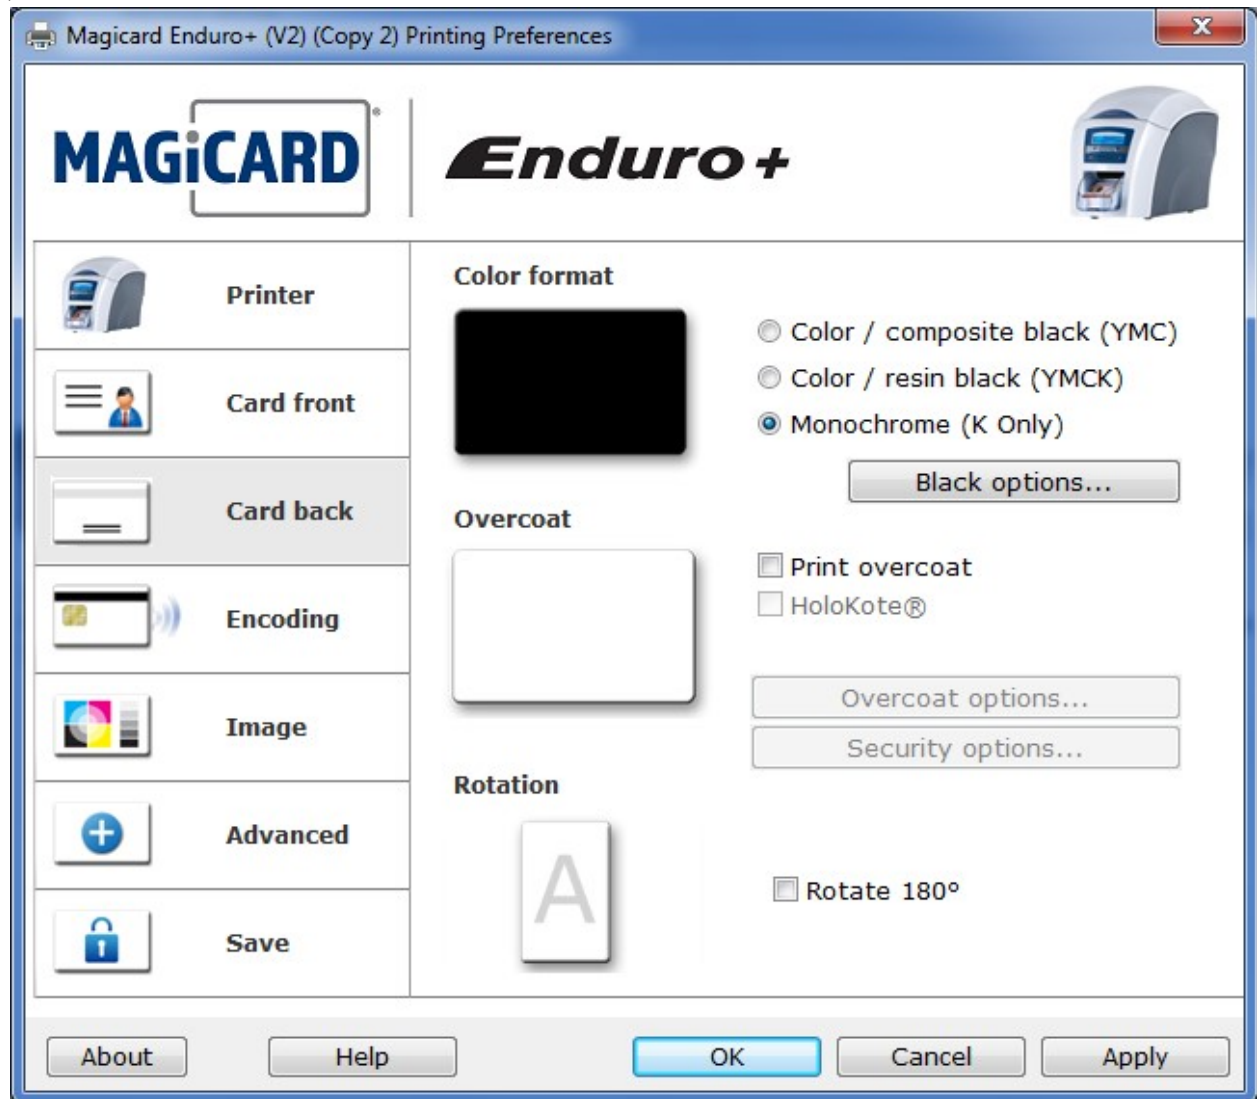


STEP 6: SELECT IMAGE OPTION

- **COLOUR CORRECTION - SELECT COLOUR MANAGEMENT(BUILT –IN-TO-DRIVE) .**
- **RESIGN QUALITY-HIGH QUALITY.**
- **AFTER SELECTING THIS SETTINGS CLICK APPLY.**





AADHAR SETTINGS – EKYC

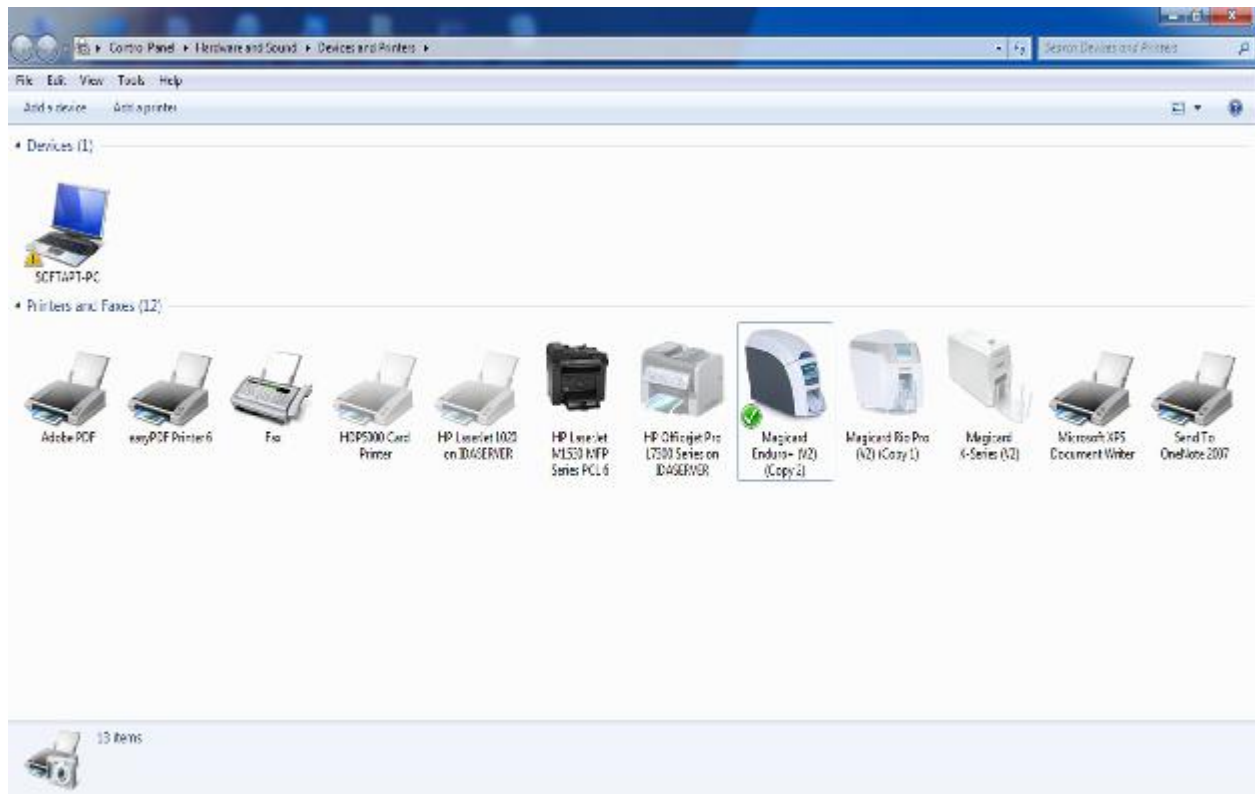

➤ **STEP 1: GO TO PRINTING PREFERENCES TAKE THE MOUSE ARROW MARK ON THE PRINTER BOOK MARK, THE STATUS OF PRINTER SHOULD SHOW (PRINTER READY) AS SHOWN IN THE IMAGE.**



➤ **STEP 2: RIGHT CLICK THE MOUSE SELECT PRINTING PREFERENCE, PRINTER PROPERTY WINDOW WILL BE OPENED.**

- **THE PRINTER SHOULD BE SELECTED BOTH SIDE.**
- **CARD ORIENTATION – POTRAIT.**
- **CLICK APPLY AFTER SELECTING THE OPTIONS.**





STEP 3: SELECT CARD FRONT OPTION

- SELECT COLOUR FORMAT YMCK.
- SELECT PRINT OVERCOAT. .
- CLICK APPLY AFTER CHANGING THE SETTINGS IN CARD FRONT OPTION.






STEP 4: SELECT BLACK OPTION IN CARD FRONT.

➤ REMOVE THE RIGHT MARK FROM PICTURE USING YMC ONLY.


➤ LATER CLICK OK THAN APPLY.

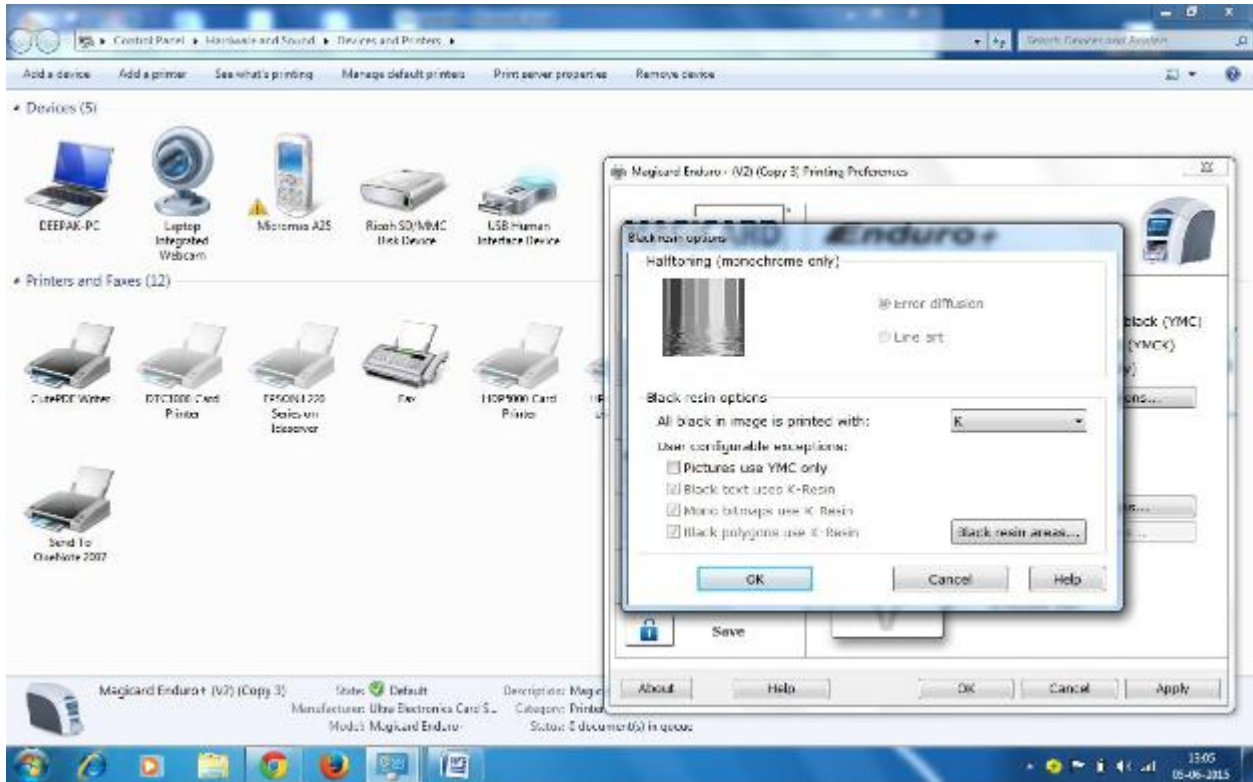



STEP 5: SELECT CARD BACK

- IN COLOUR FORMAT SELECT MONOCROME (K ONLY).
- RIGHT CHECK PRINT OVERCOAT.
- AFTER CHANGING THIS CHICK ON APPLY.

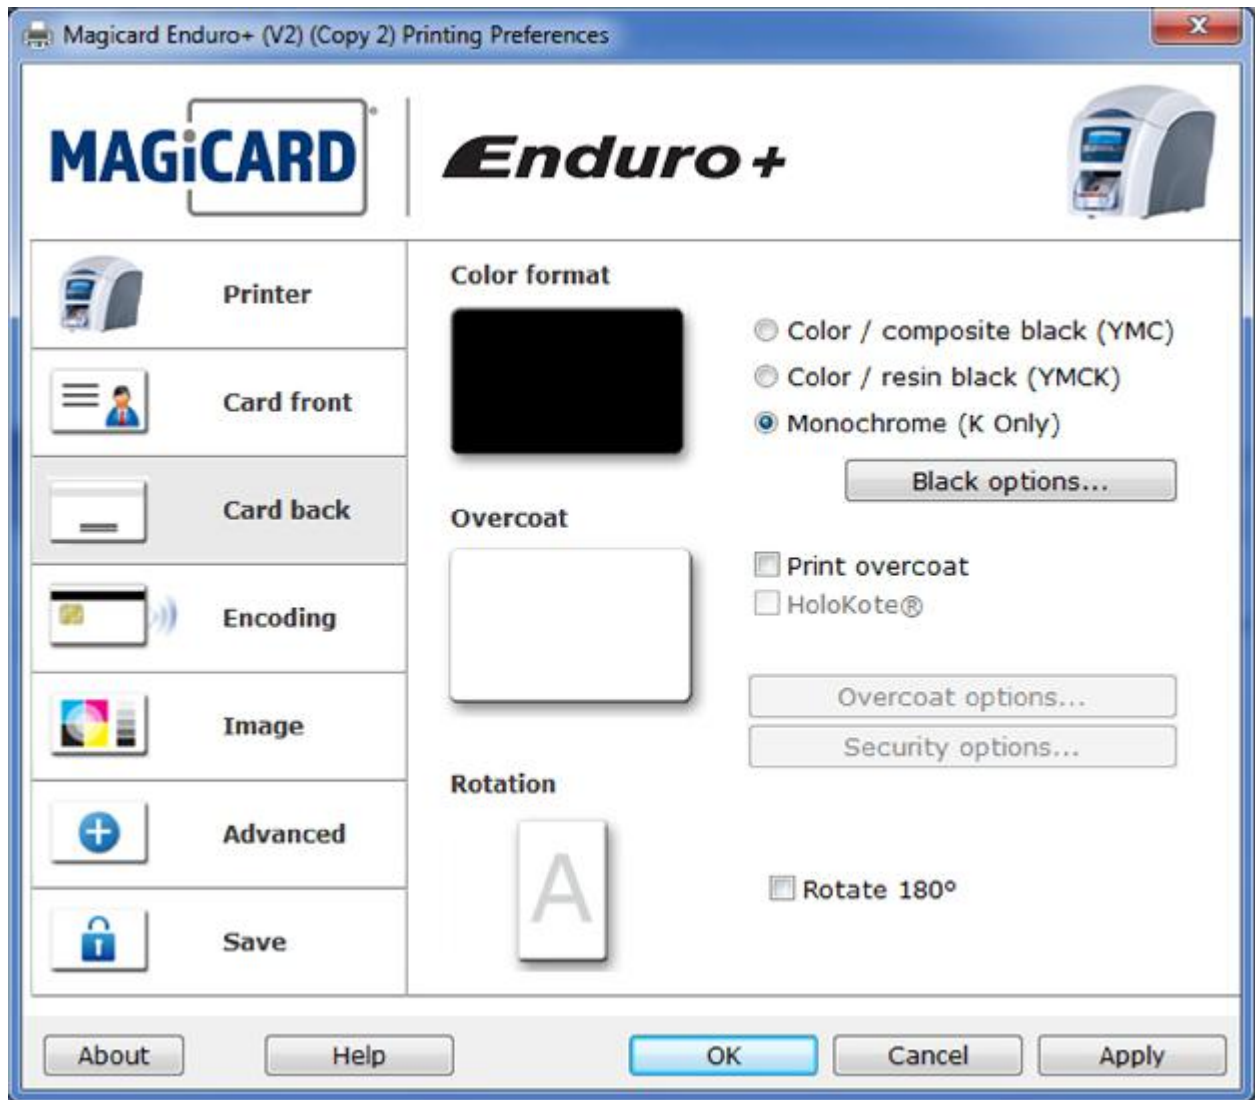



STEP 6: SELECT IMAGE OPTION

➤ COLOUR CORRECTION - SELECT COLOUR MANAGEMENT(BUILT -IN-TO-DRIVE) .

➤ RESIGN QUALITY-HIGH QUALITY.

➤ AFTER SELECTING THIS SETTINGS CLICK APPLY.





AADHAR SETTINGS – EKYC


➤ **STEP 1: GO TO PRINTING PREFERENCES TAKE THE MOUSE ARROW MARK ON THE PRINTER BOOK MARK, THE STATUS OF PRINTER SHOULD SHOW (PRINTER READY) AS SHOWN IN THE IMAGE.**





→S

STEP 2: RIGHT CLICK THE MOUSE SELECT PRINTING PREFERENCE, PRINTER PROPERTY

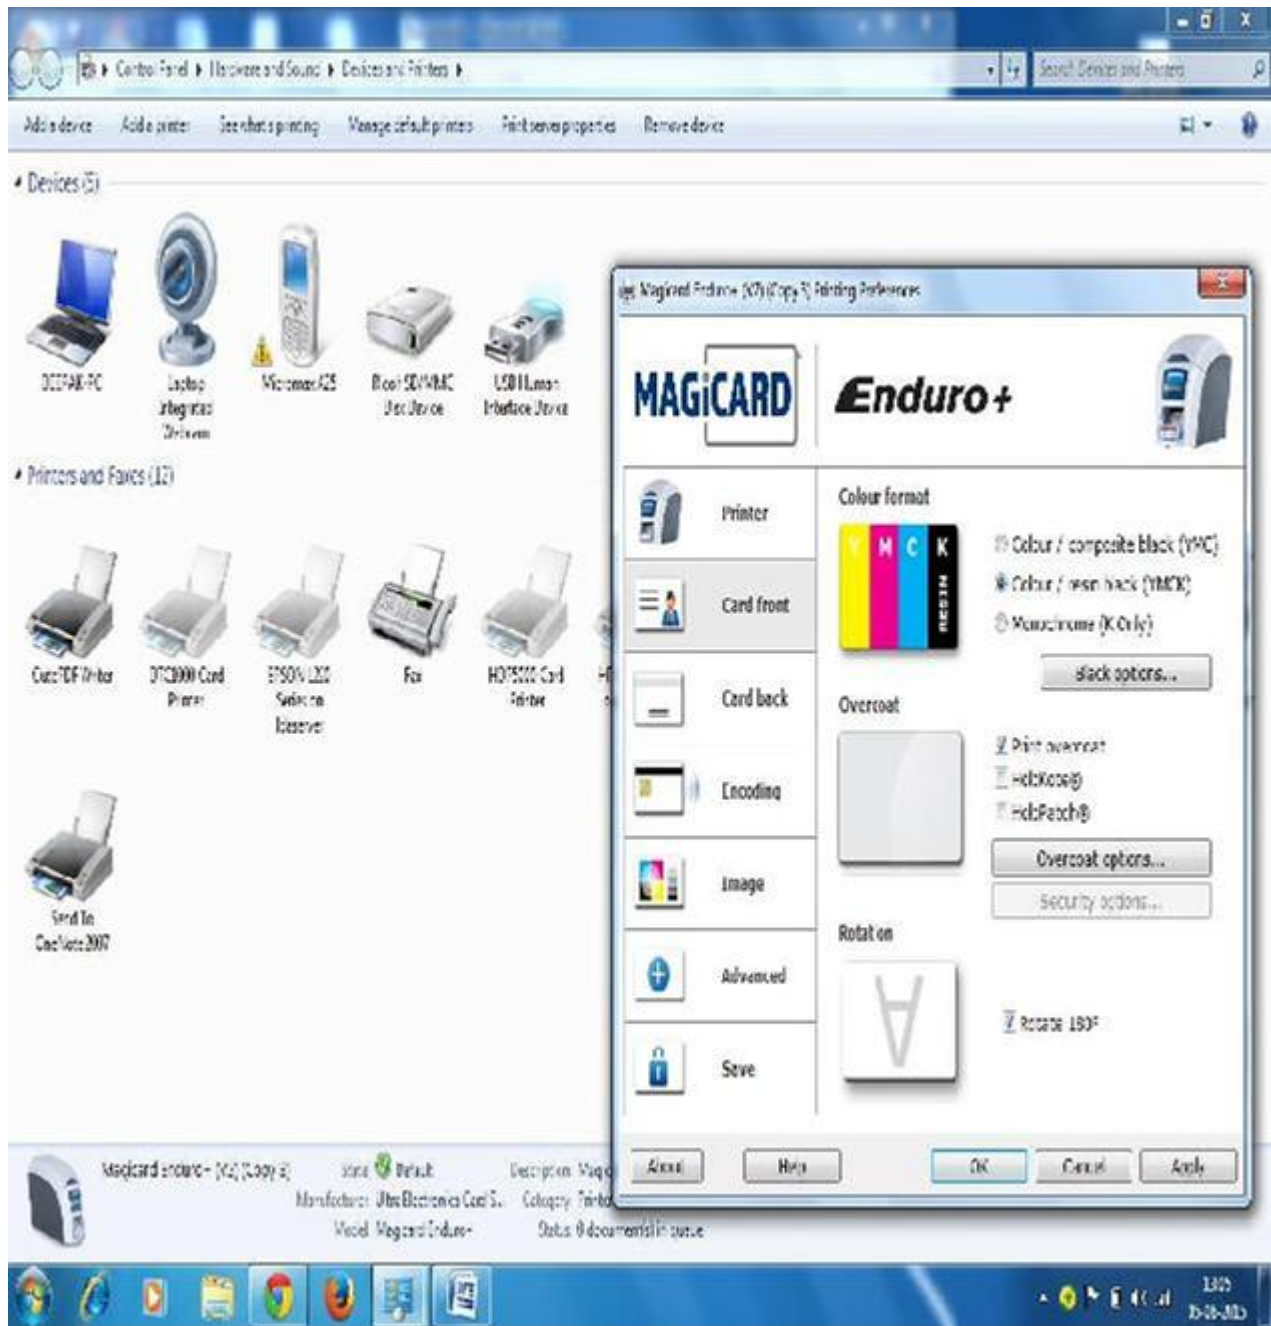



WINDOW WILL BE OPENED.


➤ **THE PRINTER SHOULD BE SELECTED BOTH SIDE.**

➤ **CARD ORIENTATION – LANDSCAPE.**

➤ **CLICK APPLY AFTER SELECTING THE OPTIONS**

STEP 3: SELECT CARD FRONT OPTION

➤ **SELECT COLOUR FORMAT YMCK.**

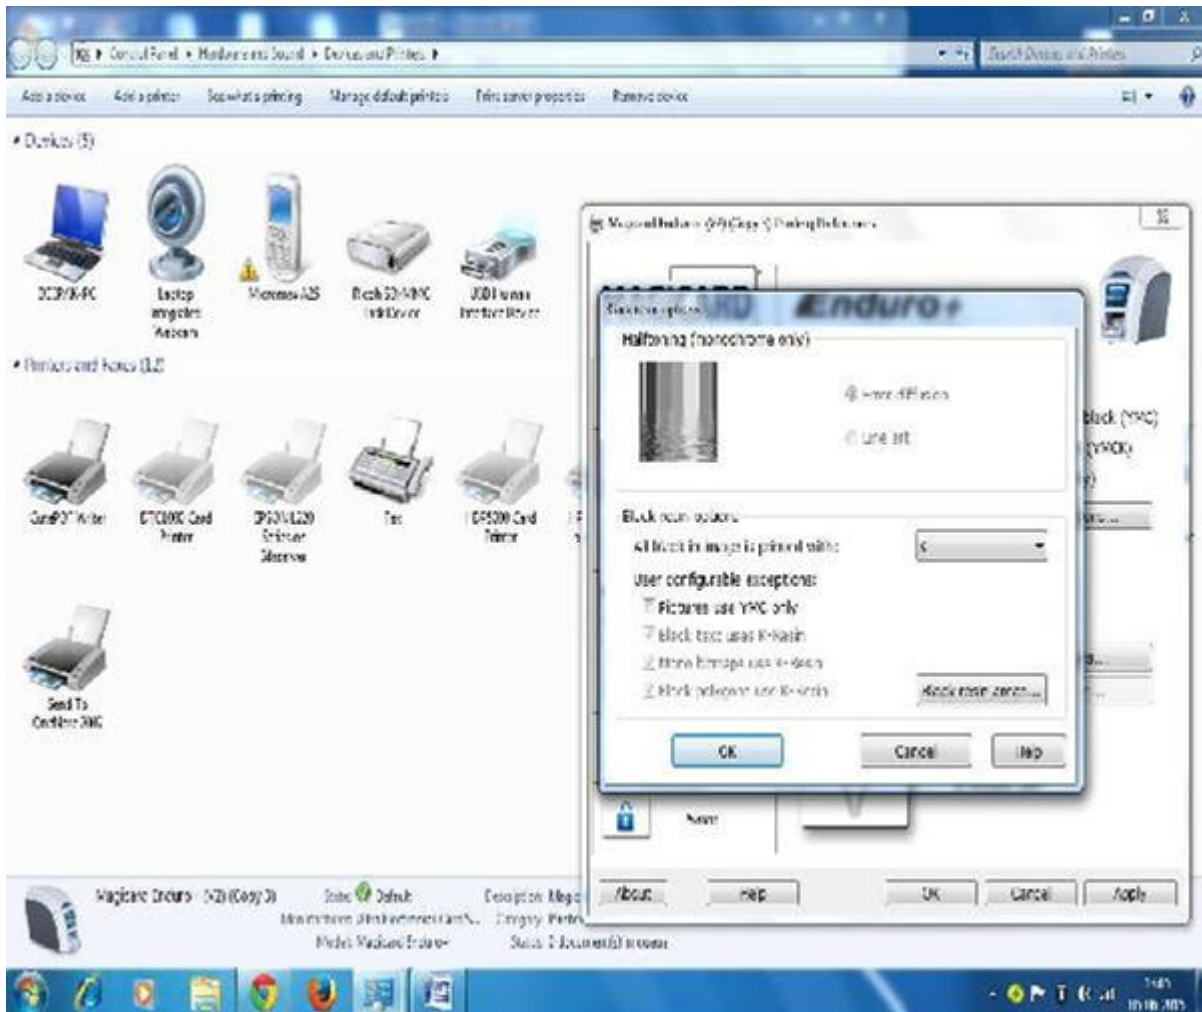




- SELECT PRINT OVERCOAT. ➤ SELECT ROTATE 180.
- CLICK APPLY AFTER CHANGING THE SETTINGS IN CARD FRONT OPTION.

STEP 4: SELECT BLACK OPTION IN CARD FRONT.

- REMOVE THE RIGHT MARK FROM PICTURE USING YMC ONLY.
- LATER CLICK OK THAN APPLY.

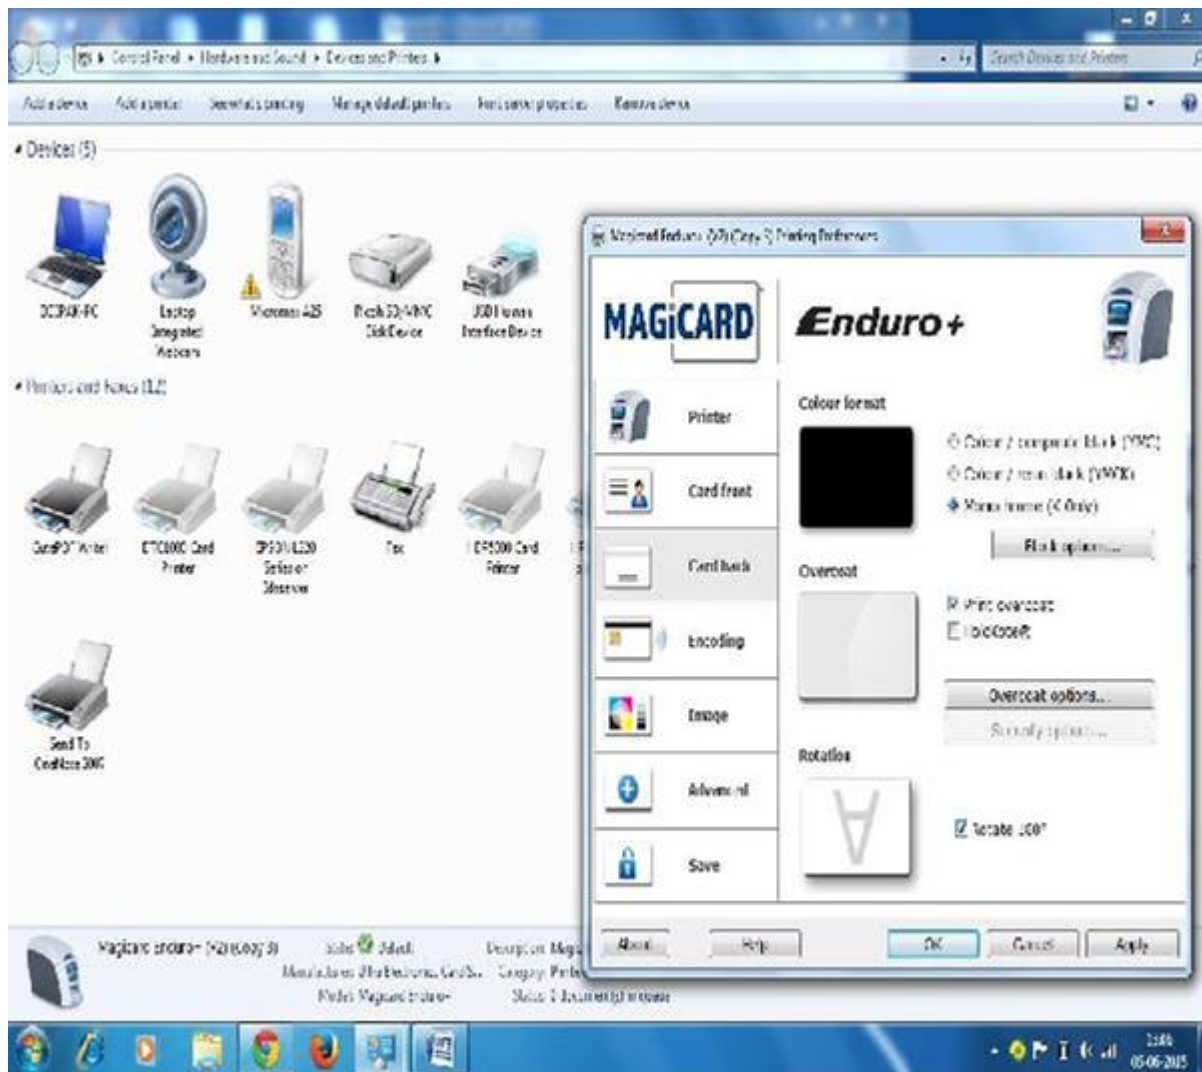



STEP 5: SELECT CARD BACK

➤ IN COLOUR FORMAT SELECT MONOCROME (K ONLY).

➤ RIGHT CHECK PRINT OVERCOAT. ➤ RIGHT CHECK ROTATE 180*.

➤ AFTER CHANGING THIS CHICK ON APPLY.





STEP 6: SELECT IMAGE OPTION

- **COLOUR CORRECTION - SELECT COLOUR MANAGEMENT(BUILT-IN-TO-DRIVE) .**
- **RESIGN QUALITY-HIGH QUALITY.**
- **AFTER SELECTING THIS SETTINGS CLICK APPLY.**

.

