

CHAPTER 9

USING THE LX20 LRC REMOTE

The hand-held LRC remote provides the following functions:

- **Transport functions:** Rewind, Fast Forward, Stop, Play and Record.
- **Autolocation functions:** Locate 1, Locate 2, Locate 3, Locate 4, Set Locate, and Auto Loop
- **Track functions:** Auto Record and Rehearse.

All buttons work the same as the front panel controls. If connected to the master LX20 in a multiple ADAT system, the LRC can control the entire chain of ADATs.

The AUTO LOOP button, which does not exist on the LX20 front panel, toggles both the Auto Play and Auto Return functions on and off simultaneously.

Note: To enable the Auto Play function by itself without the Auto Return function (i.e. without looping), initiate a deferred play with the Play button — that is, press any of the LOCATE 1 – LOCATE 4 buttons followed by the PLAY button.

To use the LX20 Remote, plug it into the LRC/PUNCH jack. If you want to use a footswitch too, see the adapter described in Chapter 1.

