

INDEX

- ABS/REL Button 15, 35
- Absolute Time 35, 48
- ADAT 55, 59, 63-65
- AI-1 61
- AI-2 69
- All Input 39
- Analog Recording 71
- Auto Input 39
- Auto Play 19, 50
- Auto Record 20, 50-51
- Auto Return 19, 50
- Autolocation 48
- Backup 60
- Bandwidth 72
- BRC 52, 68
- Chase 34
- Clock 44, 61, 69
- Copying Tapes 60
- Crossfade Time 45
- Cue 42
- Data 30
- Digital Clock 61
- Digital Input 59
- Digital Recording 41, 71
- Display 32
 - Icons 33
- Drum Time 75
- Edit Value 36
- Eject 42
- Error Codes 79
- Error Rate 74
- Fast Forward 42
- Footswitches 28, 53
- Formatting 14, 29-31
 - Complete 30
 - Extend 31
 - Recording while 30
- Head Cleaning 74-76
- ID 34, 56
- Inputs
 - Balanced 24
 - Digital 27
 - Monitor 39
 - Select 37-38
 - Unbalanced 23
- Lead 30
- Locate 48
- Locate Reference 69
- Locked 34, 57
- Loop 19
- LRC Remote 28
- Meters 40
- MIDI 69
- Multiple ADAT System
 - Formatting 56
 - Master 55
 - Slave 55
 - Optical 27
 - Outputs
 - Balanced 24
 - Digital 27
 - Unbalanced 23
 - Peak Clear 40
 - Peak Mode 40
 - Phase 64
 - Pitch 21, 45-46
 - Play 17, 43
 - Power 7, 13
 - Punch In/Out 43, 44
 - Record 43
 - Re-initializing 74
 - Record Crossfade Time 45
 - RECORD ENABLE Buttons 15, 41
 - Recording 16
 - Analog 37, 71
 - Bouncing 38, 59
 - Digital 37, 41, 71
 - Live 68
 - Track Copy 38
 - While formatting 30
 - Rehearse 51
 - Relative Time 35, 48
 - Review/Rewind 42
 - S-VHS 11, 68, 72
 - Sample Rate 44, 69
 - Set Locate 35
 - Signal Level 41
 - Software Version 75
 - Stop 44
 - Sync 26, 55
 - Tape Length 47, 68
 - Threaded 11, 42, 44
 - TIME Counter 13, 15
 - Track Copy 38
 - Track Delay 47
 - Transport 15, 42-44, 63
 - Unthreaded 11, 42, 44
 - Video 69
 - Write protect 29
 - s and t buttons 36

