

FOREWORD

ELECTRIC STARTER

MAINTENANCE

DRIVE/TRANSMISSION

CHASSIS

ELECTRICAL

ENGINE

1997 INFO

FUEL SYSTEM

APPENDIX

BACK TO MAIN MENU

Buell[®]
AMERICAN MOTORCYCLES



MAINTENANCE

General	1-1	Rear Preload Adjustment	1-23
1996 S1-Lightning Specifications	1-5	Suspension	1-24
Side Views	1-6	Front Fork	1-25
Fluid Requirements	1-8	Spark Plugs	1-27
Regular Maintenance Intervals (table)	1-9	Air Cleaner Filter	1-28
Battery	1-13	Carburetor	1-29
Engine Lubrication System	1-15	Ignition Timing	1-30
Brakes	1-17	Vacuum-Operated Electrical Switch (V.O.E.S.)	1-32
Tires and Wheels	1-18	Handlebars	1-33
Clutch	1-19	Headlamp	1-34
Rear Belt Deflection	1-21	Storage	1-35
Primary Chain	1-22	Troubleshooting	1-36



CHASSIS

Specifications	2-1	Swingarm	2-33
Tire Specifications	2-4	Rear Shock Absorber	2-36
Vehicle Identification Number	2-5	Suspension Theory	2-38
Wheels	2-6	Suspension Adjustments	2-39
Front Wheel	2-8	Throttle Control	2-43
Rear Wheel	2-11	Clutch Control	2-44
Checking Cast Rim Runout	2-14	Speedometer and Tachometer	2-46
Tires	2-15	Handlebars	2-49
Brakes	2-18	Exhaust System	2-50
Front Brake Master Cylinder	2-19	Footrests	2-52
Front Brake Caliper	2-20	Sprocket Cover	2-53
Front Brake Line	2-22	Fenders	2-54
Rear Brake Master Cylinder	2-23	Tail Section	2-55
Rear Brake Caliper	2-25	Windscreen	2-56
Rear Brake Line and Switch	2-27	Seat	2-57
Front Fork	2-28	Side Stand	2-58
Fork Stem and Bracket Assembly	2-32		



ENGINE

Specifications	3-1	Oil Pressure Signal Light Switch	3-31
Engine	3-5	Crankcase Breathing System	3-32
Stripping Motorcycle For Engine Repair	3-8	Oiling System (Color Foldout)	3-33
Installing The Engine	3-10	Oil Pump	3-34
Cylinder Head	3-11	Oil Filter Mount	3-37
Cylinder and Piston	3-22	Valve Tappets	3-38
Lubrication System	3-28	Gearcase Cover and Cam Gears	3-40
Oil Hose Routing	3-29	Crankcase	3-48
Oil Tank	3-30		



FUEL SYSTEM

Specifications	4-1	Fuel Tank	4-20
Carburetor	4-2	Fuel Supply Valve	4-22
Air Cleaner	4-18	Evaporative Emissions Control-California Models	4-23



ELECTRIC STARTER

Specifications	5-1	Starter System Testing	5-10
Electric Starter System	5-2	Starter	5-11
Diagnostics/Troubleshooting	5-9	Starter Solenoid	5-18



DRIVE/TRANSMISSION

Specifications	6-1	Transmission Case	6-16
Primary Chain	6-3	Shifter Forks and Drum	6-18
Secondary Drive Belt	6-6	Mainshaft and Countershaft	6-20
Clutch	6-8	Main Drive Gear	6-26
Clutch Release Mechanism	6-9	Access Door Bearings	6-28
Primary Drive/Clutch	6-10	Right Transmission Case Bearings	6-29
Transmission	6-14	Transmission Installation and Shifter Pawl Adjustment .	6-30



ELECTRICAL

Specifications	7-1	Battery	7-32
Ignition System	7-3	Headlamp	7-33
Vacuum-Operated Electrical Switch (V.O.E.S.)	7-10	Tail Lamp	7-35
Ignition/Headlamp Switch	7-11	Turn Signals	7-37
Ignition Module	7-13	Turn Signal Flasher	7-38
Ignition Sensor Plate and Rotor	7-14	Handlebar Switches	7-39
Ignition Coil	7-16	Horn	7-41
Spark Plug Cables	7-18	Neutral Indicator Switch	7-42
Starter Interlock	7-19	Fuses and Circuit Breakers	7-43
Charging System	7-23	Electrical Connectors	7-44
Alternator	7-29	Deutsch Electrical Connectors	7-46
Voltage Regulator	7-31	Amp Multilock Electrical Connectors	7-48



1997 INFORMATION

Maintenance	1	Electric Starter	25
Chassis	11	Drive/transmission	29
Engine	17	Electrical	31
Fuel System	19		



APPENDIX

Tools A-1 Metric Conversion B-1