


# JZA70 Connector Map 90-92

## JZA70 Male (IH1)

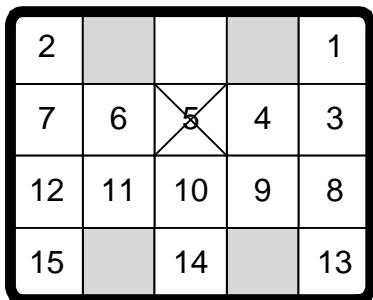

IH1 Pin		B1 Pin
1	A/C Air mix ctrl	1
2	PPS comp pin#2	B3-4
3	FP Rel & Resistor	3
4	COR pin #4	4
5	COR pin 3 JB4 A/T	5
6	FP Relay	6
7	COR pin #2 JB4	7
8	CC clutch SW M/T	8
9	IGN FL & SRS	9
10	Starter relay JB4 #4 COR JB4 #3	10
11	A/C Amplifier	11
12	PPS comp pin#5	B3-10
13	A/C AMP L1 pin #8	13
14	IG SW IG2	14
15	CC ECU (A/T) + ECT ECU	15

## MA71 Male (B1)

