



Index

Symbols

2x zoom, 4

3x zoom, 4

A

accessories

camera strap, 10

connections, 10

external flash, 9

filters (see filters)

action shots, 78–81

burst mode, 80

fast shutter speed, 79

infinity lock, 80

lighting, 79

motion blur, 81

panning, 80

presetting focus, 80

shutter lag, 79

stopping action, 79

advanced features

defined, 2

diopter adjustment, 6

exposure meter, 12

hot shoe, 9

image sensor, 14

infrared sensor, 3

LCD information screen, 9

lens ratings, 5

mode dial, 9

picture-taking lens, 4

remote releases, 10

speaker port, 10

alkaline AA batteries, 11

aperture

lens, 5

maximum, 5

aperture (f-stop) settings, 20

sunset and astrophotography,

104

Aperture Priority (see Aperture Value)

Aperture Value (AV), 20, 103

Apple Computer's iPhoto, 97

aquarium, shots in, 81

architecture, 83–85

archiving images, 99

astrophotography exposure, 104

audio

playback, 10

recording, 3

autoexposure, 48

(see also programmed exposure)

auto flash setting, 36

B

backgrounds

action shots, 81

busy, 64

- backgrounds (*continued*)
 - depth-of-field settings, 20
 - self-portraits, 69
 - soft, 65
 - outdoor portraits, 21
 - various, flash mode settings, 102
 - wedding pictures, 75
 - back of camera, 5–8
 - basic features
 - batteries, 11
 - camera strap, 10
 - center-weighted metering, 13
 - computer connection, 10
 - confirmation light, 6
 - defined, 2
 - display on/off button, 6
 - evaluative meter pattern, 13
 - exposure meter, 12
 - flash, 3
 - image sensor, 14
 - LCD monitor, 7
 - lens ratings, 5
 - menu button, 7
 - mode switch, 7
 - picture-taking lens, 4
 - self-timer, 18
 - set (confirmation) button, 7
 - shutter button, 9
 - trash button, 8
 - batteries, 11
 - blackboard effect, 45
 - black and white, 45
 - blinking indicator lights, 6
 - blink at flash, people who, 92
 - bottom and sides of camera, 10
 - bright conditions, 53
 - burst mode, 20–22, 80
 - busy backgrounds, 64
 - buttons
 - directional (jog dial), 7
 - flash menu, 19
 - set (confirmation), 7
 - shutter, 9
 - trash (see trash button)
 - buying cameras, 2, 6
- C**
- cameras
 - back, 5–8
 - buying (see buying cameras)
 - front, 2–5
 - inside, 11–18
 - modes, 103
 - point-and-shoot (see point-and-shoot cameras)
 - strap, 10
 - top, 8
 - camera shake, 23, 78, 81
 - Canon G1 and G2, 91
 - center-weighted metering, 13, 104
 - children photography, 53, 70
 - close-up shots, 23–25
 - example, 24
 - cloudy, 55
 - color correction filters, 54
 - color saturation, enhanced, 48
 - color temperature chart in Kelvin, 105
 - CompactFlash (CF) card, 15
 - composition, 25–27
 - group shots, 65
 - landscape, 26
 - triangle, 66
 - (see also backgrounds)
 - compression setting, 27–28
 - computer connection, 10
 - computer tips and tricks, 92–99
 - archiving images, 99
 - digital slideshows, 96–97
 - email, sending pictures via, 92–95
 - prints, photo-quality, 95–96
 - RAW files, 97–99
 - confirmation button, 7
 - confirmation light, 6

connection ports, 10
continuous shooting mode,
20–22
controls, 19–57
(see also buttons)
converging lines, 83

D

daylight, 55
decisive moment, capturing, 23
deleting images, 29–30
depth of field settings, 20
digital slideshows, 96–97
digital zoom, 29
diopter adjustment, 6
directional buttons, 7
display on/off button, 6

E

effects, photo, 45–48
email
 sending pictures via, 15,
 92–95
Erase All command, 29
Erase All Pictures command, 39
erasing images, 29–30
establishing shot, 72
evaluative metering, 104
evaluative meter pattern, 13
EXIF file format, 34
exposure
 compensation, 35
 reference guide, 101
 scale, 30–32
 lock, 33–34
 meter, 12–14
 metering, 34
 settings
 manual, 42
 starting points for sunset and
 astrophotography, 104
external flash, 9

F

f-stop (see aperture (f-stop)
settings)
faces, 64
fast shutter speed, 79
features
 advanced (see advanced
 features)
 basic (see basic features)
 intermediate (see intermedi-
 ate features)
file format, 34
fill flash, 36, 65
film speed (see ISO speed)
filters
 color correction, 54
 Hoya R72, 90
 infrared, 91
 IR 87, 90
 polarizing, 89
 softening, 47
FireWire connection, 10
fixed focal length lens, 5
flash, 3
 compensation, 35
 deciding when to use, 38
 external, 9
 fill, 65
 indoor shots, 67
 menu button, 19
 modes (settings), 35–37
 outdoor shots, 61
 people who blink at, 92
 settings, 102
flash modes (settings), 103
flower icon, 23
fluorescent lights, 55
 white balance setting, 102
focus assist light, 3
focus lock, 38
 photographing children, 71
Format Card command, 29
Format Memory Card, 39
front of camera, 2–5

G
grayscale image, 45
group shots, 65–67
 stepladders and, 66

H
harsh lighting, 67
highly compressed, 27
high contrast, 67
high resolution, 27, 78
hot shoe, 9
Hoya R72 filter, 90
human tripod, 44

I
IBM MicroDrive card, 15
images, erasing, 29–30
image noise, 41
image quality setting, 27–28
image sensor, 14
indoor shots
 flash, 67
 museums, 81–83
infinity lock, 40, 80
infrared photography, 90–91
infrared sensor, 3
inside camera, 11–18
intermediate features
 defined, 2
 evaluative meter pattern, 13
 exposure meter, 12
 focus assist light, 3
 image sensor, 14
 lens ratings, 5
 mass storage USB, 17
 microphone port, 3
 multifunctional jog dial, 7
 optical viewfinder, 7
 optical viewfinder lens, 3
 picture-taking lens, 4
 RAM buffer, 17
 spot meter pattern, 14
 video out connection, 18
 zoom/magnify lever, 9

iPhoto, 97
IR 87 filter, 90
ISO speed, 40

J
jog dial buttons, 7
JPEG files, 27, 34, 95
 versus RAW files, 97
 white balance and, 98

K
Kelvin color temperature
 scale, 55

L
landscape composition, 26
landscape photography, 20,
 87–89
LCD information screen, 9
LCD monitors, 7
 problem with, 57
lenses
 aperture of, 5
 fixed focal length, 5
 optical viewfinder, 3
 picture-taking, 4
 ratings, 5
lens flare, 89
lighting
 action shots, 79
 exposure compensation
 reference guide, 101
 faces, 64
 flash usage outdoors, 61
 focus assist light, 3
 harsh, 67
 overcast days, 61
 rim, 65
 side, 86
 sunlight, 64
lights
 fluorescent, 55
 white balance setting, 102
 streaking (see motion blur)

- tungsten, 55
 - white balance setting, 102
- Lithium-ion batteries, 12
- low resolution, 27
- low sharpening, 47

M

- macro mode (see close-up shots)
- macro photography, 23
- magnification, increased, 23
- magnify control, 56
- manual exposure setting, 42
- manual mode, 42, 103
- mass storage USB, 17
- measuring light, 13
- medium resolution, 27
- megapixels, 15
 - pictures for web, 15
 - to print size reference, 105
- memory cards, 10, 15–18
 - digital slideshow, 96
 - Erased All command, 48
 - Erase All Pictures command, 39
 - Format Memory Card command, 39
 - LCD information screen, 9
 - loading, 10
 - making space on, 29
 - Movie Mode, 43
 - number of pictures capacity, 105
 - Protect Images option, 48
 - RAW files, 35
 - recommended and minimum, 16
 - resolution, 49
 - spare, 72
 - starter, 16
 - trash button, 8
- menu button, 7
- menu option, 20
- metadata, 34
- metering modes, 104

- meter modes, 13
- microphone port, 3
- minimally compressed, 27
- Mode Dial, 20
- mode dial, 9
- mode switch, 7
- moon exposure, 104
- motion blur, 53, 81
- movie mode, 4, 103
- Movie Mode setting, 43
- multifunctional jog dial, 7
- MultimediaCard (MMC) card, 15
- museum, shots in, 81–83

N

- natural habitat parks, shots in, 81
- nighttime mode, 37, 103
- NiMH batteries, 11
- numbers on the barrel of the lens, 4

O

- Olympus C-5050 camera, 16
- on-screen menu, 7
- optical viewfinder, 7
 - lens, 3
 - adjusting, 6
- optical zoom, 29
- outdoor shots
 - children playing, 53
 - flash mode setting, 102
 - flash usage, 61
 - flower, 24
 - landscapes, 87–89
 - landscape composition, 26
 - manual exposure settings, 42
 - overcast days, 61
 - running water, 53
 - soft background, 21
 - sports events, 52
 - tips and tricks, 60–65
 - white balance settings, 102
- overexposing, 48

P

- panning, 80
- panorama mode, 44, 103
- partial metering, 45, 52
 - (see also spot metering)
- patterns for measuring light, 13
- photo-quality prints, 95–96
- Photoshop Elements, 44
- photo effects, 45–48
- picture-taking lens, 4
- pixels, 14
- point-and-shoot cameras, 38, 77
 - architectural photography, 83–85
 - flash settings, 102
- polarizing filter, 89
- ports for connections, 10
- prints, photo-quality, 95–96
- Programmed Auto (P), 103
- programmed exposure, 48
 - autoexposure metering, 34
- Protect Images option, 48

Q

- quality of the image, 27
- quality ranges, common, 15
- quick-reference guide, 101–106
- QuickTime Pro, 43

R

- RAM buffer, 17, 21
- RAW files, 97–99
 - versus JPEG files, 97
 - white balance and, 98
- RAW resolution setting, 28
- red eye
 - preventing, 77
 - reduction, 36
- reflections, 82
- reflectors
 - indoor shots, 68
 - outdoor shots, 61
- remote releases, 10
- resampling, 95

- resolution, 27, 49
- running water, 53

S

- sampling down images, 92
- Secure Digital (SD) card, 15
- self-portraits, 68–70
- self-timer, 18, 50
- sensor, image, 14
- sepia toned, 47
- sequence shooting (see burst mode)
- set button, 7
- shutter
 - button, 9
 - lag, 22, 40, 79
 - priority (see Timed Value)
 - release delay, 18
 - speed
 - fast, 52, 79
 - slow, 52
 - sunset and
 - astrophotography, 104
- side lighting, 86
- single erase, 29
- slideshows, 96–97
- slow-synchro flash, 37
 - self-portraits, 70
- SLR format standard, 15
- SmartMedia (SM) cards, 15
- snow setting, white balance
 - setting, 102
- softening filter, 47
- softening subject outlines, 47
- soft background in outdoor
 - shots, 21
- Sony Memory Stick (MS) card, 15
- sound recording, 3
- speaker port, 10
- sporting events, 52, 78
- spot metering, 14, 52, 104
- starter memory cards, 16
- steadying shots, 82
 - (see also tripods)

- stepladders and group shots, 66
- stopping action, 79
- strap, camera, 10
- streaking lights, 53
- sunglasses, using with camera, 53
- sunset/sunrise shots

- exposure starting points, 104
 - white balance setting, 102

T

- tabletop photography, 86–87
- TIFF resolution setting, 28
- Timed Value (TV), 52–53, 103
- time factors, 64
- tips and tricks, 60–92
 - action shots, 78–81
 - architecture, 83–85
 - capture existing lighting, 67
 - children, 70
 - computer (see computer tips and tricks)
 - group shots, 65
 - infrared photography, 90–91
 - landscape photography, 87–89
 - museums, 81–83
 - outdoor shots (see outdoor shots)
 - panning, 80
 - people who blink at flash, 92
 - red eye, preventing, 77
 - self-portraits, 68–70
 - sporting events, 78
 - tabletop photography, 86–87
 - travel locations, 72–73
 - weddings, 75
- top of camera, 8
- trash button, 8, 29
- travel locations, 72–73
- triangle composition, 66
- tripods
 - human, 44
 - indoor shots, 68
 - landscape photography, 88

- socket, 10
 - when to use, 23
- tungsten light, 54
 - white balance setting, 102

U

- underexposing, 30, 45
- USB
 - cable, 10
 - mass storage, 17

V

- video clips, 43
- video out connection, 18
- viewfinder, optical (see optical viewfinder)
- vivid color, 48

W

- web, pictures for, 28
 - file format, 34
 - megapixel range, 15
 - Movie Mode, 43
 - resolution, 27, 49
- weddings, 75
 - flash mode setting, 102
- whiteboard effect, 48
- white balance, 54–55, 81
 - auto, 54
 - JPEG files and, 98
 - settings, 102
 - tabletop photography, 86
 - winter setting, white balance setting, 102

X

- xD-Picture Card, 15

Z

- zoom, digital, 29
- zoom/magnify lever, 9
- zooming range, 4
- zoom control, 56