
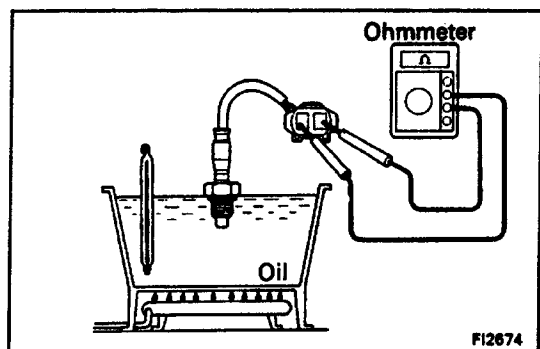


# EGR GAS TEMPERATURE SENSOR

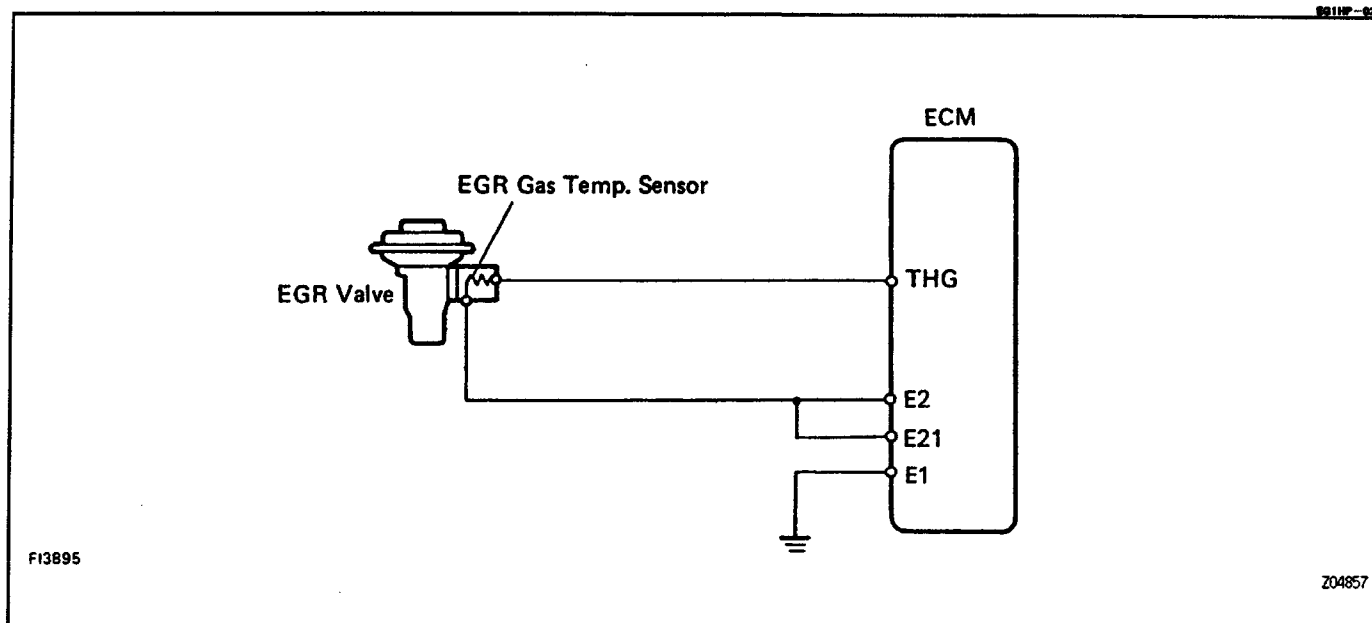

## EGR GAS TEMPERATURE SENSOR INSPECTION

### MEASURE RESISTANCE OF EGR GAS TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between both terminals.

#### Resistance:

At 50°C (122°F): 64 – 97 k $\Omega$

At 100°C (212°F): 11 – 16 k $\Omega$

At 150°C (302°F): 2 – 4 k $\Omega$

If the resistance is not as specified, replace the sensor.