



 
 
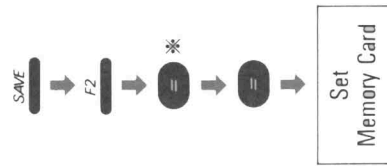
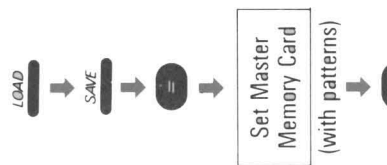
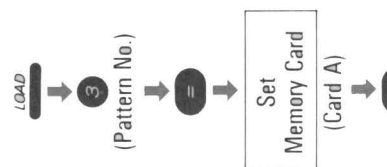
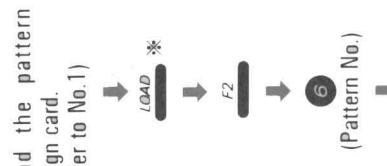
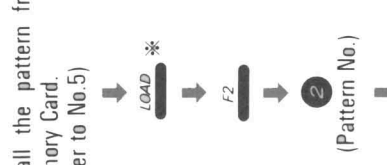
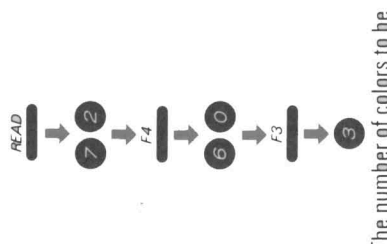


HOW TO USE PE1

<p>1. To read a pattern on design card. Ex. 50 rows/38 sts.</p>	 <p>(Inspection Switch ON) → (Set design card) → (Inspection Switch OFF) → =</p> <p>* Always set the pattern width indicator to 60 when using PE1.</p>	<p>2. To knit using PE1 or to confirm a pattern. Ex. To recall 8th pattern.</p>	 <p>* You can change between the pattern and the row number by pressing = key.</p>	<p>3. To format a Memory Card or to erase all patterns.</p>	 <p>* To abandon the erase, press C key here.</p>	<p>4. To store a pattern into a Memory Card.</p>	 <p>* Display shows the reference number of the stored pattern.</p>	<p>5. To recall a pattern from a Memory Card. Ex. To recall 8th pattern.</p>	 <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>	<p>6. To see how many patterns are in Memory Card.</p>	 <p>* Display shows the number of stored patterns.</p>
<p>* Use C key if...</p> <ol style="list-style-type: none"> 1. You make a mistake. (You can delete the last entry, one character at a time.) 2. You want to stop PE1 from reading a pattern. 3. PE1 doesn't work whatever key you press. 4. Display doesn't show OK sign when you want to READ, KNIT, SAVE or LOAD. <p>* The pattern read into PE1 is not erased by pressing C key.</p>											

<p>7. To erase the last pattern stored in Memory Card.</p>	 <p>SAVE → F2 → [=] → [=] → Set Memory Card → [=]</p>	<p>* To abandon the erase, press C key here.</p>
<p>8. To copy all patterns from Memory Card to another Memory Card.</p>	 <p>LOAD → SAVE → [=] → Set Master Memory Card (with patterns) → [=] → Set Memory Card → [=]</p>	
<p>9. To copy one pattern from Memory Card to another Memory Card. Card A → Card B</p>	 <p>LOAD → 9 (Pattern No.) → [=] → Set Memory Card (Card A) → [=] → [=] → SAVE → [=] → Set Memory Card (Card B) → [=]</p>	<p>* Display shows the reference number of the stored pattern.</p>
<p>10. To combine patterns from design card and Memory Card.</p>	 <p>LOAD * → F2 → 6 (Pattern No.) → [=] → Set Memory Card → [=]</p>	<p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>
<p>11. To combine patterns from Memory Card.</p>	 <p>LOAD * → F2 → 2 (Pattern No.) → [=] → Set Memory Card → [=]</p>	<p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>
<p>12. To read for Multi-Colored Jacquard. Ex. 72 rows/60 sts. 3 colored Jacquard.</p>	 <p>READ → 7 → F4 → 60 → F3 → 3 (The number of colors to be used in one row.)</p>	<p>(Inspection Switch ON) * (Set design card for color A.) → (Inspection Switch OFF) * When the display shows "OK" sign, repeat from * for color B and C.</p>