






# SxS Memory Card / Hardware Compatibility Chart

April 2011

## IMPORTANT INFORMATION

- SxS® memory cards are shipped from factory in the FAT format.
- Please install the latest SxS device driver when using SxS memory cards with Windows PC/Mac. For details visit our website at [www.sony.com/promedia](http://www.sony.com/promedia).
- For XDCAM®/XDCAM EX™ device firmware updates, please check the website of each product
- Before recording content onto a "UDF formatted" SxS memory card with XDCAM EX series products, the SxS memory card needs to be formatted into the FAT format. If you record content onto a "UDF formatted" SxS memory card with PMW-500 or PDBK-MK1, when their file system setting is set to FAT, the same operation is needed as XDCAM EX series products. Please make a backup copy of your data onto an SxS memory card before formatting it to the FAT format.

HARDWARE	SxS-1		SxS PRO		
	SBS-32G1*1 	SBS-32G1A SBS-64G1A 	SBP-8 	SBP-16 	SBP-32 
PMW-EX1	✓ Requires firmware update v1.20 or higher for hardware.	✓ Requires firmware update v1.25 or higher for hardware.	✓		✓ Requires firmware update v1.20 or higher for hardware.
PMW-EX3	✓ Requires firmware update v1.10 or higher for hardware.	✓ Requires firmware update v1.15 or higher for hardware.	✓		✓
PMW-EX30	✓ Requires firmware update v1.20 or higher for hardware.	✓ Requires firmware update v1.20 or higher for hardware.	✓		✓
PMW-EX1R	✓	✓ Requires firmware update v1.15 or higher for hardware.	✓		✓
PMW-350	✓	✓ Requires firmware update v1.15 or higher for hardware.	✓		✓
PMW-320	✓	✓	✓		✓
PMW-F3	✓	✓	✓		✓
PMW-500 <i>Supports file systems UDF and FAT.</i>	✓*2 Media firmware upgrade is required to use in MXF mode.	✓*2	✓*2		✓*2
PDBK-MK1 <i>Supports file systems UDF and FAT.</i>	✓*2 Media firmware upgrade is required to use in MXF mode.	✓*2	✓*2		✓*2
PXU-MS240	✓*3	✓*3 Requires firmware update v1.11 or higher for hardware.	✓*3		✓*3
SBAC-US10	✓*4	✓*4	✓*4		✓*4

## REMARKS

- \*1. Media firmware update may be required. For detailed information, please refer to [www.sony.com/promedia](http://www.sony.com/promedia).
- \*2. To record content onto the SxS memory card in MXF mode, the SxS memory card needs to be formatted to UDF format before recording. Please make a backup copy of data on SxS memory card before formatting to UDF format.
- \*3. "UDF formatted" SxS memory cards cannot be used.
- \*4. To use "UDF formatted" SxS memory cards with Windows PC/Mac, SxS UDF Driver needs to be installed. For detailed information, please check the website of each product at <http://pro.sony.com/bbcs/ssr/micro-xdcam/>.