### **Quick Start Guide**





PCH-1004 / PCH-1104 7018544

# Using your PlayStation®Vita system for the first time

Welcome to your PlayStation
Vita handheld entertainment system.
To use your PS Vita system, you need the following types of card media:



Memory card for the PlayStation®Vita system

This card stores applications downloaded from PlayStation®Store, saved data from games, and other content, including your photos and music.

 


 
### PlayStation<sub>®</sub>Vita card

This card contains PlayStation®Vita format software. For some games, the PlayStation®Vita card also stores saved data and additional content.




- **Notices** Some models of the PS Vita system come with card media included. Refer to the package for content details.
- Some games may require a PS Vita memory card. Refer to the game package or online compatibility notices for details.
- · Before you insert or remove a memory card or SIM card, check that the power is off. This helps prevent data corruption or loss.





### Insert the memory card.

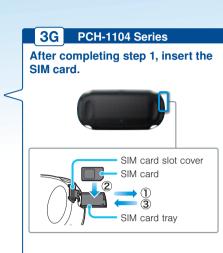



#### Turn on your PS Vita system. When turning on your system for the first time.

press and hold down the (b) (power) button for five seconds. When the power comes on, the (PS) button will light up blue once. If you need to charge the system, see "Charging" on the back of this guide.



### Begin to set up your PS Vita system.

To start making initial settings, peel the screen with your finger from the top right to the bottom left as shown in the figure on the left.

#### Touchscreen gestures



Drag Slide while touching



Tap Touch lightly and then raise your finger





#### Select your language, time zone, and the date and time.

Drag lists of items to scroll and find your choice. Tap an item to select it, and then tap [Next]. To scroll quickly, flick the list of items.



your PS Vita system to use a mobile network. With a SIM card installed, follow the on-

screen instructions to set up your PS Vita system to use a mobile network. If several APN settings are displayed or if a PIN code is required to unlock your SIM card, refer to the SIM card's manual.

To make these settings at a later time, after completing initial setup, tap 🌑 (Network Operator) on the home screen.



#### Link your PlayStation®Network\* account to your PS Vita system.

# If you already have an account

You need an Internet connection to link your PlayStation®Network account to your PS Vita system. Find a location where you can connect to a Wi-Fi access point. If you cannot connect to the Internet, you must set up your system as explained in "If you do not have an account".

- 1 Tap [Yes, I do], [Use], and then [Next].
- 2 Connect to the Internet by selecting an access point on the Wi-Fi settings screen.
- ③ Enter your PlayStation®Network account information. Tap the text entry field, and then

#### 3G PCH-1104 Series Connecting to the Internet using

a mobile network If you cannot connect to a Wi-Fi access point, close the Wi-Fi Settings screen. If the

SIM card allows Internet access without

connects to the Internet via the mobile

additional steps, your system automatically

enter text using the keyboard that appears.

# network. Refer to the manual in the SIM package for details.

## Connecting to the Internet

When an Internet connection is required, your system automatically searches for Wi-Fi access points, and then the Wi-Fi settings screen appears. For details about connecting to a Wi-Fi access point, refer to the access point documentation or contact the service provider or person who set it up.

## If you do not have an account

Set up your PS Vita system for trial use of PlayStation®Network services. To make full use of PlayStation®Network features, you must sign up for a PlayStation®Network account.

1 Tap [No, I don't], and then tap [Next]. Follow the on-screen instructions.

Access points found

## Complete initial setup.

Tap [OK] to complete initial setup of your PS Vita system. An introductory video will play. If you entered your PlayStation®Network account information in step 5, a PlayStation®Network sign-in screen appears after the introductory video. Follow the on-screen instructions to sign in.

You can change settings later from 🦲 (Settings) on the home screen.

You can access applications for the PS Vita system from the home screen.

Home screen



## learning in Welcome Park

In Welcome Park, have fun playing games while learning the basic features of your PS Vita system.



Digit Dash Test your touchscreen skills with this

Create puzzles from

your photos and

solve them.

number game. Pic-Saw



PlayStation®Network offers great online features, such as shopping at PlayStation®Store and communicating with friends.

## Use these applications when you are connected to PlayStation®Network.





PlayStation®Store access is subject to network availability.



near Take your PS Vita system outside for an adventure. Your footsteps are a treasure

Additional age restrictions may apply.



Chat with your friends all over the world any time you want.

## SONY

"是", "PlayStation", "\*\* and "心 ( ) ① ( ) " are registered trademarks of Sony Computer Entertainment Inc. "アンドス" and "LIVEAREA" are trademarks of the same company.
"SONY" and " " are registered trademarks of Sony Corporation.

Information about system functionality and images published in this document may vary from those for your PS Vita system, depending on the system software version in use. Also, the illustrations and screen images used in this guide may vary from the actual product.

©2012 Sony Computer Entertainment Inc. All rights reserved.

Design and specifications are subject to change without notice.

 


<sup>\*</sup> PlayStation®Network and PlayStation®Store are subject to terms of use and are not available in all countries and languages. See eu.playstation.com/legal for details. A wireless or mobile internet connection is required. Users are responsible for broadband internet connection fees. Users must be 7 years or older and users under 18 require parental consent. Charges apply for some content and/or services. If you are setting up the PS Vita system for a child, please use a sub-account and the parental control features.




#### Info bar


You can check the status of your PS Vita system on the info bar.



When you tap the icon for an application on the home screen, the application's LiveArea $^{\text{TM}}$  screen appears. On the LiveArea™ screen, tap the gate to start the application.

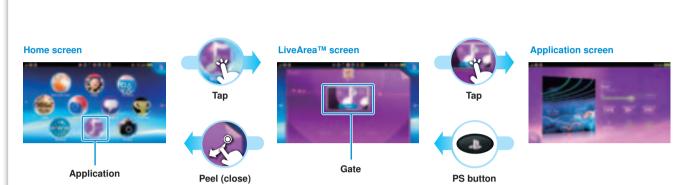

## Playing games

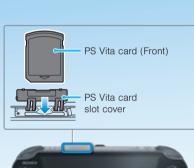



### Insert the PlayStation®Vita card.

Your PS Vita card contains PlayStation<sub>®</sub>Vita format software. When the PS Vita card is inserted, the icon for the game appears on the home screen.

Gameplay may require a PS Vita memory card. Insert a memory card before playing games.





### Downloading (purchasing) games from PlayStation®Store\*

PlayStation®Store has a wide variety of content you can't buy anywhere else, such as games, including free trial versions of the latest releases, and game add-ons that make the games you have even more fun to play. To use PlayStation®Store, you need a PlayStation®Network account, an internet connection and a memory card.



On the home screen, tap the icon for the game. The LiveArea™ screen for the game appears. If you are connected to the Internet, various details, such as the latest information about the game, appear on the LiveArea™ screen.



## **Start playing the game.**

Tap [Start] on the gate on the LiveArea™ screen.

Saving data for a game How to save data depends on the game. For details, see the instructions for the game.

If you use the saved data on the memory card or the PS Vita card on a different PS Vita system, there may be times when you cannot earn trophies or save the data. See the User's Guide for details about saved data and trophies.



## Pausing a game



Press the (PS) button to pause a game and return to the LiveArea™ screen. To resume playing the game, tap [Continue] on the LiveArea™ screen.

## **Quitting a game**




Press the (PS) button to return to the LiveArea™ screen, and then peel the screen.

## Removing the PS Vita card



Press on the PS Vita card to release it, and then remove the card. Do not remove the PS Vita card when the access indicator is blinking.

# Standby mode and turning off the power completely

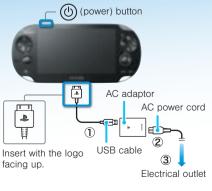

#### Turning off the screen while the application is still active (standby mode) Press the (b) (power) button.

To exit standby mode, press the 🕲 (power) button again or press the 🕒 (PS) button.

# Turning the power off completely

Press and hold the (b) (power) button for two seconds, and then tap [Power Off]. When turning on the system the next time, press and hold the (9) (power) button for two seconds.

## Charging

To charge your PS Vita system, connect it to a power source as shown in the diagram on the left. While the system is charging, the 4 (PS) button lights up orange. For details including approximate charging times, refer to the User's Guide.

# Supporting documentation for your PS Vita system

#### Safety Guide Contains precautions for the safe use of your PS Vita system,

system specifications, and service information. Before using this product, carefully read the Safety Guide and retain it for future reference.

## User's Guide

To read the User's Guide, tap [User's Guide] on the (Settings) LiveArea™ screen. An internet connection is needed to read the User's Guide. You can also read the User's Guide on a PC by visiting the following website:

eu.playstation.com/psyita/support/manuals/

## **Support Website**

eu.playstation.com/psvita/support/ Visit the Support website for additional information about using your PS Vita system and for answers to technical questions.

software updates.

**System Update Website** 

eu.playstation.com/psvita/support/system-software/ Visit the System Update website for information about PS Vita system