


Vox AC30 Troubleshooting guide

Page 1 of 2

Fault = No red mains indicator and No amber standby indicator.

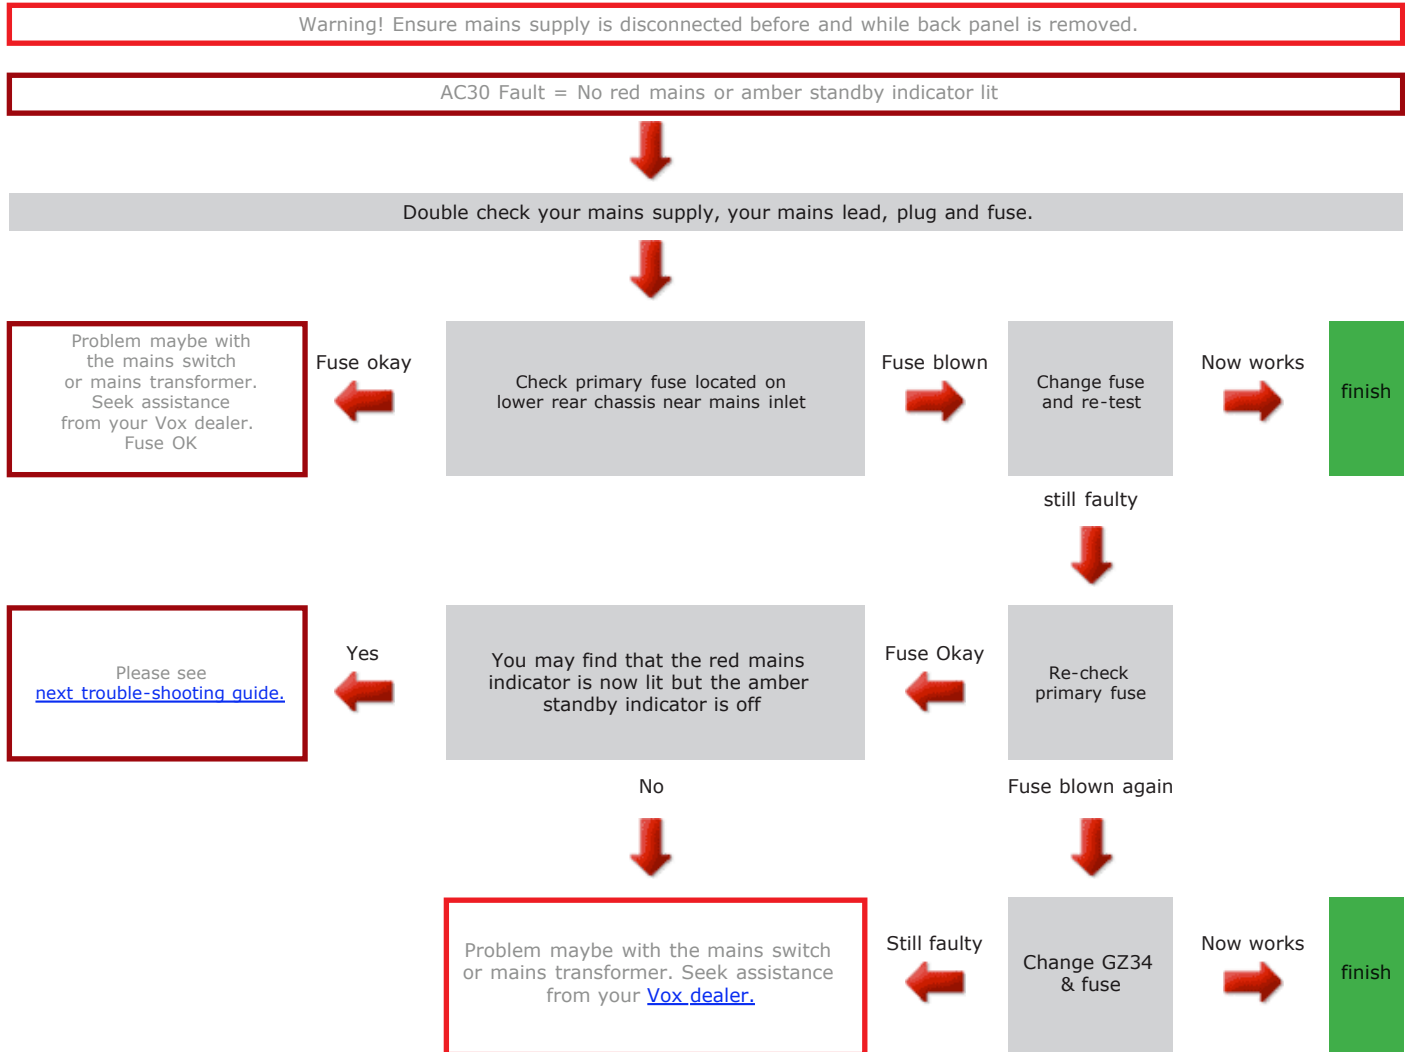


Vox AC30 Troubleshooting guide

Page 2 of 2

Fault = The red mains indicator is on, but the amber standby indicator is off.

Warning! Ensure mains supply is disconnected before and while back panel is removed

AC30 Fault = Red mains indicator is on but amber standby indicator is not lit

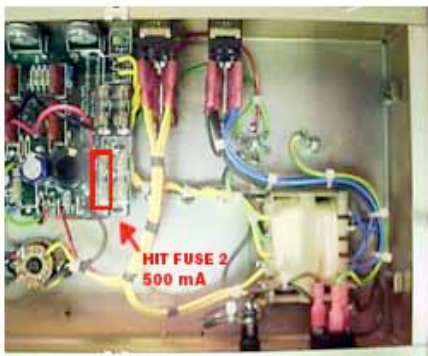

Fuse Location

