


getting to know your Fire HD 7

ENGLISH

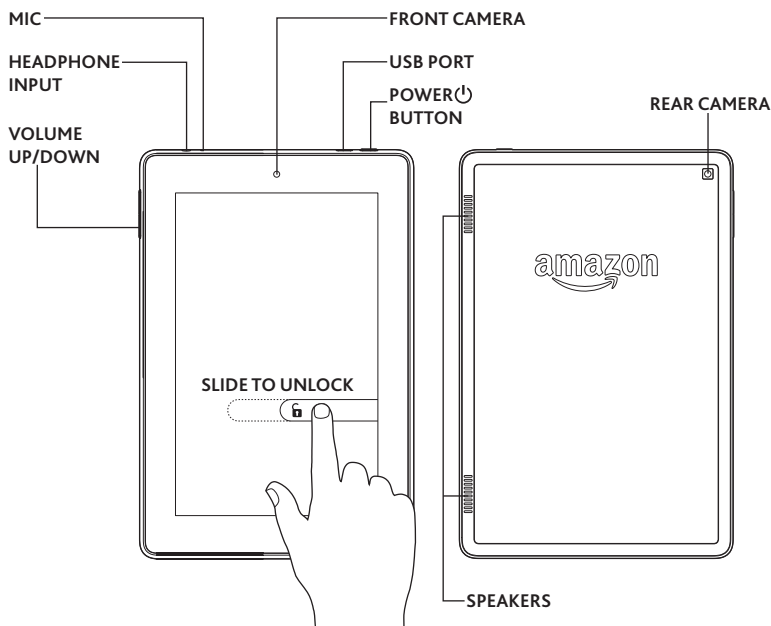

Get started in just a few easy steps:

- Turn on your Fire HD 7 by pressing the Power button located on the top.
- Unlock the screen by pressing and dragging the lock icon to the left side of the screen.
- Charge the battery by connecting the included USB cable, then connecting the other end of the cable to the Fire HD 7 power adaptor.

For customer support, visit www.amazon.com/devicesupport

©2014 Amazon.com, Inc. or its affiliates. All rights reserved.
Amazon, Fire and the Amazon logo are trademarks
of Amazon.com, Inc. or its affiliates.



05-005480-03