




**bandai.com**  
Asst. #19600

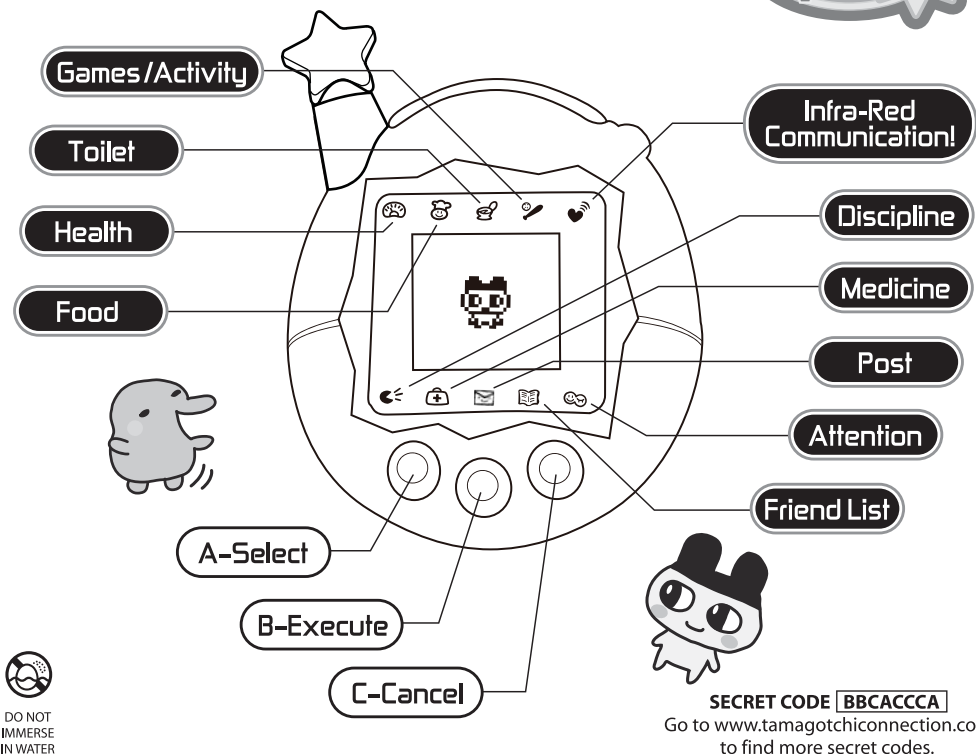

**SECRET CODE [BBCACCA]**  
Go to [www.tamagotchiconnection.com](http://www.tamagotchiconnection.com) to find more secret codes.

**1 Tamagotchi® Connection® is an interactive virtual pet that will evolve differently depending on how well you take care of it. Play games with it, feed it food and cure it when it is sick and it will develop into a good companion! V4.5 has some exciting features!**

- Using infra-red technology, your Tamagotchi can connect with others to make friends, play games and exchange gifts! Find a compatible friend and you can raise several generations of Tamagotchis.
- Using Gotchi points, you can buy special foods and new items for your Tamagotchi.
- With a series of passwords, you can visit Tamagotchi Town ([www.tamatown.com](http://www.tamatown.com)), the virtual world where Tamagotchis live and play. **NOTE: The V4.5 toy is only compatible with the V4 website.**
- AND... Now with SKILL points, you can play new games, attend school, and influence the lifestyle of your Tamagotchi. Additionally, a new messaging feature allows for more spontaneous fun. What will your Tamagotchi grow up to become under your mentorship?**

 
#### HOW TO WAKE YOUR TAMAGOTCHI

- Pull out the tab from the side of the casing and Tamagotchi will appear after a long beep.
- To reset, press the Reset Button on the back of the casing with a pointed object like a pen. **NOTE: Be careful not to apply too much pressure, especially with a sharp object.**
- To set the date and time, press button (B) and the time screen will appear. Set the month, date, hour and minute by using button (A) to scroll through the items, button (B) to choose/set the correct number. **NOTE: As some special events occur on specific dates, please set up the date carefully.**


- Set your birthday month/date. Tamagotchi might celebrate your birthday.
- Choose a 5 letter user name by using button (A) to scroll through the alphabet and button (B) to choose letters. **NOTE: After selecting a user name, you cannot change it.**
- After returning to the normal screen, you will discover if your Tamagotchi is a boy (black) or a girl (white).
- Choose a 5 letter name for your Tamagotchi by using button (A) to scroll through the alphabet and button (B) to choose. **NOTE: After naming your Tamagotchi, you cannot change it.**

#### THE GROWTH PROCESS

Your Tamagotchi can evolve in different stages depending on how you care for it.



#### HOW TO MAKE YOUR TAMAGOTCHI GROW

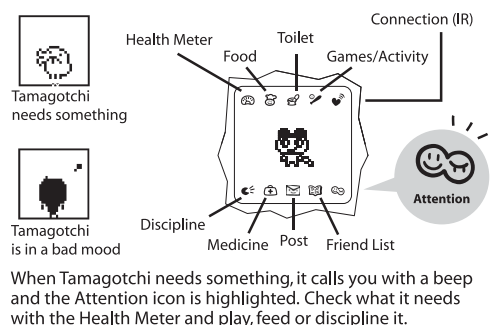

When Tamagotchi needs something, it calls you with a beep and the Attention icon is highlighted. Check what it needs with the Health Meter and play, feed or discipline it.

#### HOW TO TAKE CARE OF YOUR TAMAGOTCHI

- HEALTH METER**  
Select the "Health Meter Icon" with button (A) to check the following information regarding your Tamagotchi:  
• Level of Hunger/Happiness • Level of Training  
• Skill Points • Age • Weight • Name • Gender/Generation  
• Gotchi Points • User Name.
- LEVEL OF HUNGER/HAPPINESS**  
The number of hearts you have indicates your pet's Hunger and Happiness (the more the better).
- LEVEL OF TRAINING**  
The number of dots indicates your pet's level of training (the higher the better).

- 3 SOUVENIR**  
After receiving an item from one of your adventures at Tamagotchi Town, view them here.
- CONNECTION/COMMUNICATION**  
Select the "IR Icon" with button (A) to do the following with your Tamagotchi: • Work • PC • V4 & 4.5 • Others Connection.
- WORK**  
Take your Tamagotchi outside. Depending on your character's stage of life, it can attend pre-school, school, and work here. Once an adult, your Tamagotchi can go to work and play additional mini-games. Mastering the mini-games will increase your salary and skill points. Press button (A) to select the "IR Icon" and then (B) to select.
- Pre-school.** If your Tamagotchi is aged 0-2 years, it can attend pre-school; you can see your character interact with the teacher.
  - School.** Between 2-5 years, your Tamagotchi can attend school. Here, the teacher will offer three different gifts. Press any button to select one; if you choose the special item, you'll be rewarded with additional skill points.
  - Work.** Once you complete school and have accumulated enough skill points, you'll be invited by post to apply for a variety of jobs.

- HOW TO SELECT A JOB**  
After receiving a post message, press button (A) to view the jobs available. Press button (B) to select and apply for a job. You will be interviewed by a panel; once all panel members show an "O", they have indicated that you have passed the interview. Congratulations! If you are not able to pass the interview, you will be able to re-interview at a later time. **NOTE: Your skill points affect your job offer.**
- After accepting a job, you will be able to play some of the following mini-games:
- MICROSCOPE ICON**  
Match the image on-screen with the options displayed below using buttons (A), (B), or (C).
- CLOWN HAT ICON**  
Push (B) button to jump high on the trampoline. Then, use the (A) and (C) buttons to catch the balloons on each side.
- WATERING CAN/CHEF HAT ICON**  
Pick up the same item as shown in the box to the right. Use button (B) to activate your claw.
- MEDICAL BAG/BRIEFCASE ICON**  
Catch the falling items while avoiding the messes and skulls. Use button (A) and (C) to move left or right.
- MICROPHONE/NEWS READER DESK ICON**  
Use buttons (A), (B), and (C) to match the flying items as they pass over the arrows on-screen.

- BOOK ICON**  
Match the item with the six options below. Be sure to track the activity timer as well as the list of items needed to be matched. Press button (A) to scroll through the items, button (B) to select. You may use button (C) to replace your options if none match.
- WEIGHT ICON**  
Push the (B) button repeatedly to make the strength bar full, allowing you to pull the heavy weights.
- FIRE HELMET ICON**  
Press button (B) to shoot water to put out the fire.
- FACE ICON**  
Keep track of how many characters board the bus. Use buttons (A) and (B) to select your answer.
- BOOM BOX ICON**  
Push the B button to stop the moving signal light on the blinking target.
- FLAG ICON**  
Use buttons (A) or (C) to move up and down to safely drive the bus while avoiding the flowers.
- SHAMPOO ICON**  
To wash the character's hair, press buttons (A) and (C) to follow the sequence of arrows given on-screen.
- PC**  
Use this function to visit the Tamagotchi Town V4 website ([www.tamatown.com](http://www.tamatown.com)). To enter Tamagotchi Town, you will need the 14-digit LOGIN number available on-screen. **NOTE: To avoid losing the saved data in your toy, do not press any buttons while viewing your 14-digit password; your toy will remain PAUSED during your visit to Tamagotchi Town.** After visiting Tamagotchi Town, you will be provided with a new 14-digit LOGOUT number. Press button (A) to bypass your LOGIN number and to enter the new LOGOUT number. Use buttons (A) to scroll through the digits and button (B) to select. You may use button (C) to erase.
- V4/OTHERS CONNECTION**  
Connect with another Tamagotchi V4 owner using the IR Sensor.
- Press button (B) to select "Ver. 4 and Ver. 4.5" or "Others".
  - Choose "Game", "Present" or "Visit".
  - "Stand By" will appear on the screen.
  - Position both toys together with the IR sensors at the top facing each other. (See illustration.)
  - Press button (B) to begin IR communication.
- GAME** - Play 4 randomly chosen games with your friend.
- PRESENT** - Wrap and send a gift to your friend! See "Friend List" for more details.
- VISIT** - Spend time with your friend and share secrets.

- 4 DEVELOPING RELATIONSHIPS**  
Your relationships improve and develop as you make more connections with your Tamagotchi. After several connections, you and your favorite partner may become good companions. If so, an egg will appear on each screen. Care for your new egg to raise the next generation of Tamagotchis.
- DISCIPLINE**  
Sometimes your Tamagotchi can be very naughty or may just need a pat on the back! Use button (A) to select the "Discipline Icon" and button (B) to choose either "Time Out" (when naughty) or "Praise" to cheer up your Tamagotchi.
- When to discipline?**  
• It calls/beeps even when it's not hungry.  
• It refuses food even when it is hungry.
- Did you discipline your Tamagotchi well?**  
Your Tamagotchi may send an unexpected present to your friend. This could be because your "Training" level is not high enough. Select "Time Out" to discipline it.

- MEDICINE**  
When the "Skull Icon" or "Tooth Icon" appears, your Tamagotchi is sick. Use button (A) to select the "Health Icon" and button (B) to nurse it back to health. Sometimes it may take more than one dose of medicine!
- POST**  
When the Tama Postman delivers a new message to you, the "Post Icon" will begin flashing. Use button (A) to select the "Post Icon" and button (B) to select. Use buttons (A) to scroll through your messages and (B) to select one. You may receive any of these three types of messages:  
**FORTUNE COOKIE (STAR)**  
This message delivers either good fortune or bad luck in your Tamagotchi adventures. Obtain three money stars and you may receive a special letter from the Tamagotchi King. Get three love stars and your friendship level may increase with your next connection to another toy. And, if you receive 3 health stars, you'll be less likely to become sick.
- LETTER (ENVELOPE)**  
Letters may contain good or bad news. They are also affected by your fortune cookies.
- IMPORTANT INFO (!)**  
These important notices will often inform you of updates in your Tamagotchi's life including school and work.

- FRIEND LIST**  
Use button (A) to select the "Friend List Icon" and button (B) to view your list of friends and presents.
- FRIENDS**  
Use button (B) to select a "Friend." Press button (B) again to check your level of friendship. Your friendship level improves with the more connections you make with other Tamagotchis. Friendship levels are shown below:
- Acquaintance > Buddy > Friend > Good friend > Best friend > Partner
- If you attempt to connect with more than 50 friends, "SORRY! LIST FULL" will appear. You must delete one of your friends if you wish to add more. Press button (A) to scroll through your friends. Press button (B) to choose a friend to delete. Confirm your selection by choosing "YES."
- PRESENTS**  
Before you can send a present to your friend, you must wrap it. Press button (A) to select "Present." Use button (A) and (B) to select either "Food" or an "Item." Press button (B) to select an item to send to your friend. Confirm and wrap your selection by choosing "YES" followed by "SURE." You can also unwrap the present by the same command.
- POINTS**  
Keep track of your Gotchi points here. And when you're ready to visit the King of Tamagotchi Town, use this menu to make a donation. After viewing your points summary, press button (B). Confirm your donation by selecting "YES." Enter a donation of 20,000, 70,000 or 200,000 points and press button (B). Choose "YES." The King will thank you for a donation. **NOTE: The King will now instruct you to visit him in Tamagotchi Town. You may do so by using the 14-digit LOGIN number provided by your toy. See "Connection/Communication" for details.**
- FAMILY**  
View your Tamagotchi heritage. Press button (B) to select the "History Icon" to view your previous Tamagotchis that are no longer under your care. Select the "Parent Icon" to view your parents and grandparents.

- 2 SKILL POINTS**  
Keep track of your skill points here (Funny/Gorgeous/Spiritual). Points can be earned by playing mini games and other actions. Skill points influence your Tamagotchi's life path.
- AGE/WEIGHT/NAME**  
Every day your Tamagotchi lives, it becomes 1 year older. Keep it healthy and don't allow its weight to get too high.
- GENDER/GENERATION**  
Check the gender of your Tamagotchi (boy or girl) and its current generation. If your Tamagotchi receives an egg on the screen, it will grow to become the next generation of your Tamagotchi.
- GOTCHI POINTS**  
Check how many Gotchi points you've earned by playing games. Use these Gotchi points to shop.
- USER NAME**  
Check your user name.
- FOOD**  
Press button (A) to select the "Food Icon." Choose from a variety of meals or snacks. Use Gotchi points to buy additional food items and store up to 15 of your Tamagotchi's favorite meals or snacks. But, be careful to feed your Tamagotchi only when it's hungry. Overfeeding it might make it become sick or overweight.
- TOILET/FLUSH**  
When your Tamagotchi makes a mess, press button (A) to select the "Toilet Icon" and use button (B) to clean up.
- GAMES/ACTIVITY**  
As your Tamagotchi grows through each stage of life, the number of games to play will increase to a total of five games. Press button (A) to select the "Games Icon" and press button (B) to choose a game to play.
- CLIMB**  
Jump to the upper cloud by pressing (B) button. Be careful: the speed and the size of clouds can randomly change!
- TUG-OF-WAR**  
While watching the strength meter on the left, press (B) button to stop it and to overcome your opponent.

- APPLE**  
Use the (A) and (C) buttons to catch the falling apples with your basket.
- SHAPES**  
Match the shifting patterns with the shapes at the bottom. To move the shapes, press a combination of two buttons. First hold the button corresponding to the shape, then press the button to the side of it to indicate a move of either left or right.
- MANHOLE**  
Catch the Gotchi points bags and hearts while also avoiding the snakes. Press the corresponding buttons to close the manhole.
- ITEMS**  
Press button (A) to select "Item" and press button (B) to choose an item you want your Tamagotchi to play with. **NOTE: Not all characters can play with all items.**
- SHOP**  
You can purchase special items or food with the Gotchi points you earn. From the "Games/Activity" menu, press button (B) to select "Shop." Scroll through the items available and press button (B) to buy an item. Purchase up to 15 foods to keep in your Meals or Snacks lists and a maximum of 30 items in your Item list.
- TRAVEL**  
Occasionally, the Shop Keeper will offer travel tickets to your favorite destinations. With enough Gotchi points, you can fly to places around the globe. Afterward, visit the Travel Agency at Tamagotchi Town ([www.tamatown.com](http://www.tamatown.com)) to pick up your souvenir. **NOTE: You may visit the Travel Agency by using the 14-digit LOGIN number provided by your toy. See "Connection/Communication" for details.**
- Did you find a secret code?**  
At the shop counter screen, press button (A). Then, press button (A) quickly three times. When the shop owner's face appears surprised, punch in the secret code to reveal a new item.
- PASSWORD**  
Use passwords to visit Tamagotchi Town ([www.tamatown.com](http://www.tamatown.com))! Play games, travel around the world, and visit your parents or the Tamagotchi King. Afterward, enter your individual password here to claim your souvenir. **NOTE: Passwords are tied to individual items found in Tamagotchi Town and are different from your 14-digit LOGIN/LOGOUT numbers. See Connection/Communication below for details.**

- 5 THE MATCHMAKER**  
If your Tamagotchi grows old and hasn't found a partner, a "Matchmaker" may appear to suggest a partner for you! Press any button once she appears. She will present a potential partner. To accept this partner, press button (B) to select "YES" or "NO." Finding a life partner is necessary to raise future generations of Tamagotchis. If you are unable to find a suitable partner, your Tamagotchi will continue to grow old until it passes away.
- Once a partner is found, a new egg representing the next generation will appear. For the first 24 hours, your Tamagotchi will take care of all the needs of the new Tamagotchi unless it becomes sick. Nurse it back to health with a dose or two of medicine.
- Once the parent leaves, you'll be asked to name your new Tamagotchi. Continue to feed and care for it. Develop good relationships with other Tamagotchis to continue raising several generations of Tamagotchi.

- IF YOUR TAMAGOTCHI PASSES AWAY**  
Your Tamagotchi will pass away if you don't take good care of it. To start again, press and hold buttons (A) and (C) together until a new egg appears. It will hatch after a few minutes.

- RESET OPTION**  
**When to reset?**
- The first time you activate your Tamagotchi. When the image/screen freezes or does not move after several minutes.
  - When you change the battery. After pressing the RESET button, choose either "DOWNLOAD" or "RESET." If you select "DOWNLOAD," your Tamagotchi will begin from the last major event (waking up, growing, IR communication). If you select "RESET," your Tamagotchi will start over and your memory will be erased (Gotchi points, Items, Friends list).

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

- Do not: 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Battery included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Conforms to safety standard ASTM F963-03. Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Kato Rd Avenue, Cypress, California 90630. TM & © 2007 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION and all related logos, names and distinctive likenesses thereof are the exclusive property of Bandai, © Bandai, WIJZ 2004-2007. All rights reserved.

- HOW TO SET UP TIME**
- To see the current time, press button (B) while at the main screen.
  - To change the time, press and hold buttons (A) and (C) together until the date begins to flash. Use button (A) to scroll and button (B) to choose/set.

**SOUND ON/OFF**  
Press and hold buttons (A) and (C) together. Select sound ON or OFF.

- PAUSE MODE**
- Press and hold button (A), then press button (B). "PAUSE" will appear on screen below your Tamagotchi character. While in PAUSE mode, the clock will continue to run, but Tamagotchi's growth stops until taken out of pause mode.
  - To take Tamagotchi out of PAUSE mode: Press and hold button (A), then press button (B). "PAUSE" will disappear from the screen and your Tamagotchi will begin to move again.

- HOW TO REPLACE BATTERY**
- Requires 1 CR-2032 3V battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as shown. **NOTE: Make sure you use a new battery. NOTE: You will NOT need to change the batteries before using your Tamagotchi for the first time. CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed.**
- Input this **PASSWORD [14904 85918]** in *Tamagotchi® Connection®: Corner Shop 2* for the Nintendo DS™ and discover a surprise! (Sold separately.)

**WARNING: CHOKING HAZARD - Small parts. Not for Children under 3 years.**