

Sun Roof

The sun roof is instantly detached by releasing a single catch and pressing in the two arms 'A' (Fig 17). When removed, it is stowed in the front compartment in a special bag, face upwards and with the catch to the rear. When the car is driven with the sun roof removed, the side windows should be lowered by about one inch.

Engine Compartment Lid

The lid is hinged along its rear edge, and is released by a lever 'A' (Fig 17a) on left-hand side at shoulder level. The stay is self-locking, and the catch, marked red, must be squeezed and the lid raised slightly before lowering. A spring-loaded safety hook prevents the lid from lifting when the car is in motion, should the lid be not properly fastened.

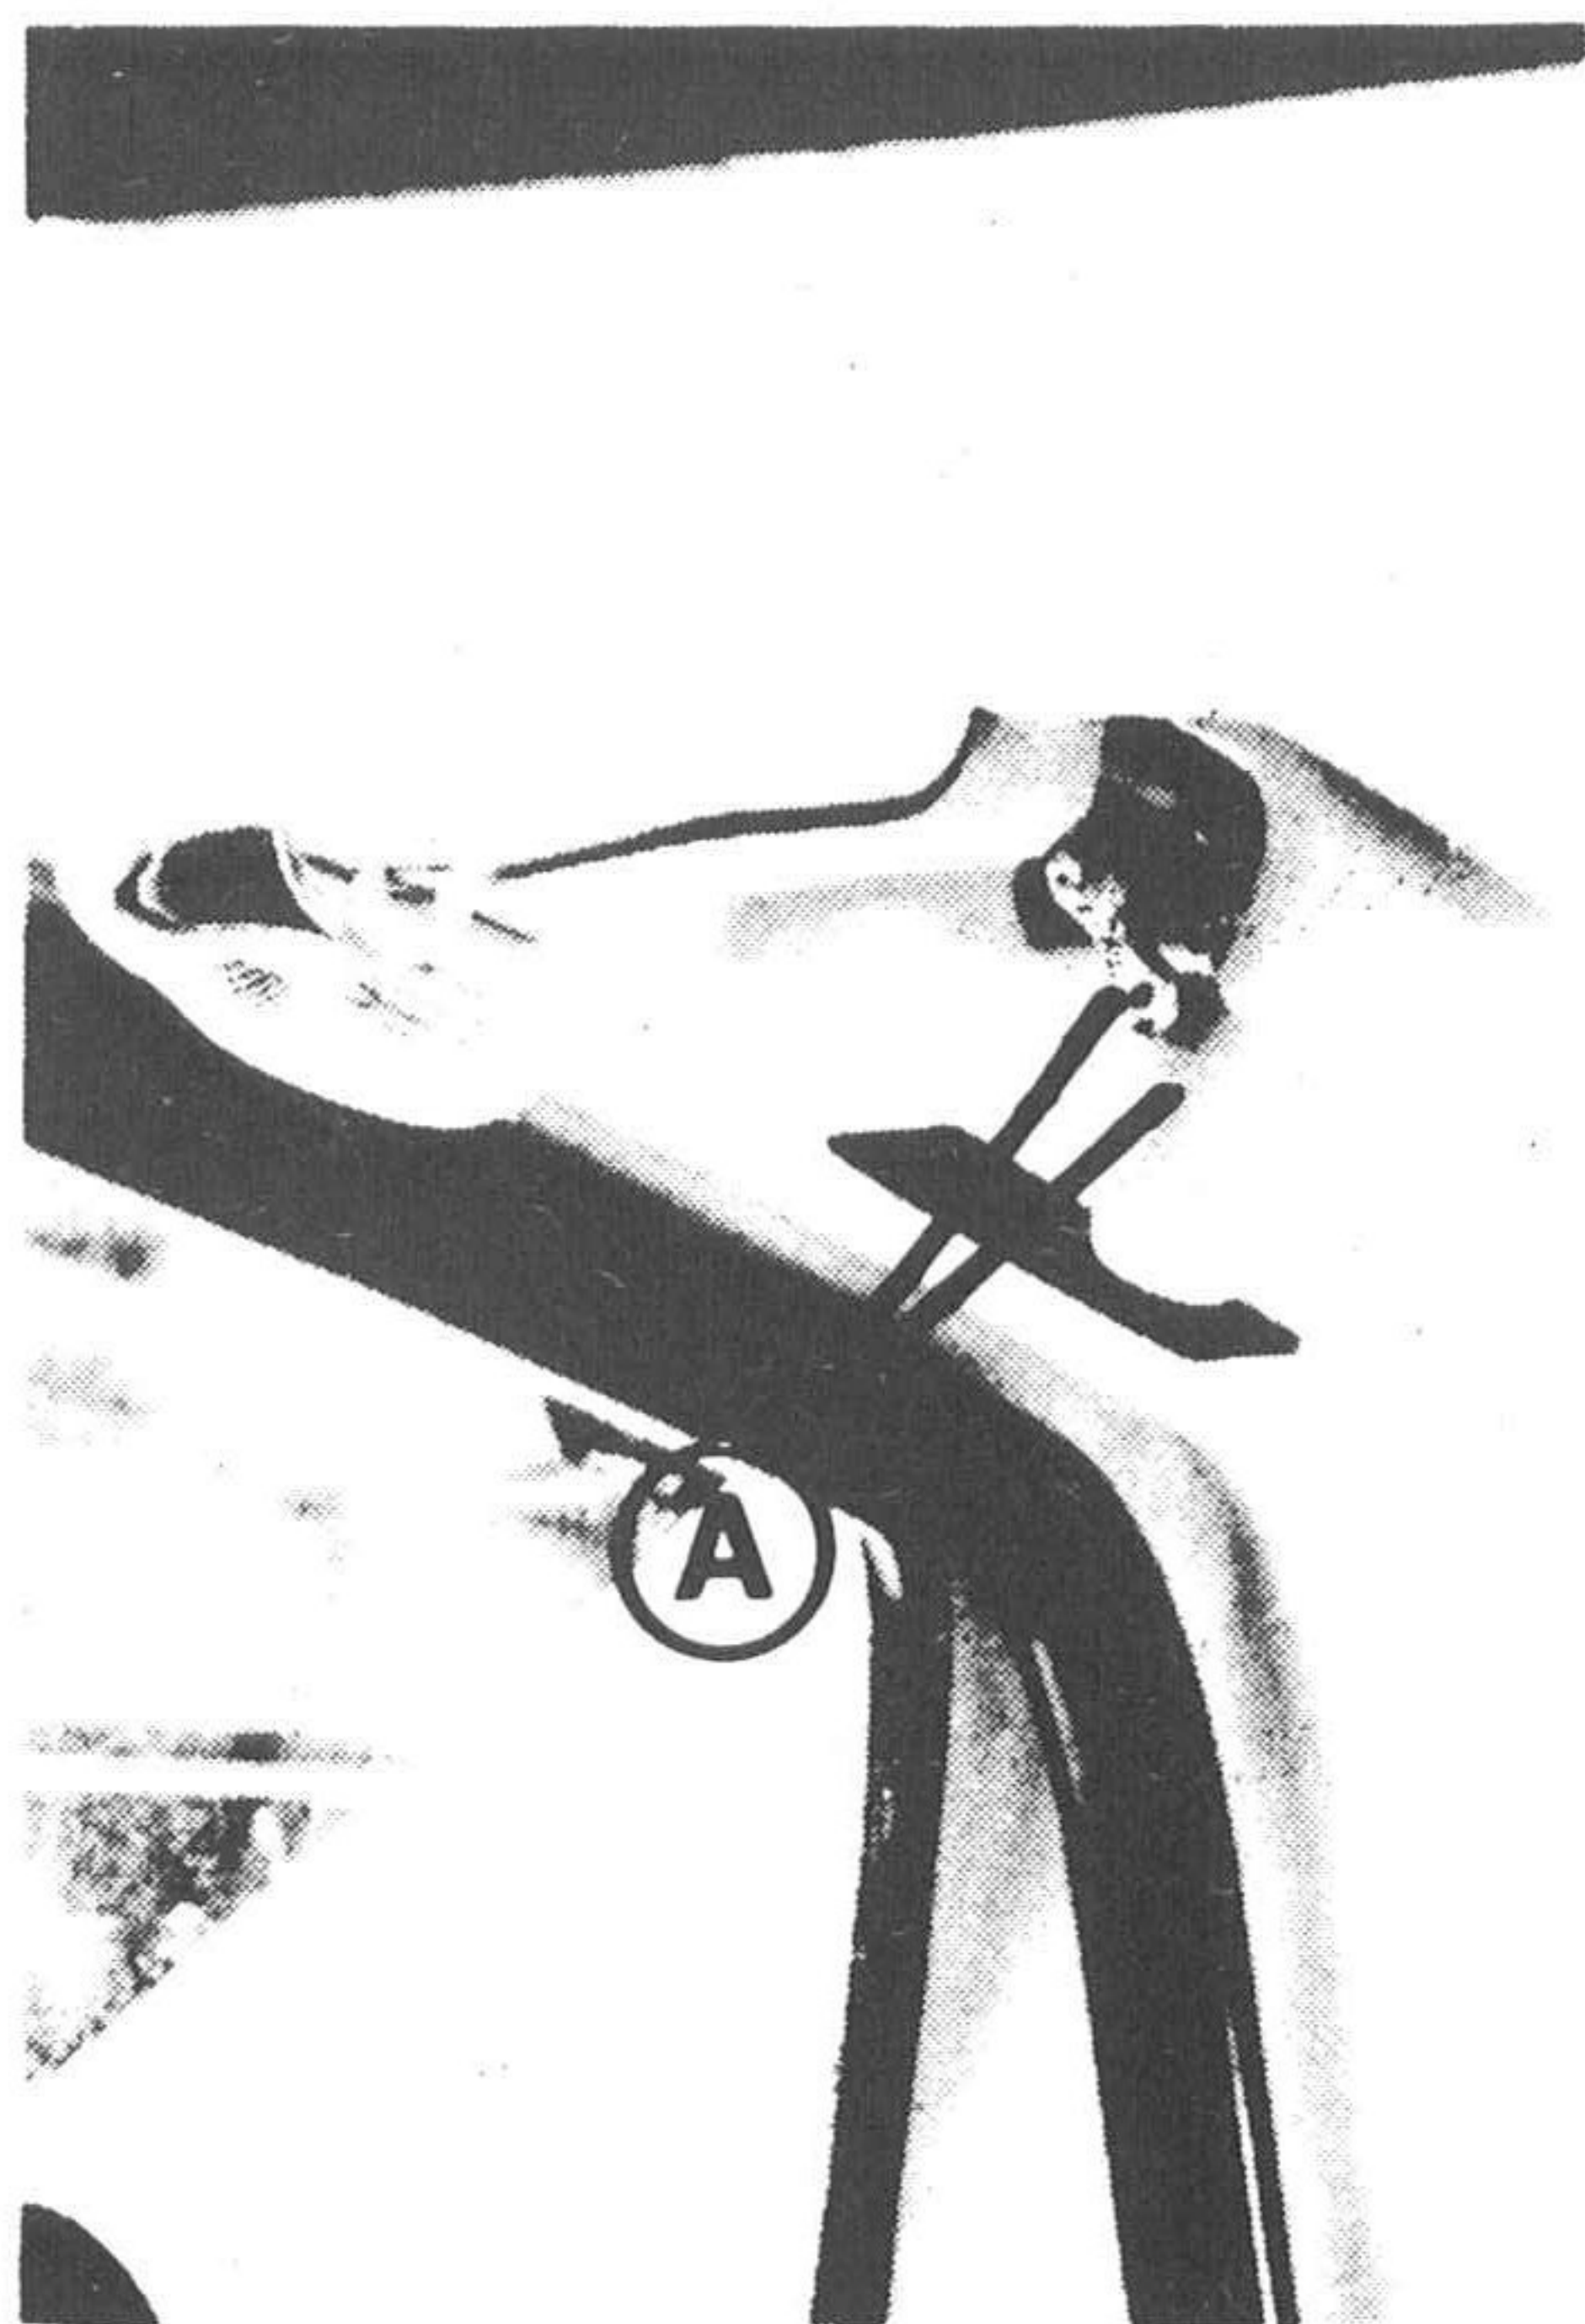


Fig 17

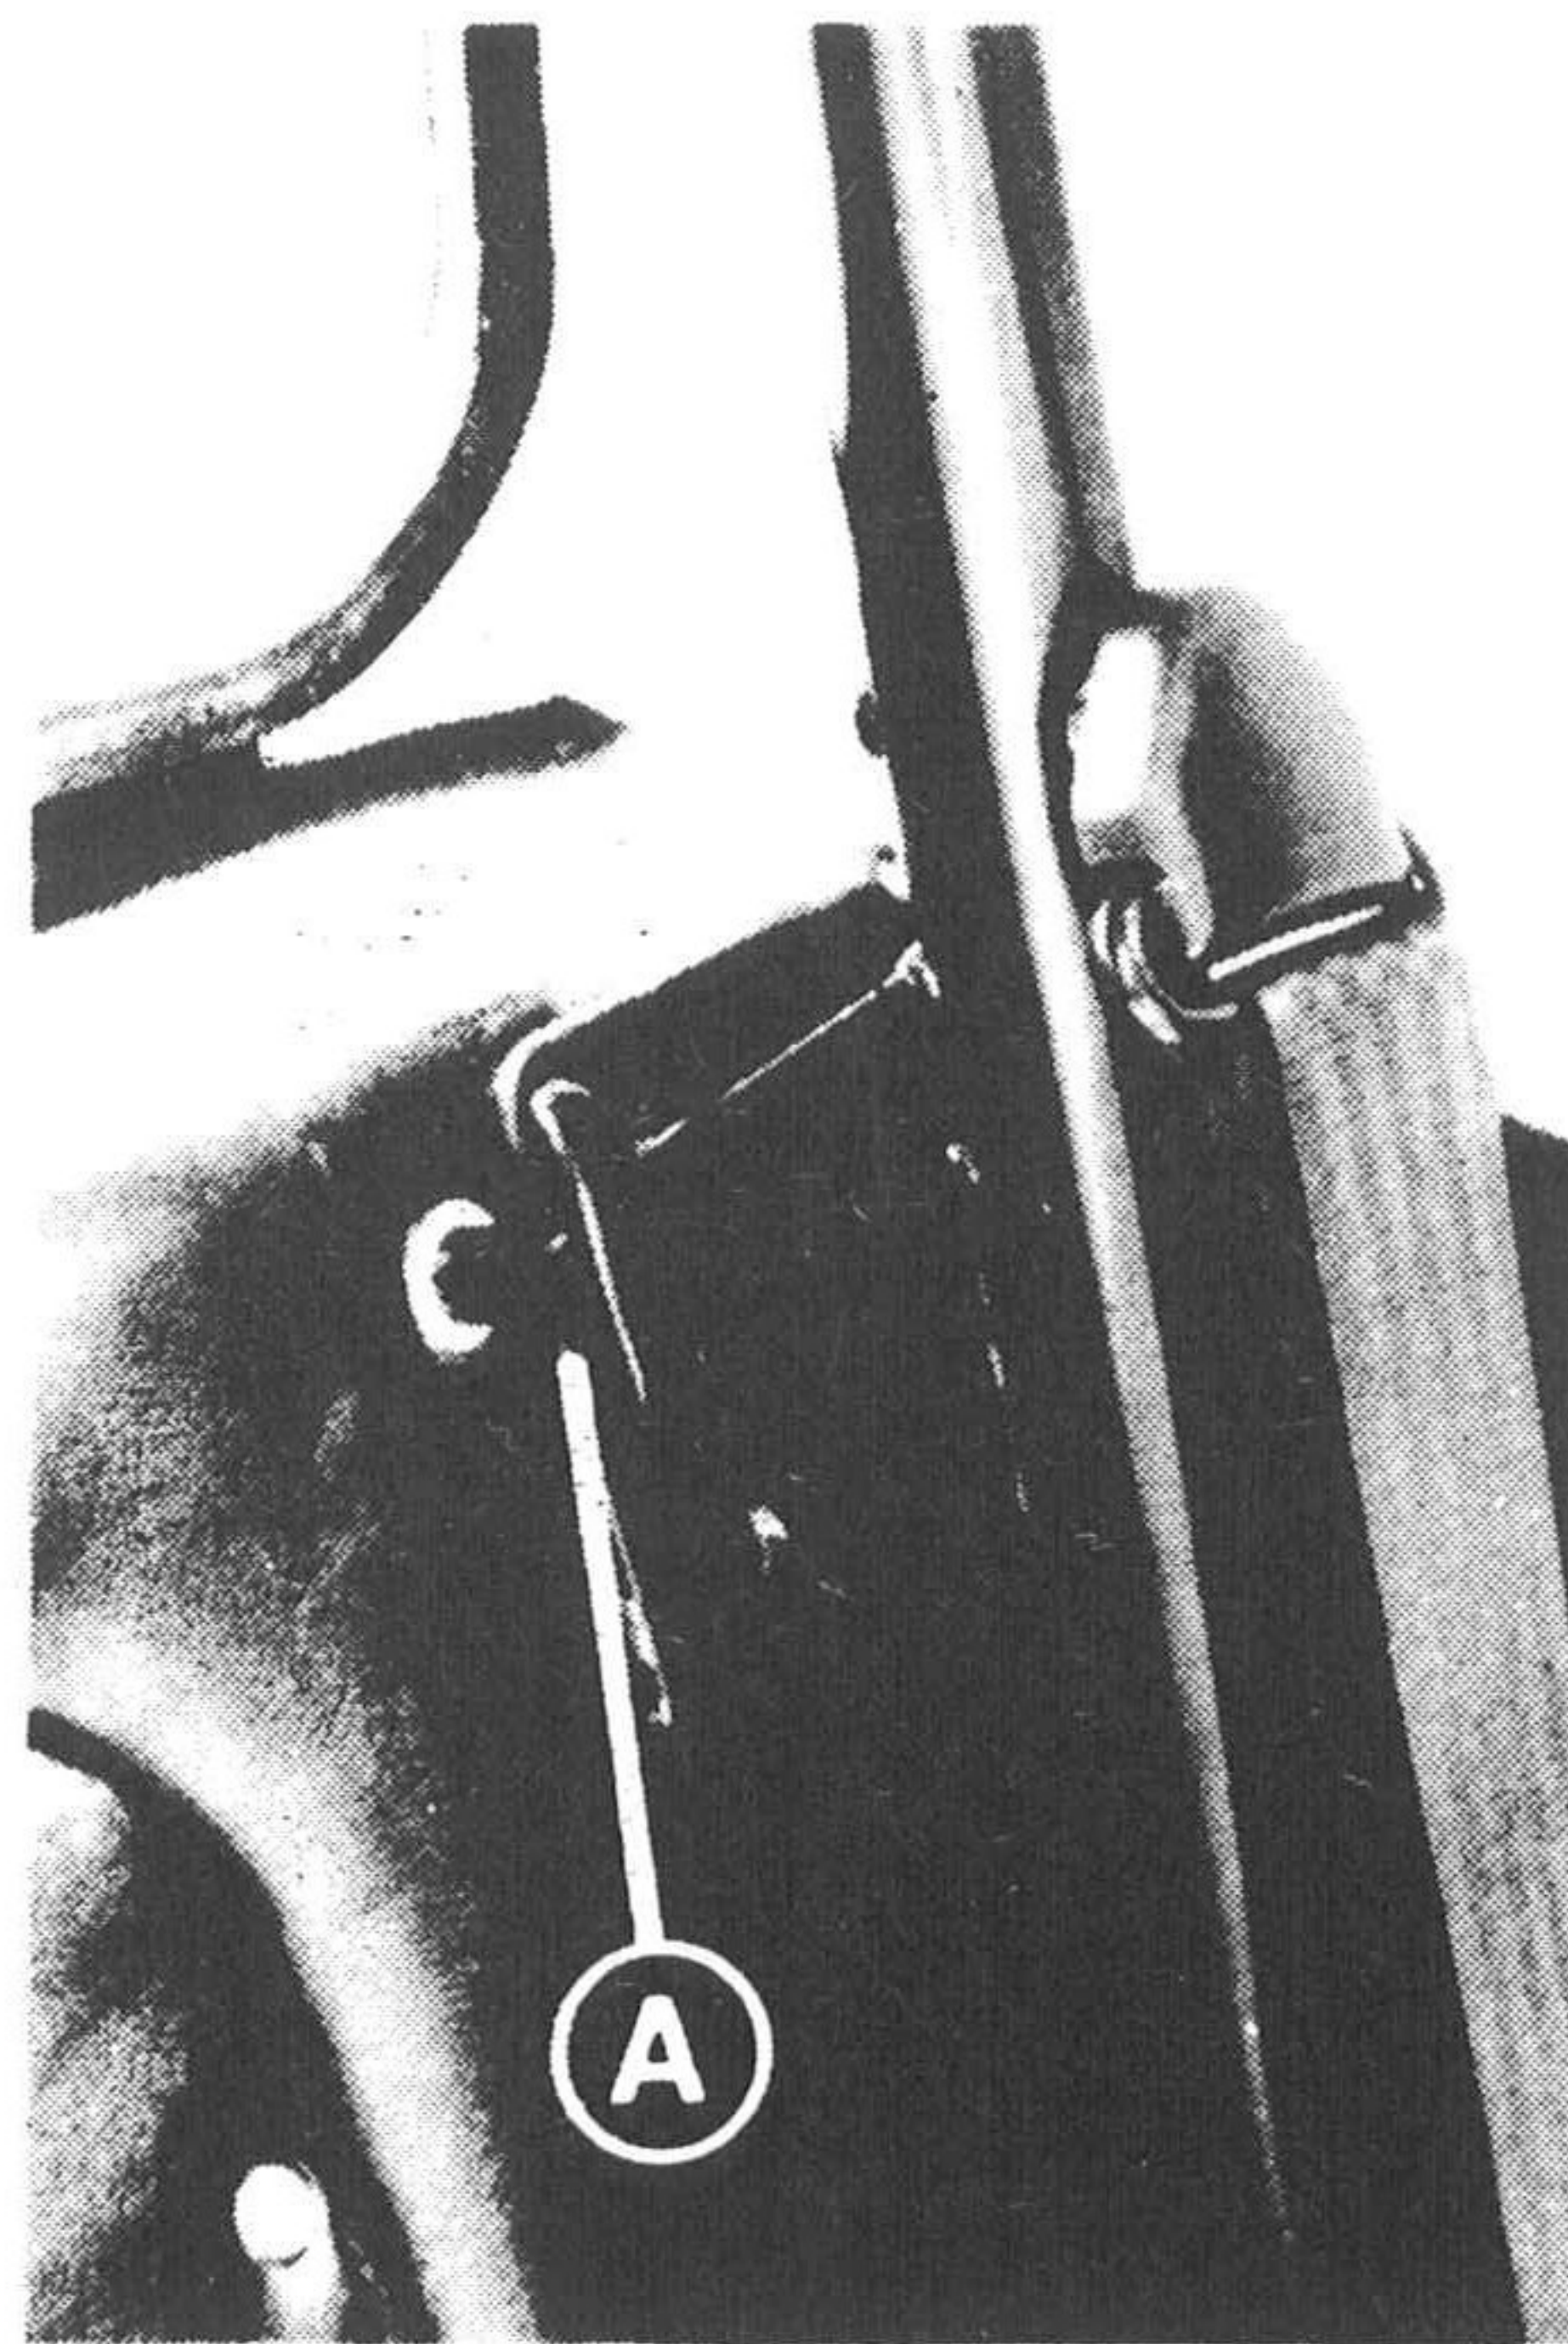


Fig 17a

Rear Luggage Compartment

The boot is fully carpeted and provides a luggage space of approximately 12 ft³ (0.34 m³). It provides access to the bulb holders of the rear lamp clusters. A lamp in the boot lights up when the boot is lifted, but can be switched off by an integral switch. The stay is self-locking, and the catch, coloured red, must be squeezed and the lid raised slightly before lowering.

Cleaning

Wash the exterior of the car frequently. Use plenty of water to which car shampoo solution has been added, and apply with a soft sponge. Then give a second wash with clean water. Dry off with a moist chamois leather. Heavy deposits of mud should be thoroughly softened with water before removal. After running over salted roads in winter or through sea water, thoroughly hose the underside of the car. Although rust prevention during manufacture has been very carefully carried out, certain component parts are vulnerable to damage by brine.

Never wipe off dust with a dry cloth; always wash it off, as dust is very abrasive. This rule applies equally to painted, plated and glass surfaces.

When using proprietary polishes, remember that some are difficult to remove from glass surfaces. Remove grease or tar spots with a soft rag soaked in petrol or white spirit.

The interior of the car is best cleaned by a vacuum cleaner.