




ARINC 628 Circular Connectors

- Industry standard
- 2 Power and 2 signal contacts
- Optional 5 signal positions
- Quick disconnect push button release
- Alignment and keying provided by housing
- Crimp contacts

Connector Dimensions

EE = Receptacle (Panel Mount)

P = Plug (Cable)

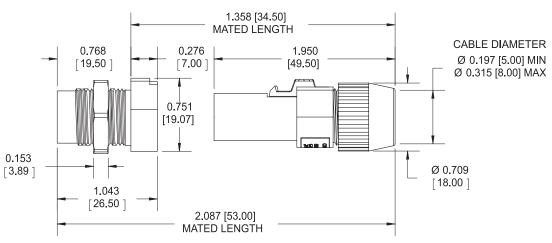


General Specifications			
Contacts	Power	Signal	
Number of Contacts	2	2	
Diameter	0.059 [1.50]	0.018 [0.50]	
Current Rating (Amps)	8	2.50	
Wire Size (AWG)	16 – 20	22 – 26	
Contact Resistance	< 2.0 milliohms	< 8.0 milliohms	
Insertion / Extraction Force Per Contact	1.8 to 5.4 oz.	0.3 to 1.6 oz.	
Insulator Material Receptacle Plug	Polycarbonate Polycarbonate		
Flammability	UL94V0		
Contact Plating Male Pins Female Sockets	G = 10μin gold (min) over nickel H = 50μin gold (min) over nickel AH = 50μin gold (min) over nickel on mating surface, gold flash over nickel on termination		
Contact Material Pins Sockets	Brass Beryllium copper wires and brass body		
Temperature Rating Insulation Resistance	-40° C to 85° C > 10 Mohm at 500 VDC		

Dimensions are in inches [mm]

www.hypertronics.com 2/1



Mounting Dimensions

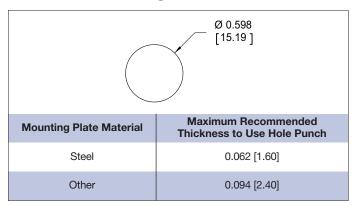

Replacement Contacts				
	Power	Signal		
Pin	YPN015-038G or H	YPN015-038G or H		
Socket	YSK015-053AH	YSK005-036AH		

Accessories		
	Power	Signal
Crimp Tool	AF8	AFM8
Positioner (Pin)	T1165	T870
Positioner (Socket)	TP688	T870
Removal Tool	T1124	_
Insertion Tool	_	T1215


Ordering Information

Male Plug	Plating
D02PBMRT-0024 D02PBMRTH-0025	10µin gold (min) over nickel 50µin gold (min) over nickel
Female Receptacle	
D02EEBFRTAH-0022	50µin gold (min) over nickel on mating surface, and gold flash over nickel on socket bodies
Cable Mount Female Receptacle	
D02-0130	50µin gold (min) over nickel on mating surface, and gold flash over nickel on socket bodies

Typical Application Wiring


(Connectors Are Not Shipped Pre-Wired)
In-Seat Power Interfaces

Receptacle Contact Assignments

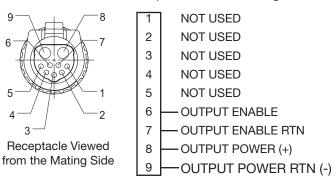

Power contact in position 8 and 9 only. Signal contacts in positions 6 and 7 only.

Power or Adapter Cable Plug

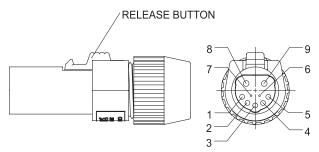

Plug Contact Assignments

1	NOT USED
2	NOT USED
3	NOT USED
4	NOT USED
5	NOT USED
6	OUTPUT ENABLE
7	OUTPUT ENABLE RTN
8	— OUTPUT POWER (+)
9	OUTPUT POWER RTN (-)——Voltage Adapter

NOTE:

Connectors are not shipped pre-wired.

Dimensions are in inches [mm]

2/2 www.hypertronics.com