

All console nds/ndsl/ndsi under 1.4.4/3ds under 4.0.0-7 can use for upgrading r4igold.

 
1 To download the " NDS\_FlashUpdate\_1.4.4\_R4 " into the TF card root directory, then open the NDSI console, press "A" button to enter the "GAME" directory.




2 Select “NDS\_FlashUpdate\_1.4.4\_R4.nds”, press “A”to enter the upgrading procedure.



3 Press “START”to start upgrading.

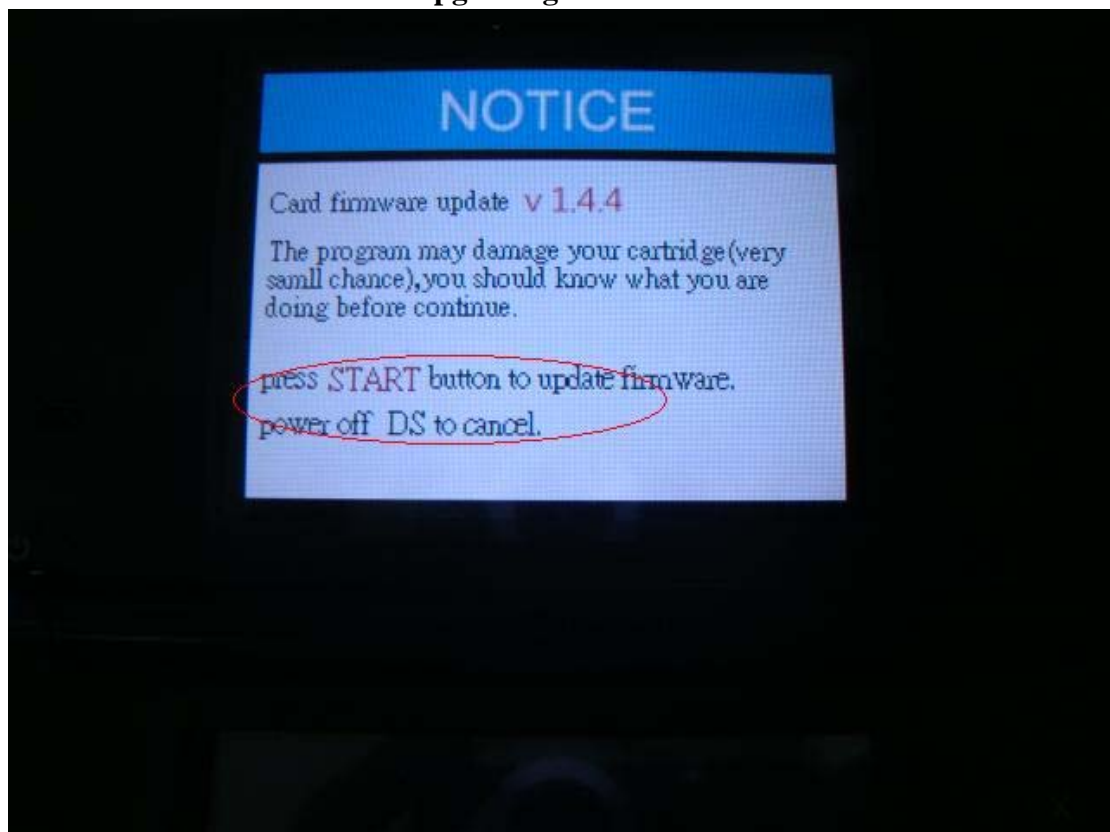

**4 Upgrading Process....**

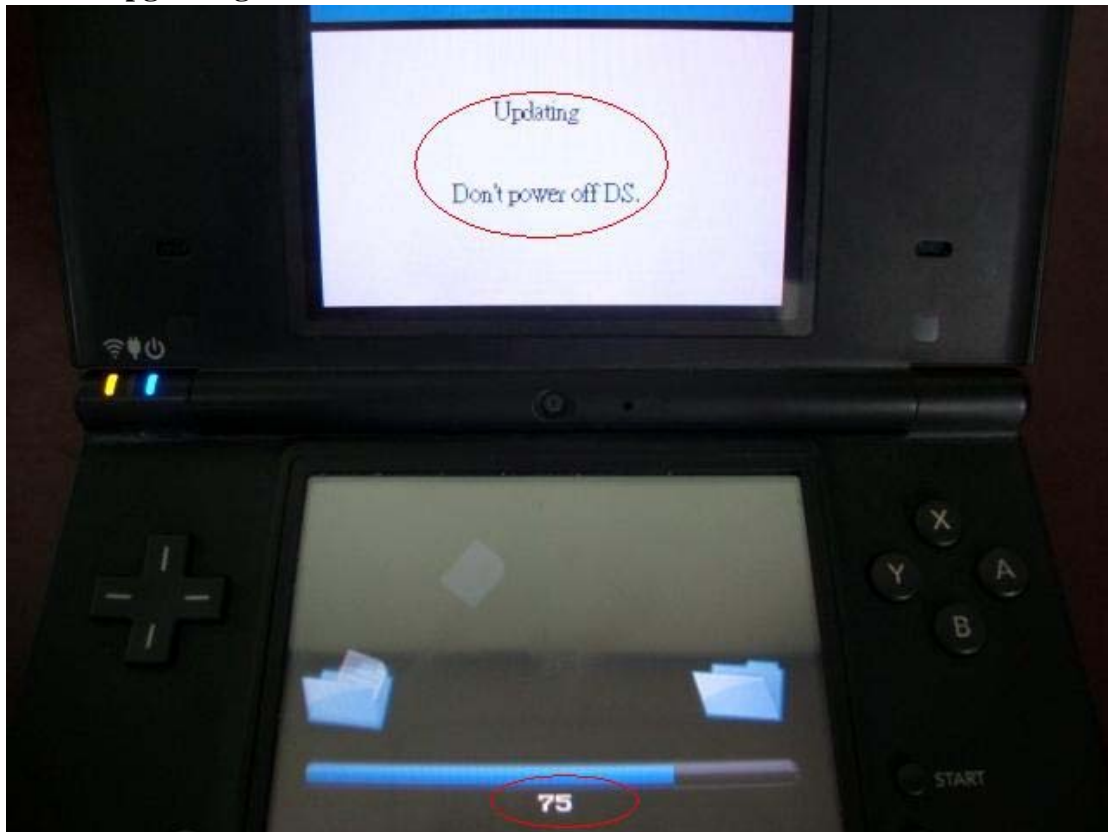 

**5 Upgrading completed, power off the ndsi console .Now r4igold had upgraded to 1.4.4 version successfully, can work with the ndsi 1.4.4 and 3ds 4.0.0-7 console .**

