



New Maintenance Oil

The WB maintenance oil is a new way to service Shimano internally geared hubs. It has the same properties as internal hub grease but it is in liquid form so it is able to penetrate the inner workings of the hub.

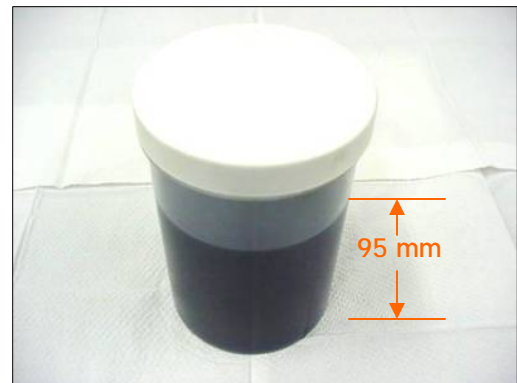

Simply fill the dipping vessel to a depth of about 95mm.

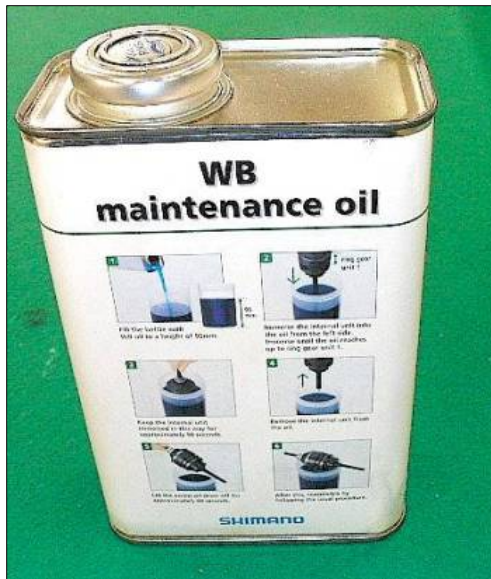

Remove coaster brake shoes if applicable.



Submerge the hub for 90 seconds with the large ball retainer up.



Allow oil to drain back into the vessel for 5 to 10 minutes.



If working on a coaster brake hub, apply new coaster brake/internal hub grease



Reinstall the coaster brake shoes.

After using the oil maintenance, there will be some initial noise during braking if a coaster brake is used. It will go away on its own.