


Key Reminder

- * 1 : Double Cab
- * 2 : Access Cab
- * 3 : Regular Cab

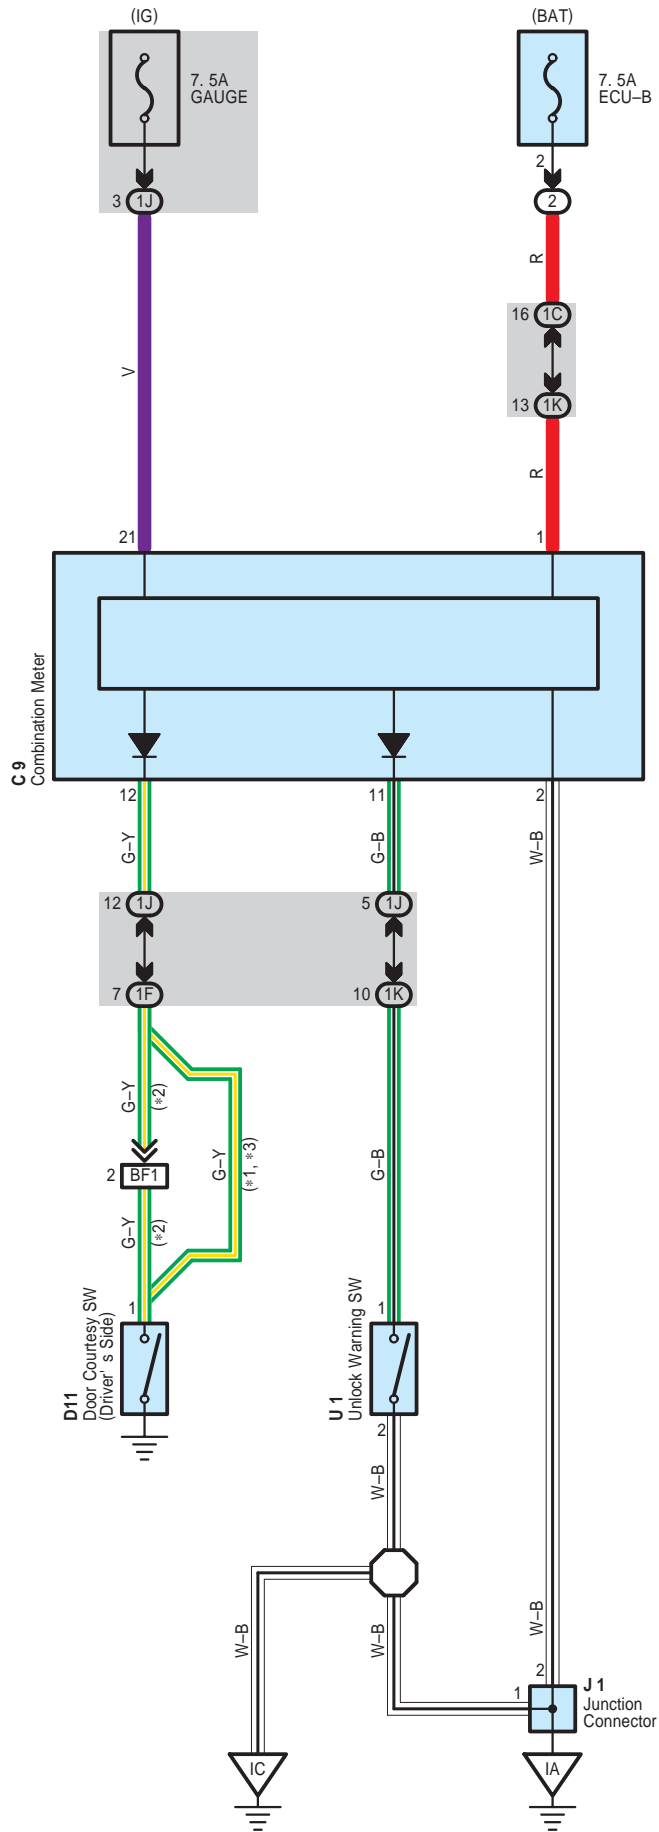

System Outline

Key Reminder System

With the ignition key inserted in the key cylinder (Unlock warning SW on), the ignition SW still off and driver's door open (Door courtesy SW on), when a signal is input to TERMINAL 12 of the combination meter, the combination meter operates, current flows from TERMINAL 1 of the combination meter to TERMINAL 2 GROUND and key reminder buzzer sounds.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C9	44	D11	48 (*2)	J1	45
D11	46 (*1)		49 (*3)	U1	45

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1J	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BF1	57 (*2)	Rear Door No.2 Wire and Floor No.2 Wire (Under the Left Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	54	Left Kick Panel
IC	54	Instrument Panel Brace RH

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat