


Clock

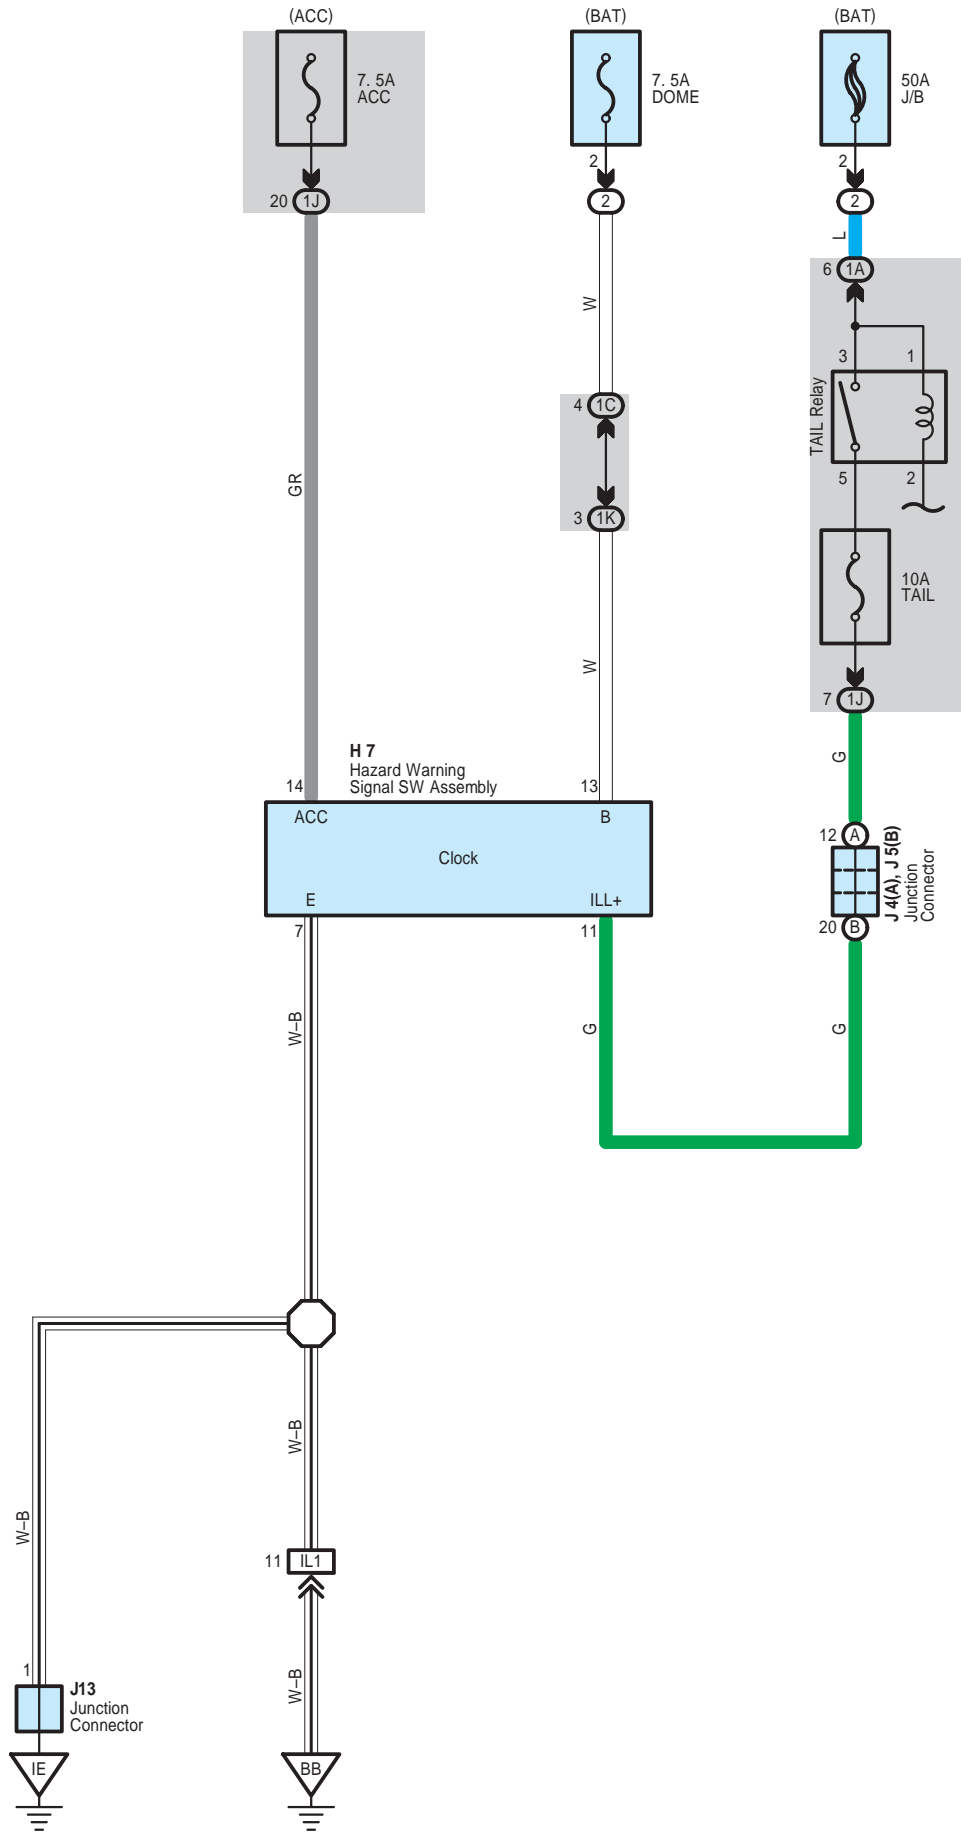

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H7	45	J5	B	45	
J4	A	45	J13	45	

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1J	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL1	55	Instrument Panel Wire and Floor Wire (Right Kick Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
IE	54	Right Kick Panel
BB	56 (*1)	Floor Seat Cross Member RH
	57 (*2)	
	58 (*3)	

* 1 : Double Cab * 2 : Access Cab * 3 : Regular Cab * 4 : Separate Seat * 5 : Bench Seat