



# Engine Immobiliser System for 2TR-FE

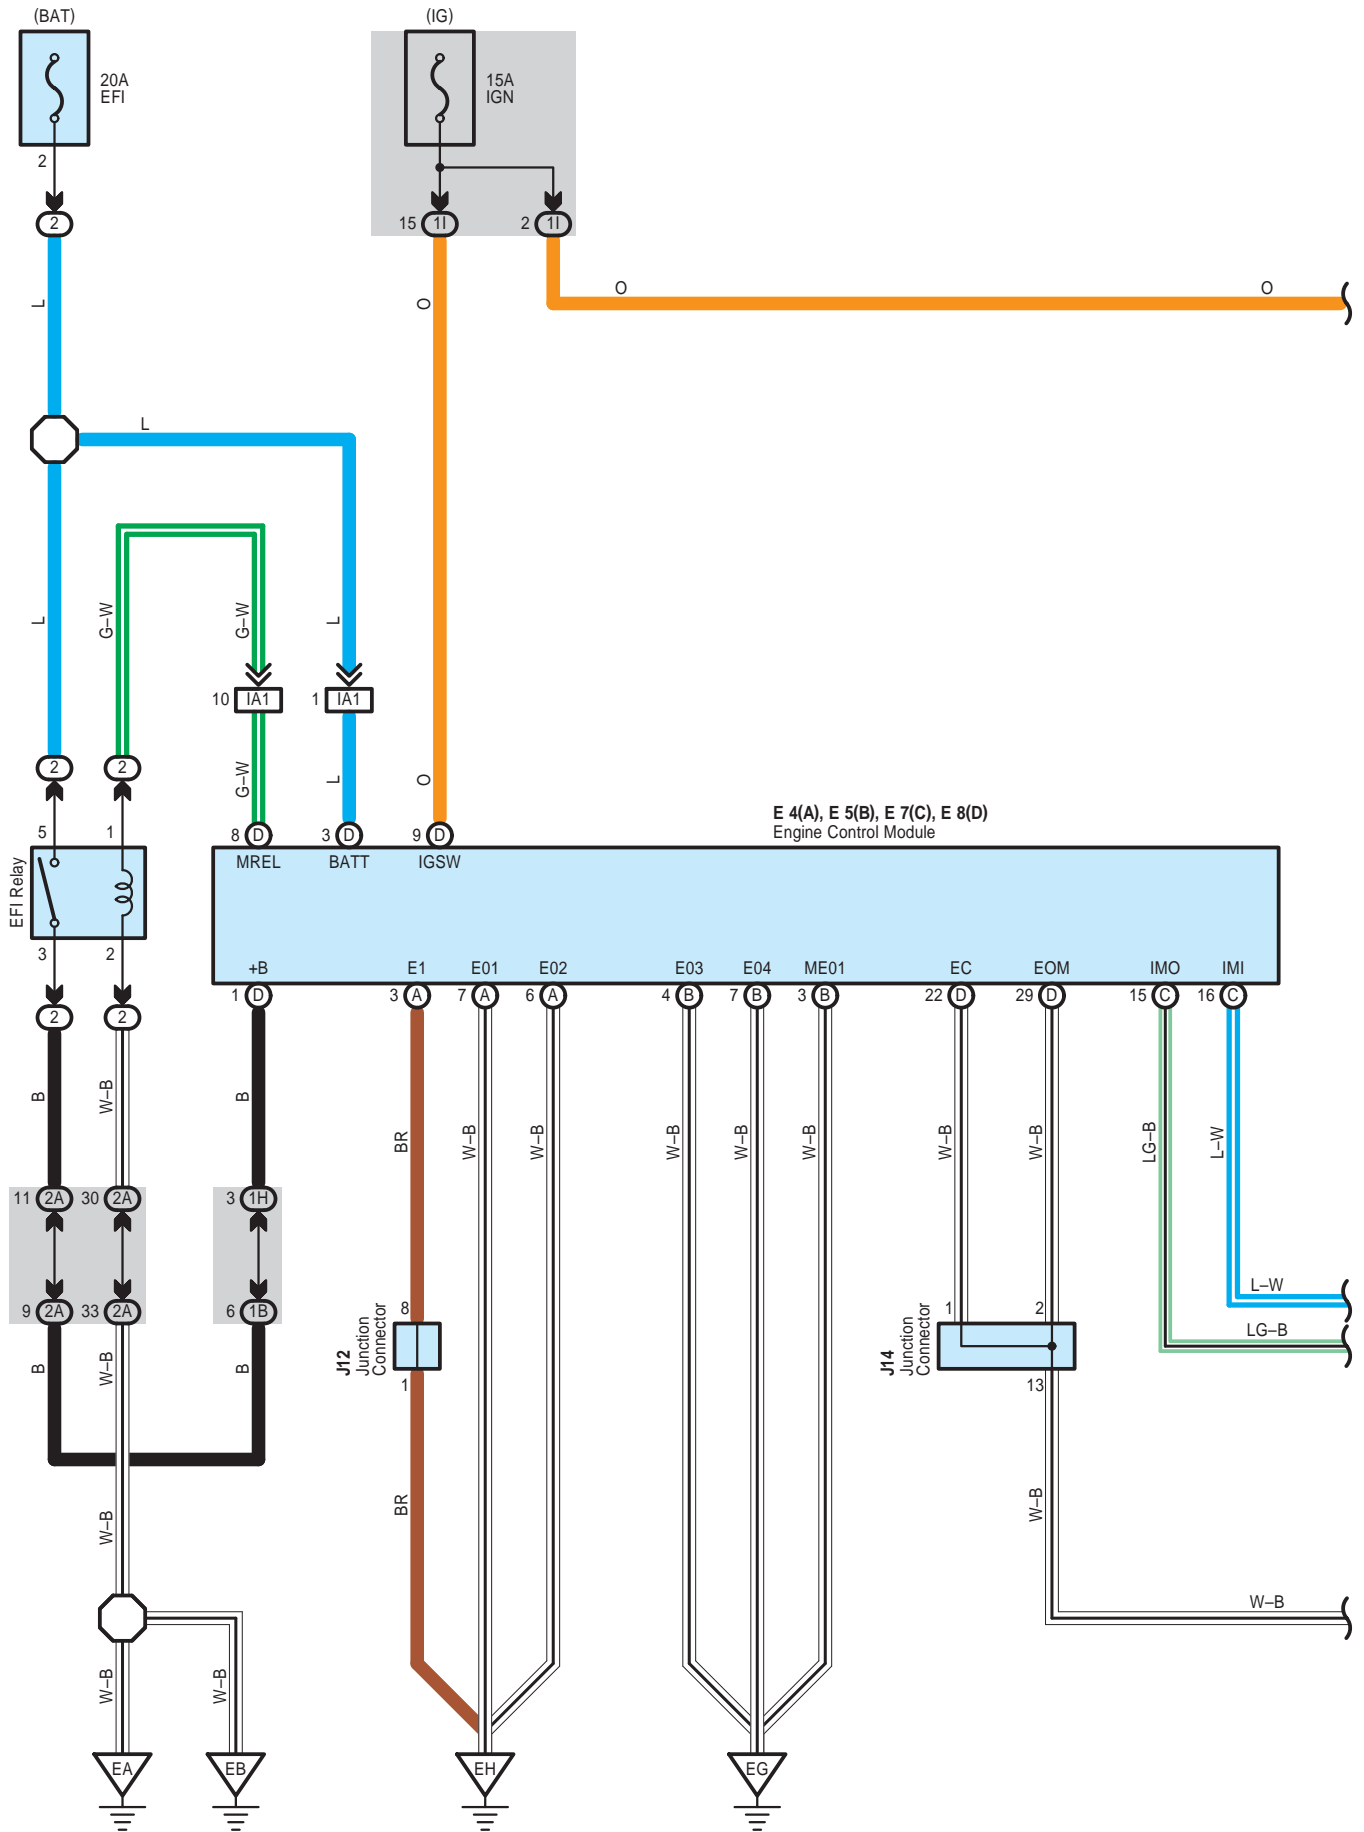

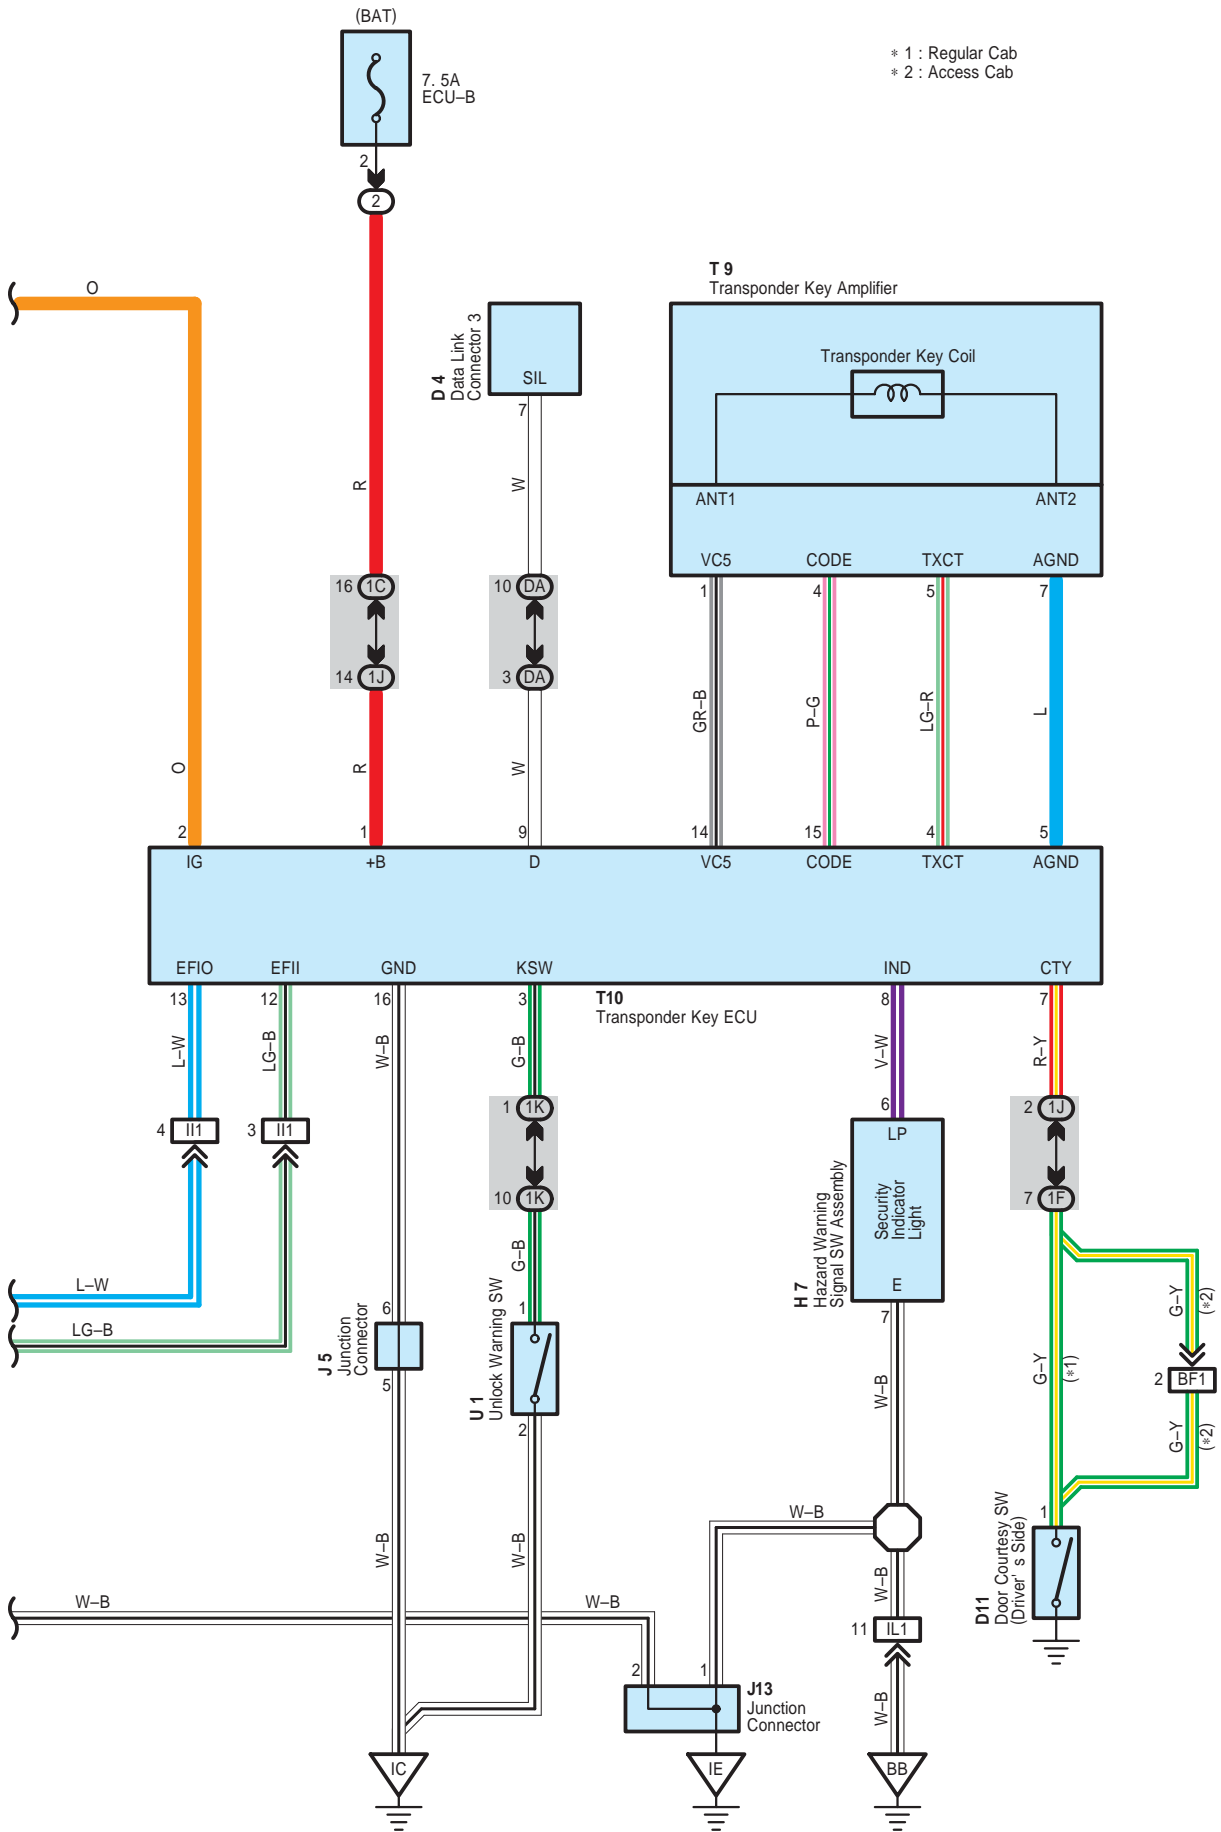

TOYOTA TACOMA (EM01D0U)

# Engine Immobiliser System for 2TR-FE

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
D4	44	E7	C	44	J13	45
D11	48 (*2)	E8	D	44	J14	45
	49 (*3)	H7		45	T9	45
E4	A	44	J5	45	T10	45
E5	B	44	J12	45	U1	45

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1F	28	Floor No.2 Wire and Driver Side J/B (Lower Finish Panel)
1H	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1I		
1J		
1K		
2A	24	Engine Room J/B (Engine Compartment Left)
DA	34	Instrument Panel Wire and Instrument Panel J/B No.1 (Left Kick Panel)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	54	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
II1	55	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Brace RH)
IL1	55	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BF1	57 (*2)	Rear Door No.2 Wire and Floor No.2 Wire (Under the Left Quarter Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	53 (2TR-FE)	Front Right Fender
EB	53 (2TR-FE)	Front Left Fender
EG	53 (2TR-FE)	Rear Side of Cylinder Block
EH		
IC	54	Instrument Panel Brace RH
IE	54	Right Kick Panel
BB	57 (*2)	Floor Seat Cross Member RH
	58 (*3)	

\* 1 : Double Cab    \* 2 : Access Cab    \* 3 : Regular Cab    \* 4 : Separate Seat    \* 5 : Bench Seat

