



2 TOYOTA TACOMA

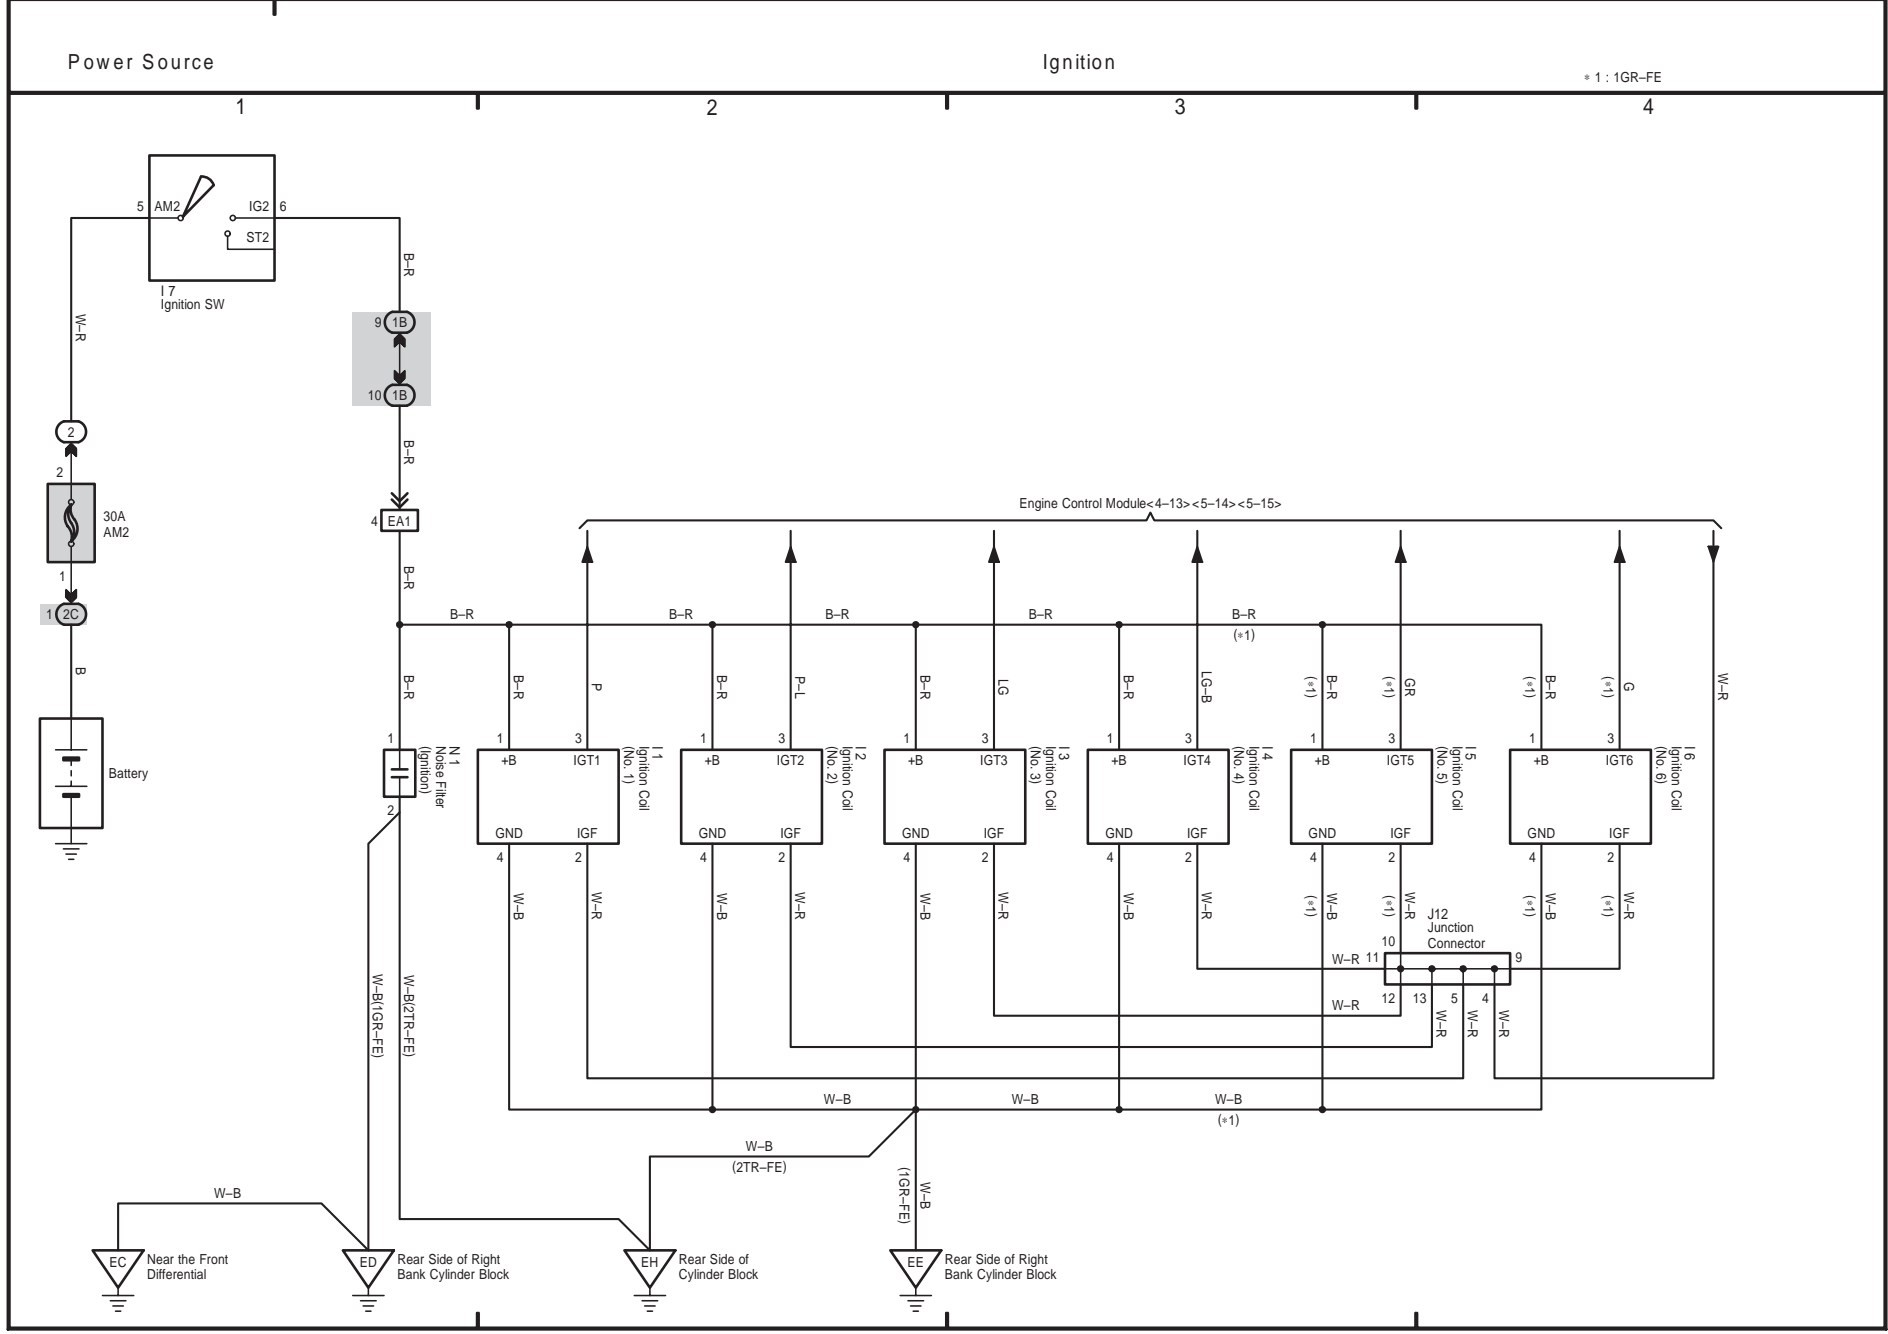


3 TOYOTA TACOMA

TOYOTA TACOMA (EM01D0U)

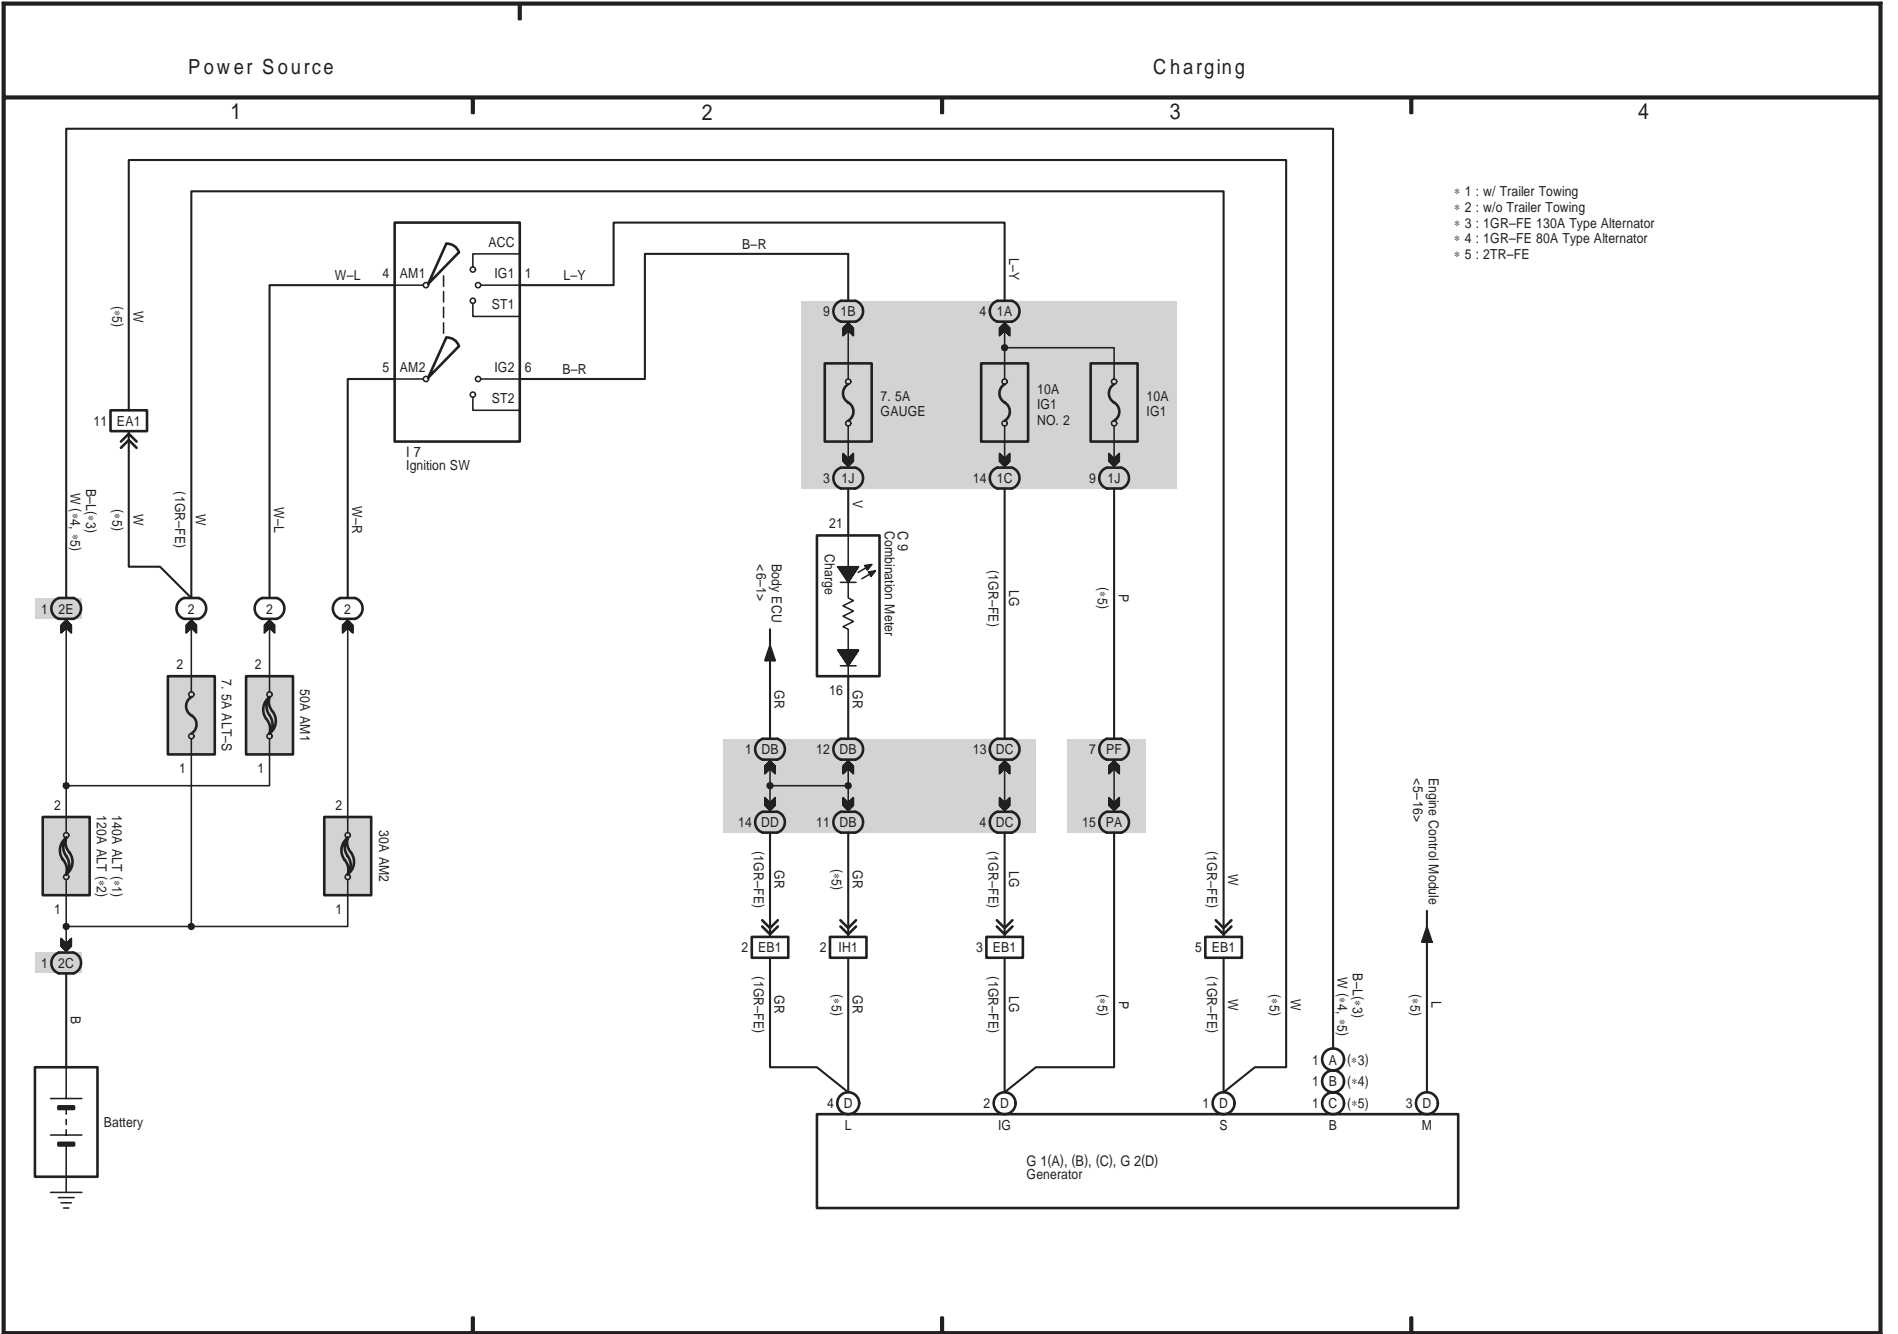


4 TOYOTA TACOMA

(Cont. next page)

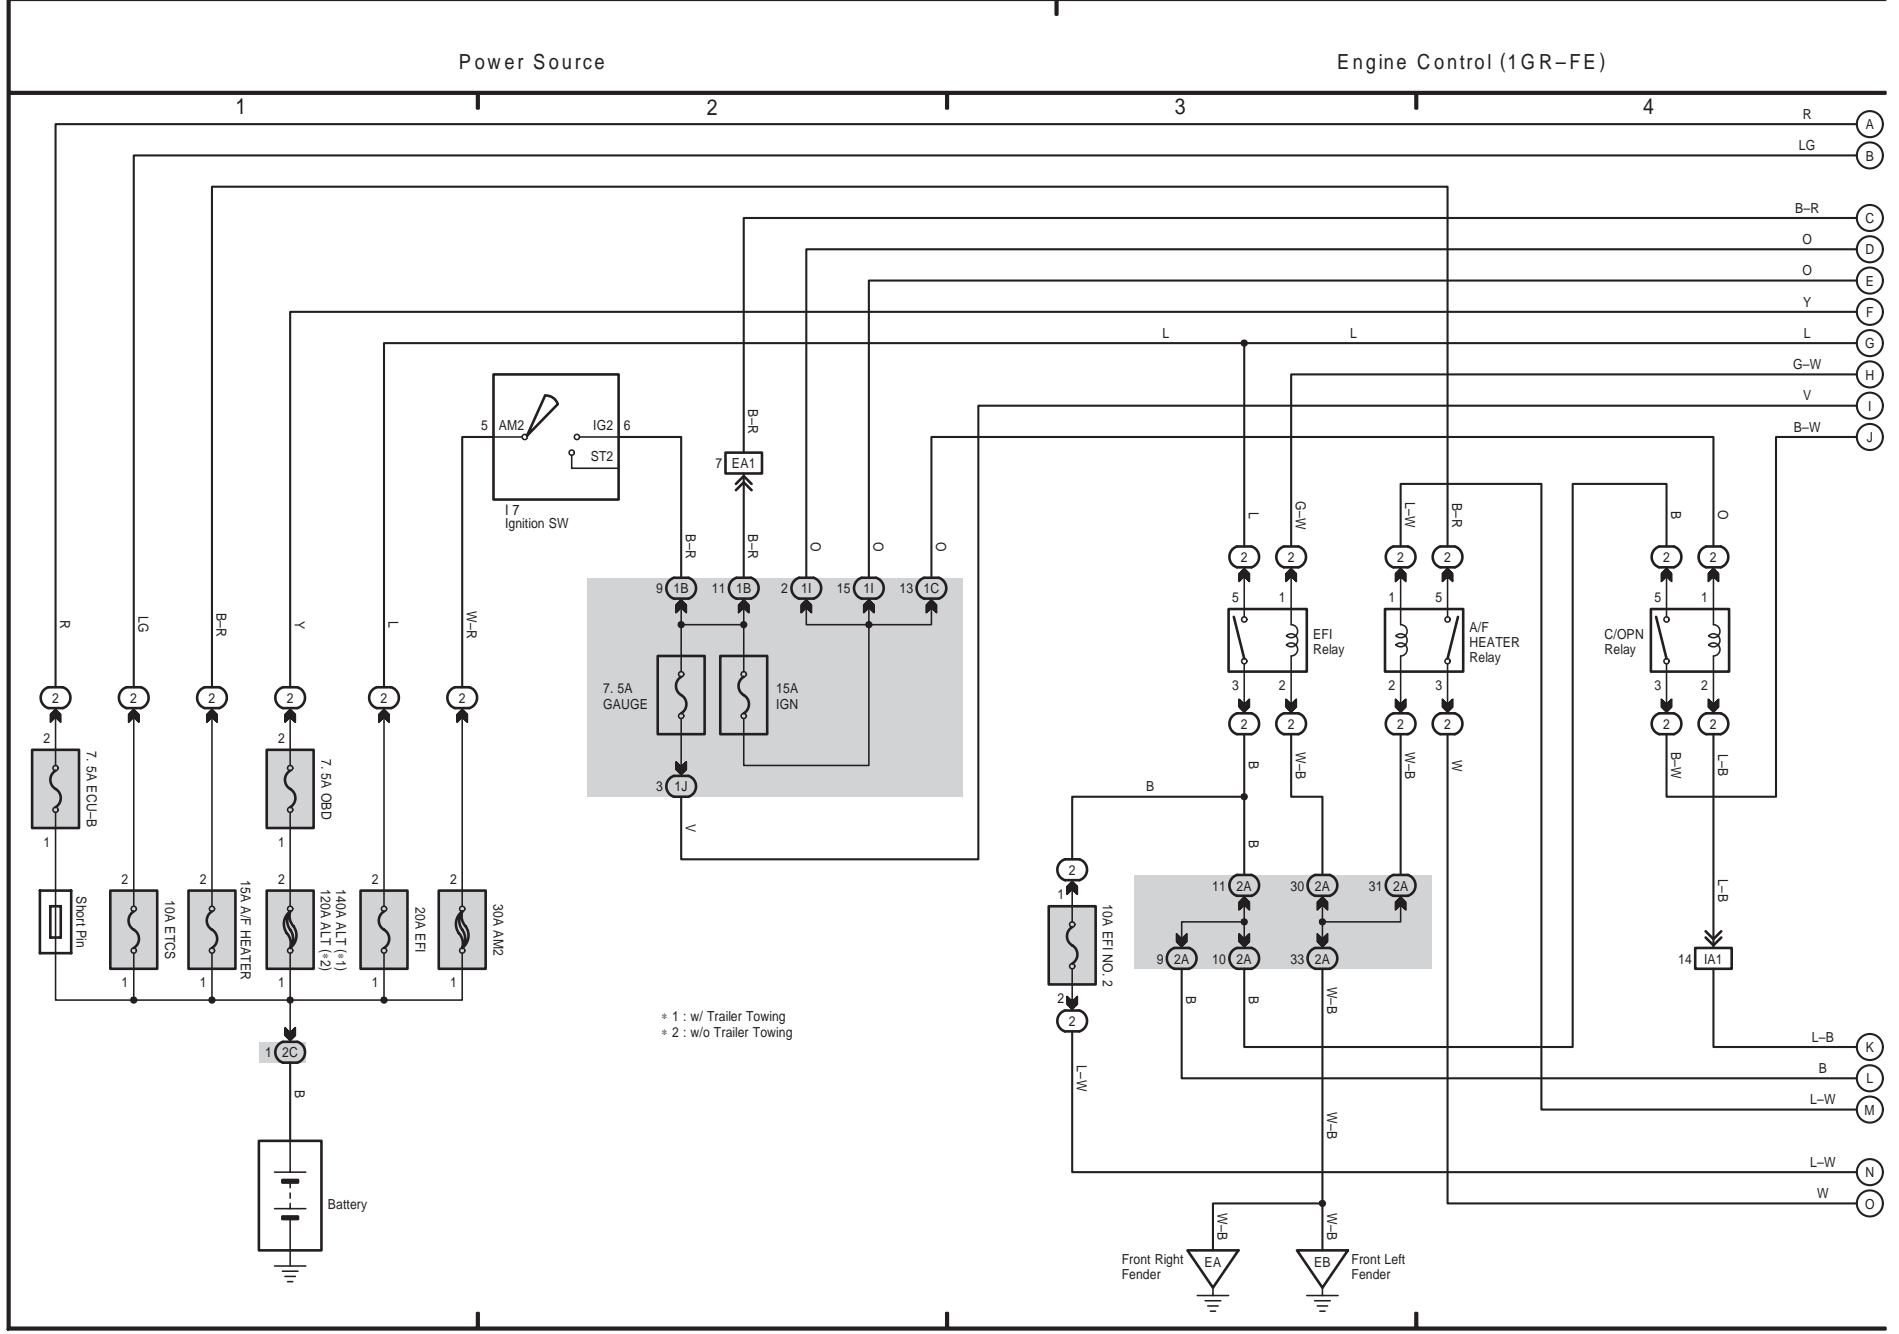

Engine Control (1GR-FE)

* 3 : Malfunction Indicator Lamp

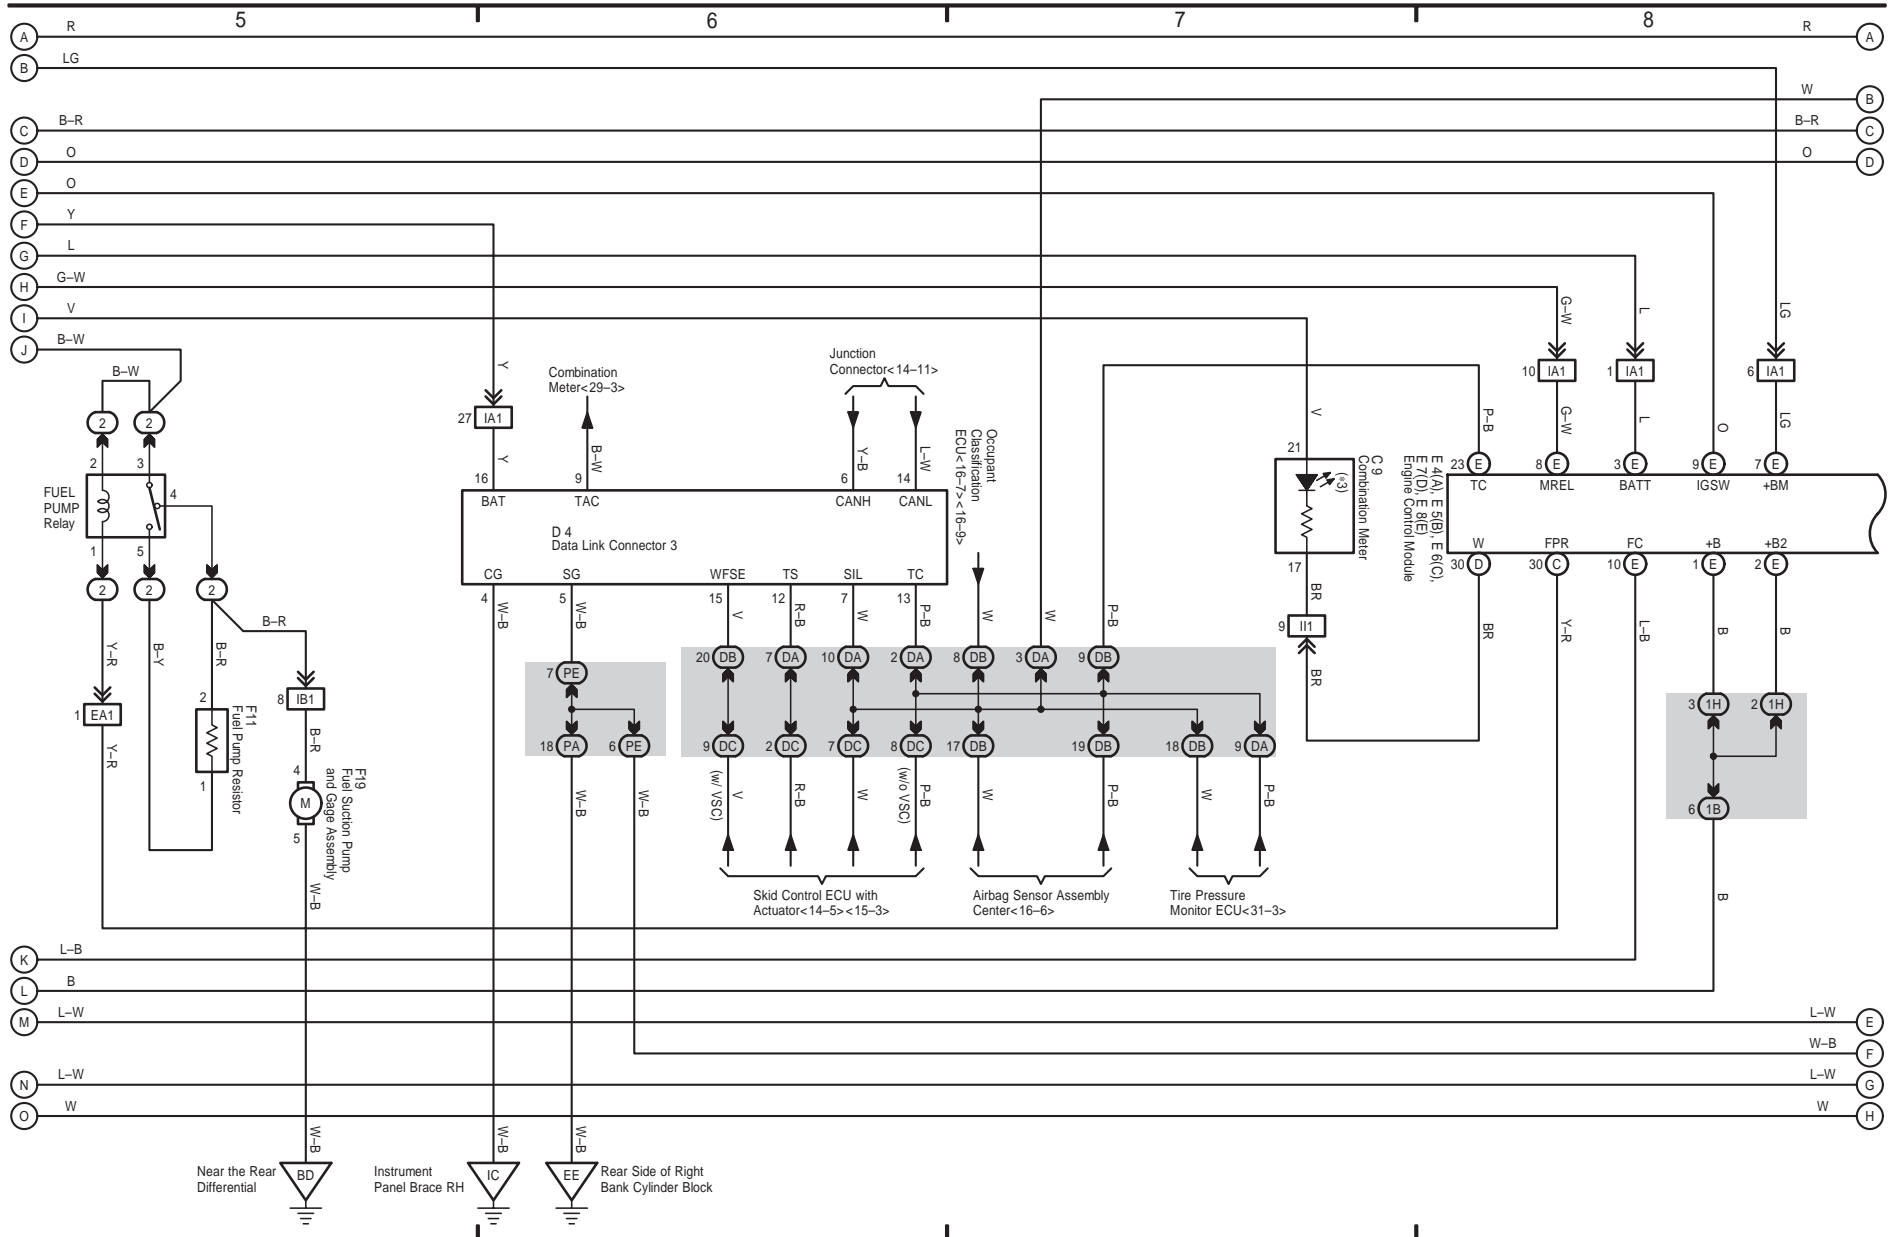


TOYOTA TACOMA (EM01D0U)




4 TOYOTA TACOMA (Cont' d)


(Cont. next page)

Engine Control (1GR-FE)

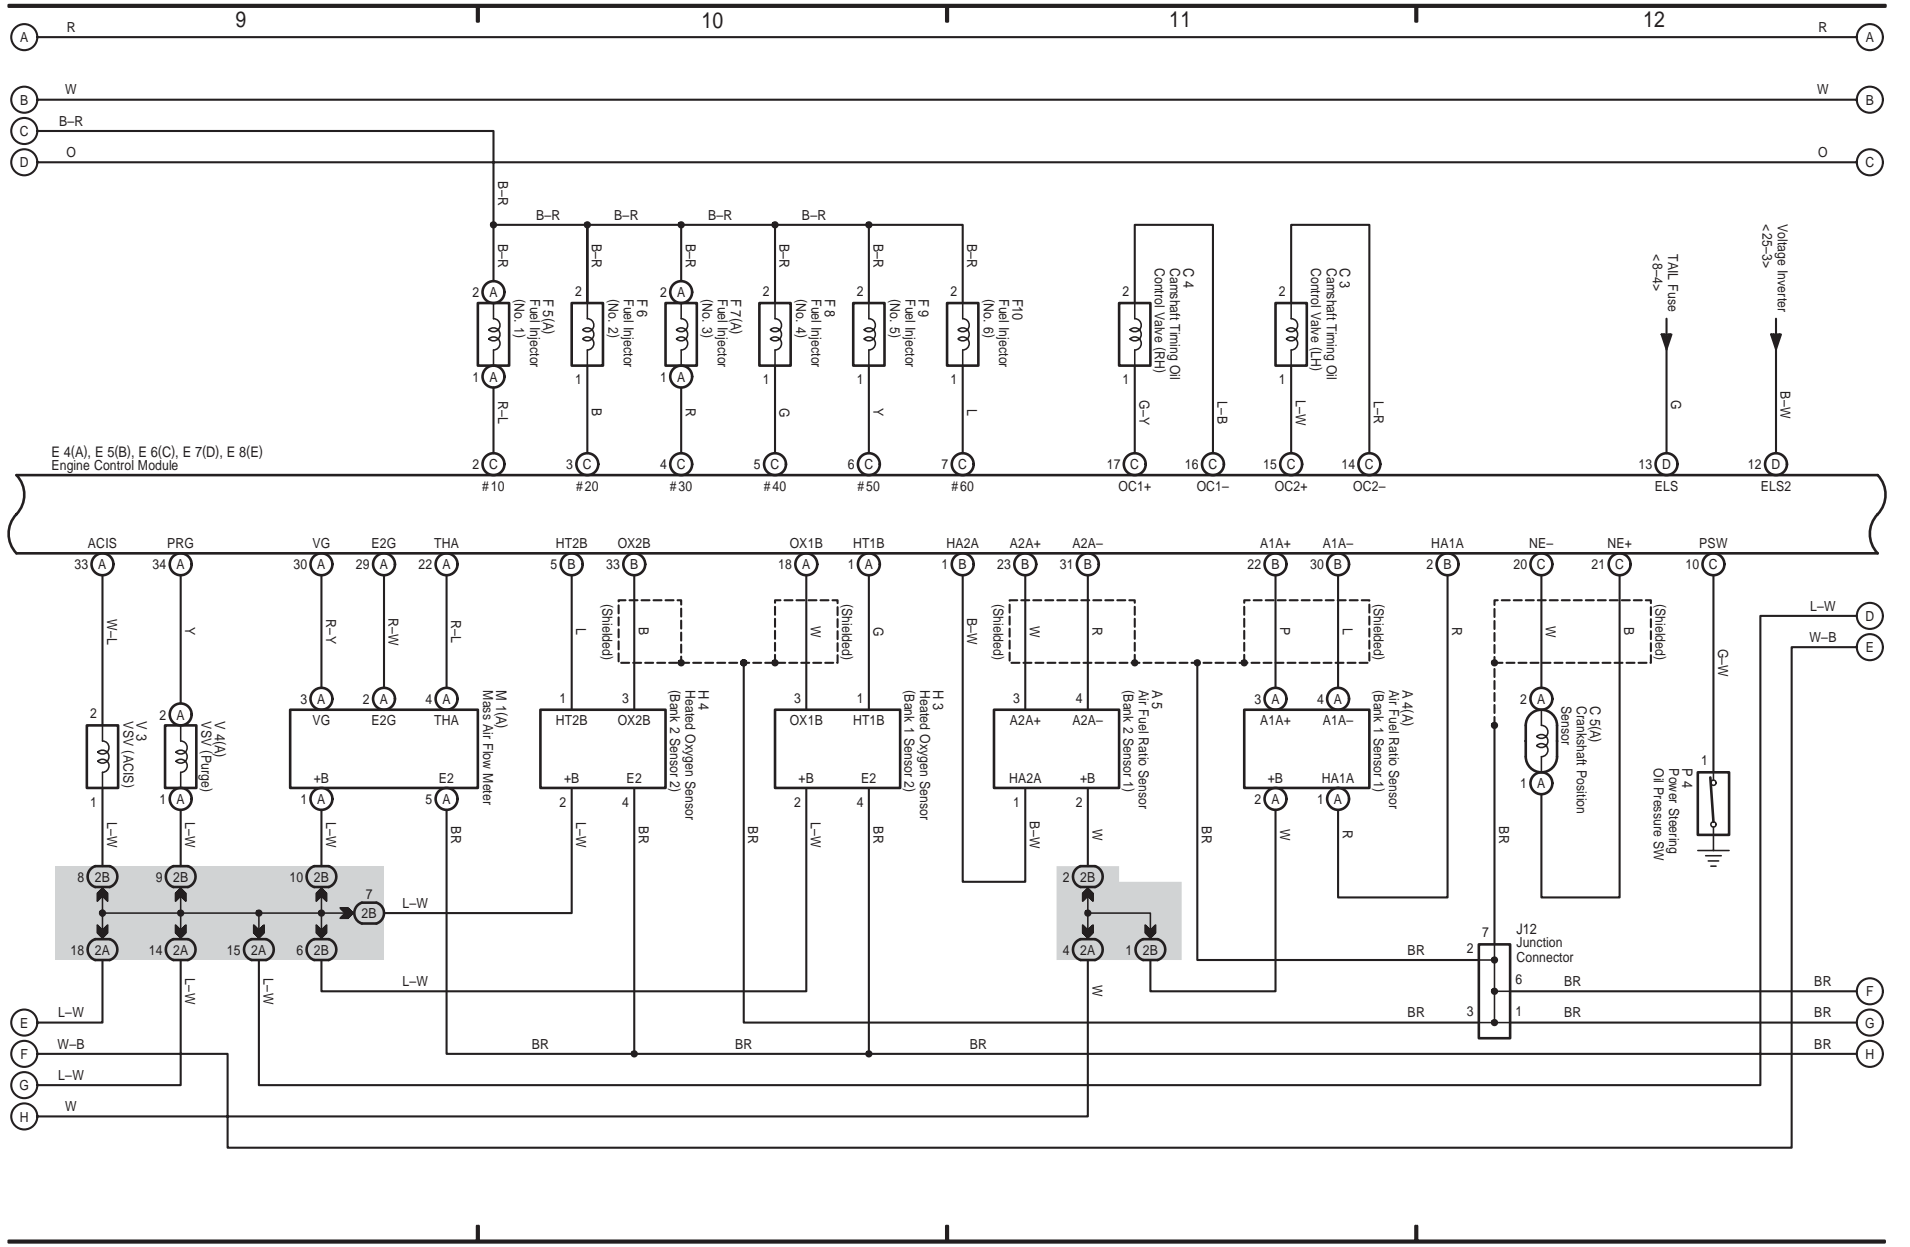


4 TOYOTA TACOMA (Cont' d)

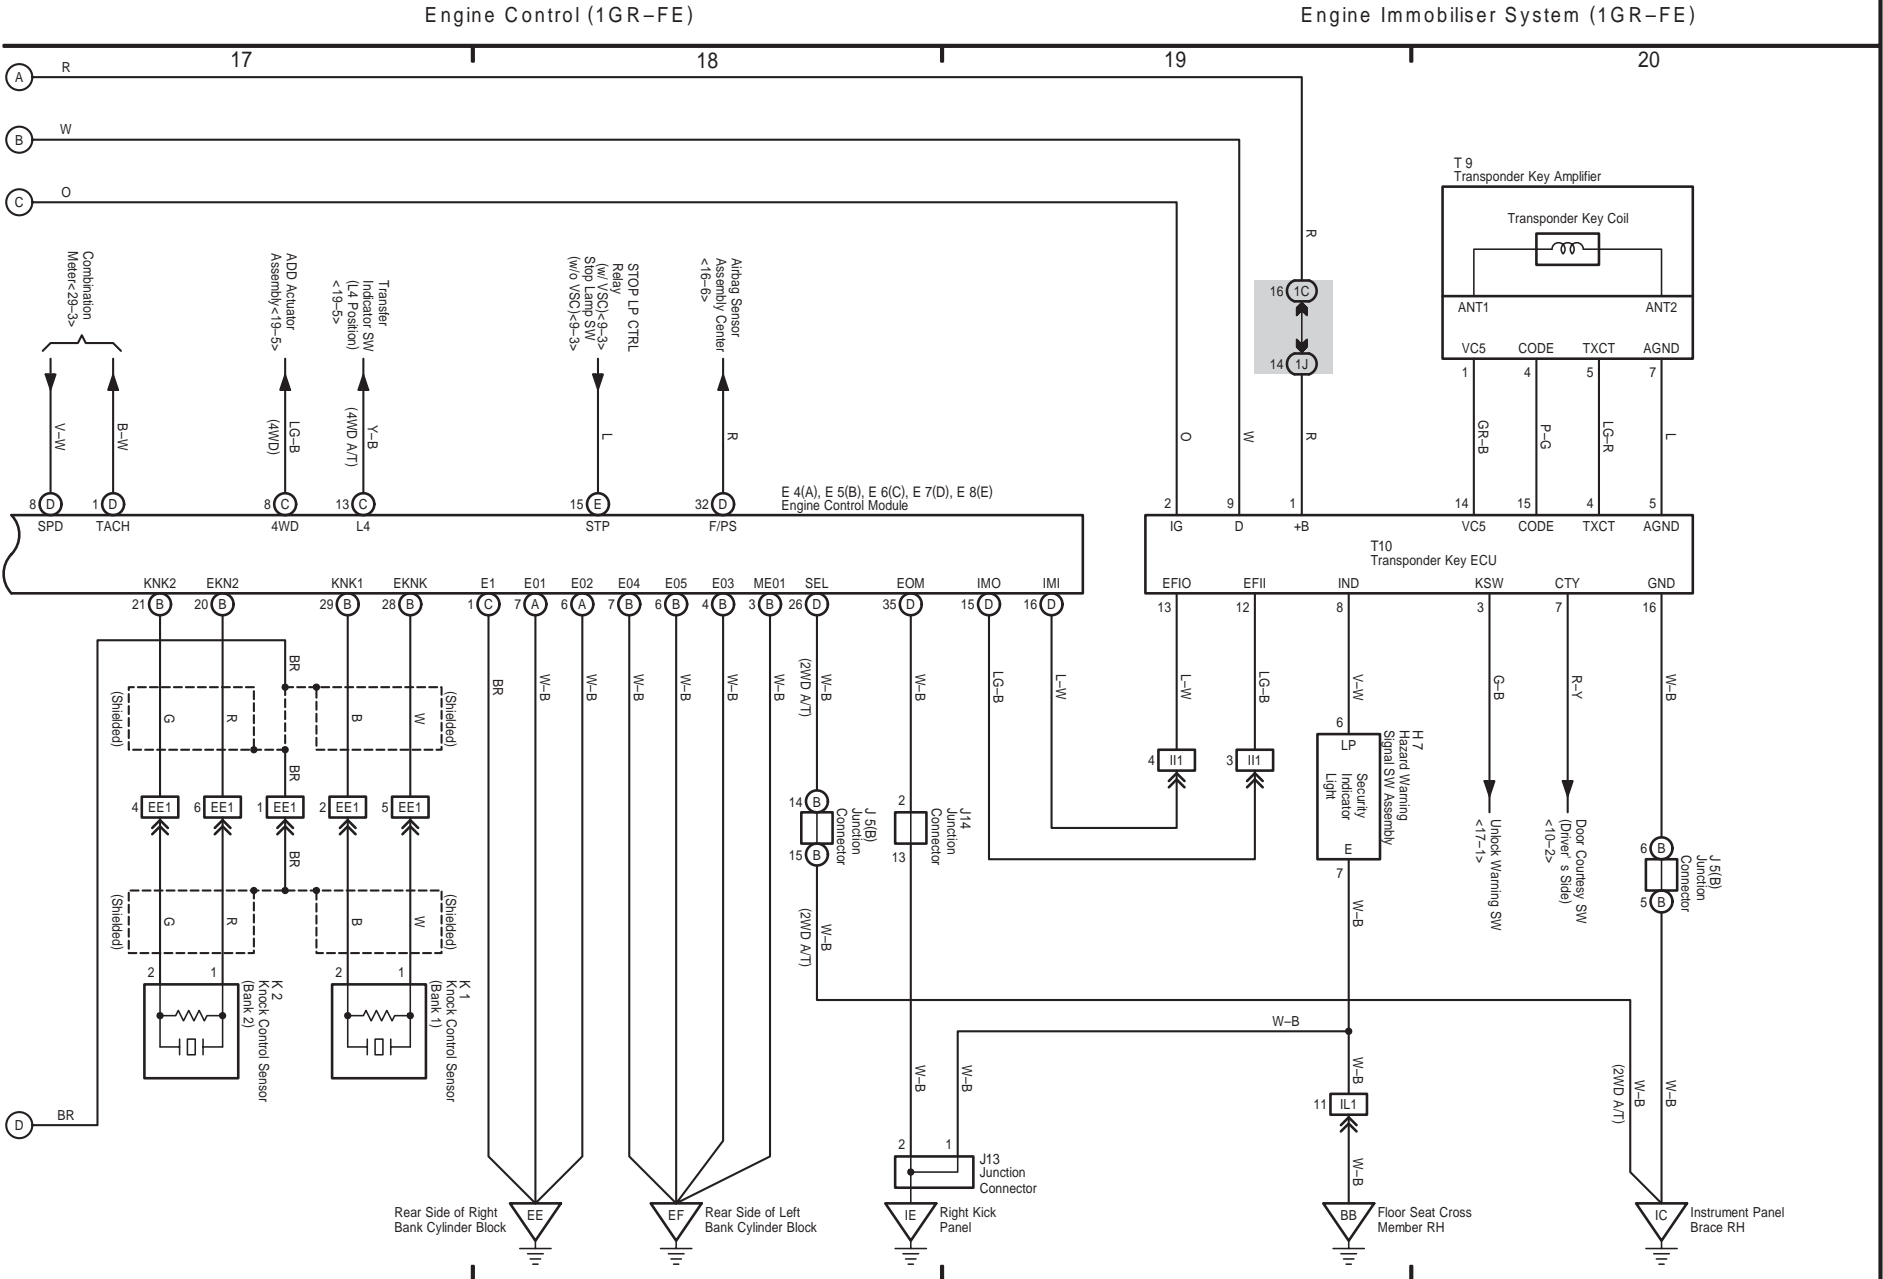

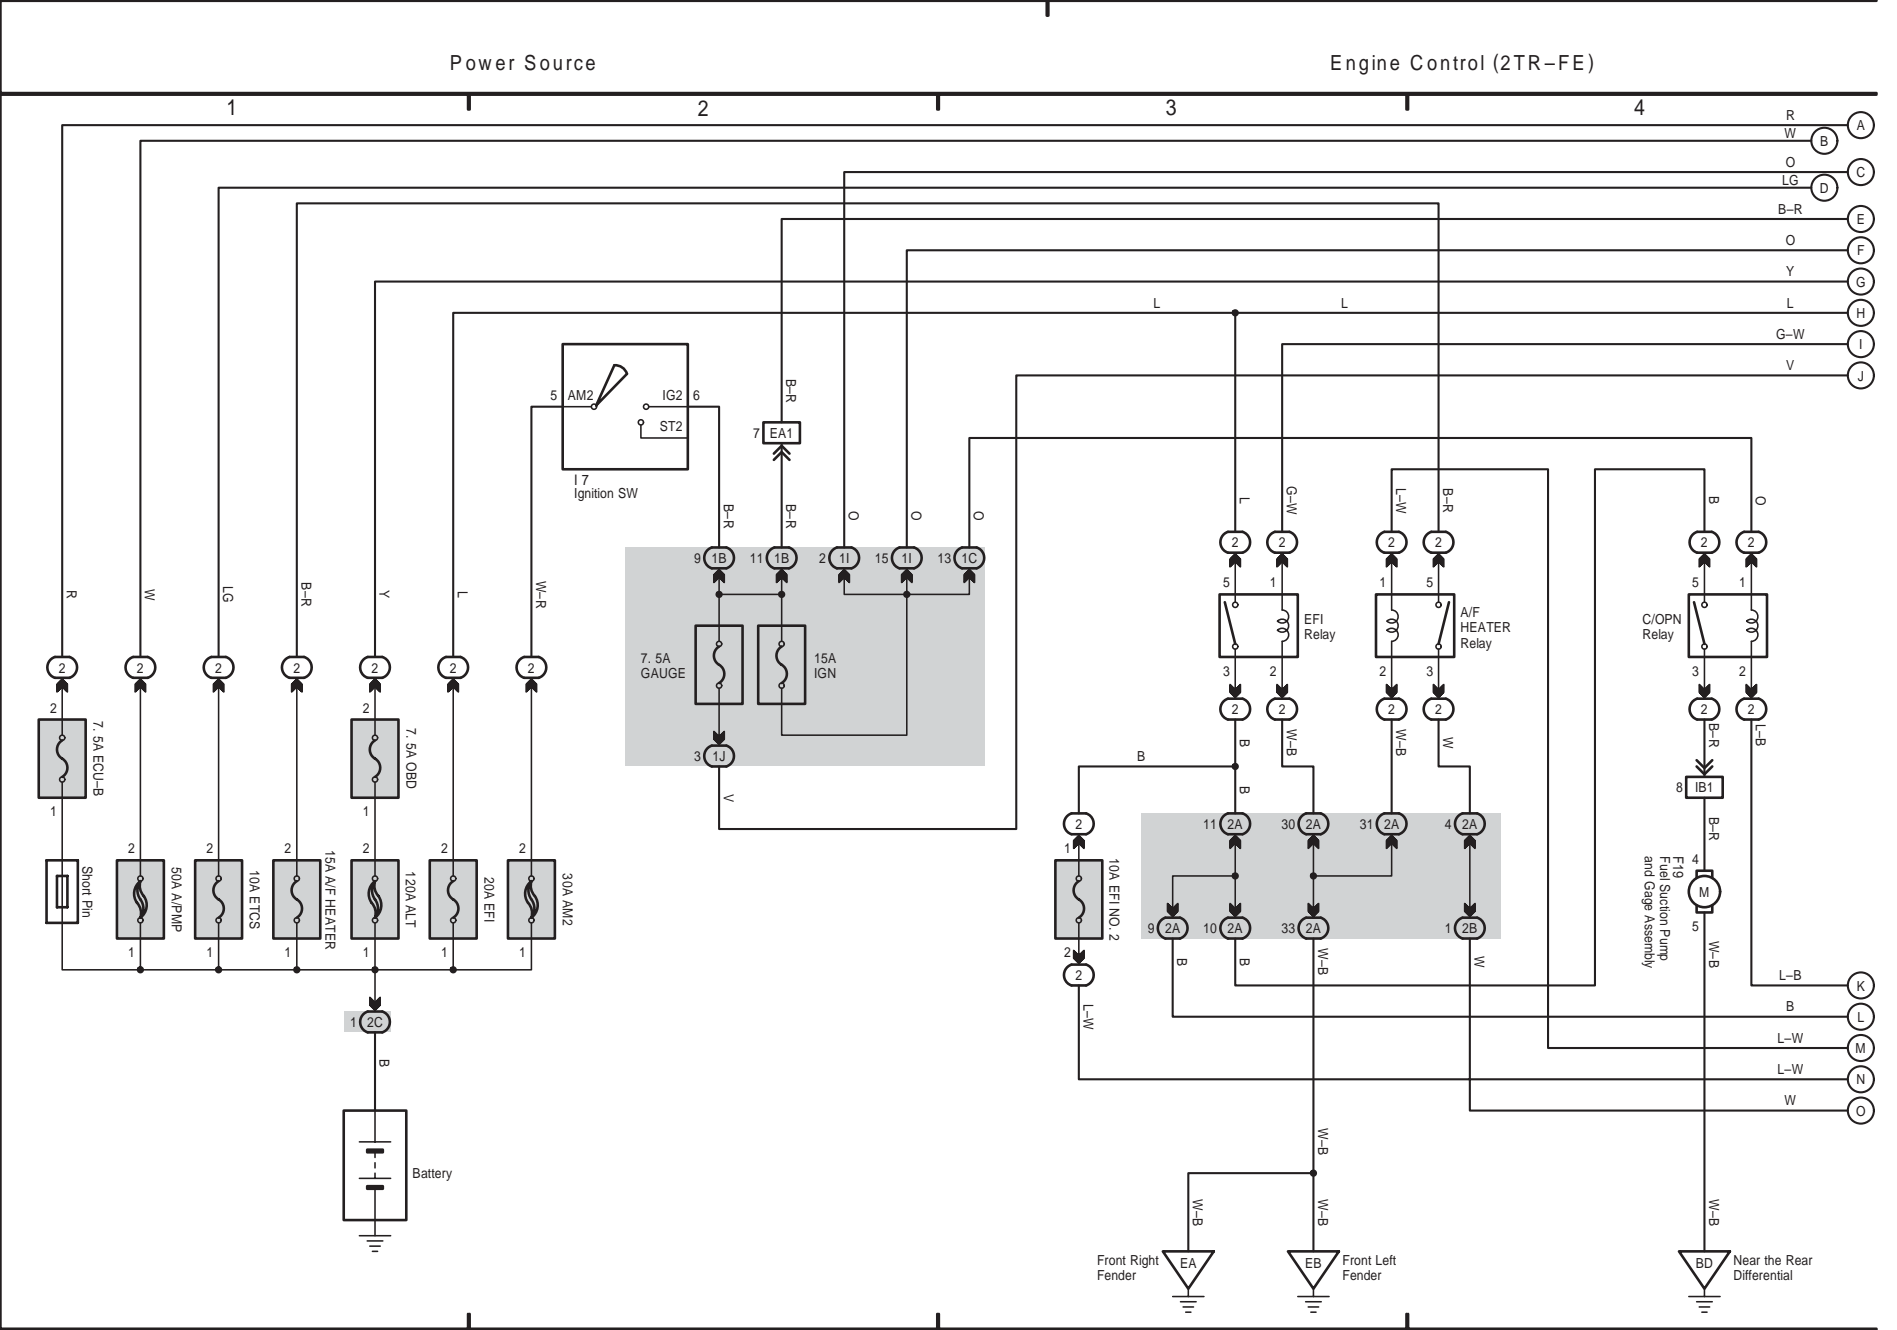

Engine Control (2TR-FE)


* 1 : Malfunction Indicator Lamp

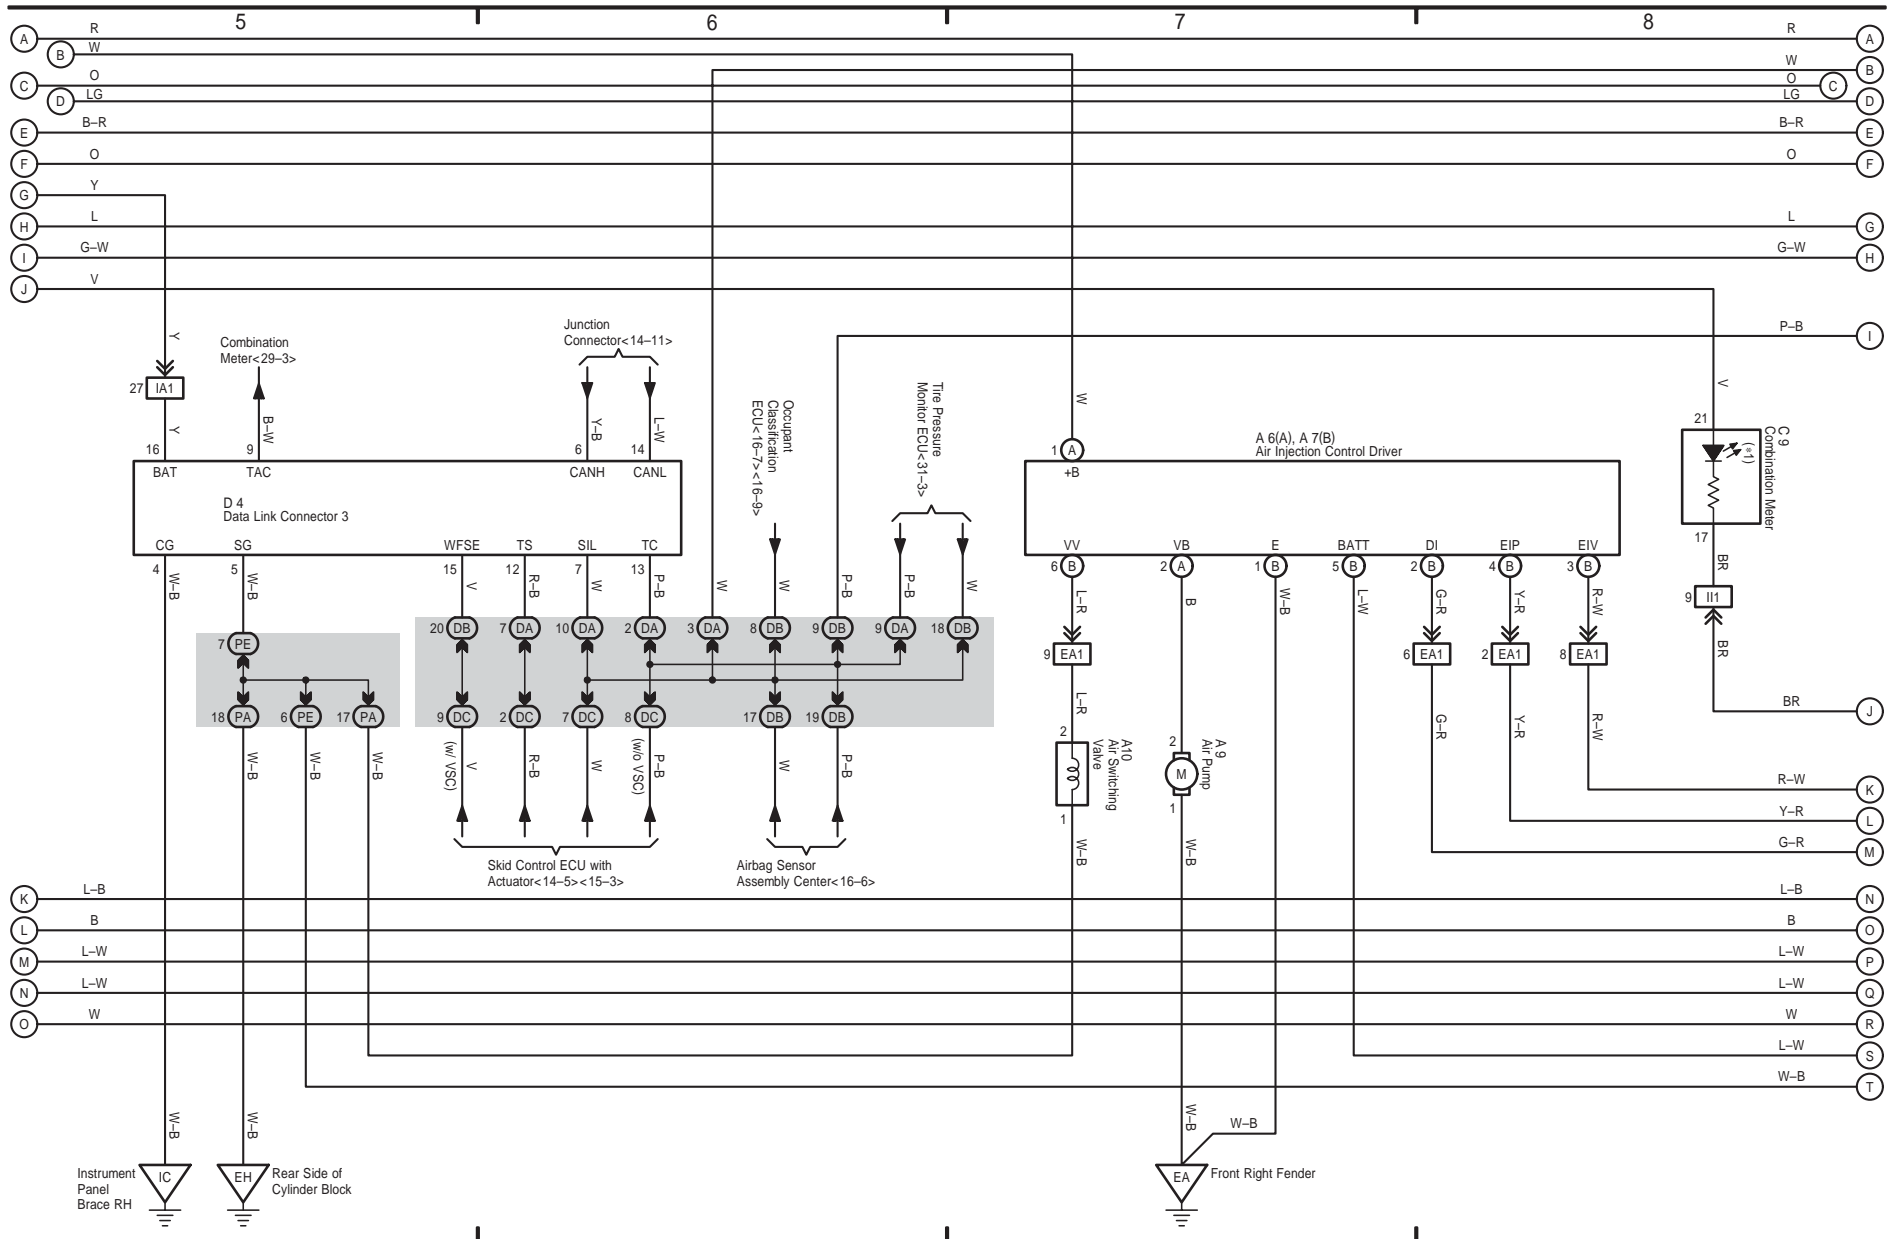


TOYOTA TACOMA (EM01D0U)



Engine Control (2TR-FE)

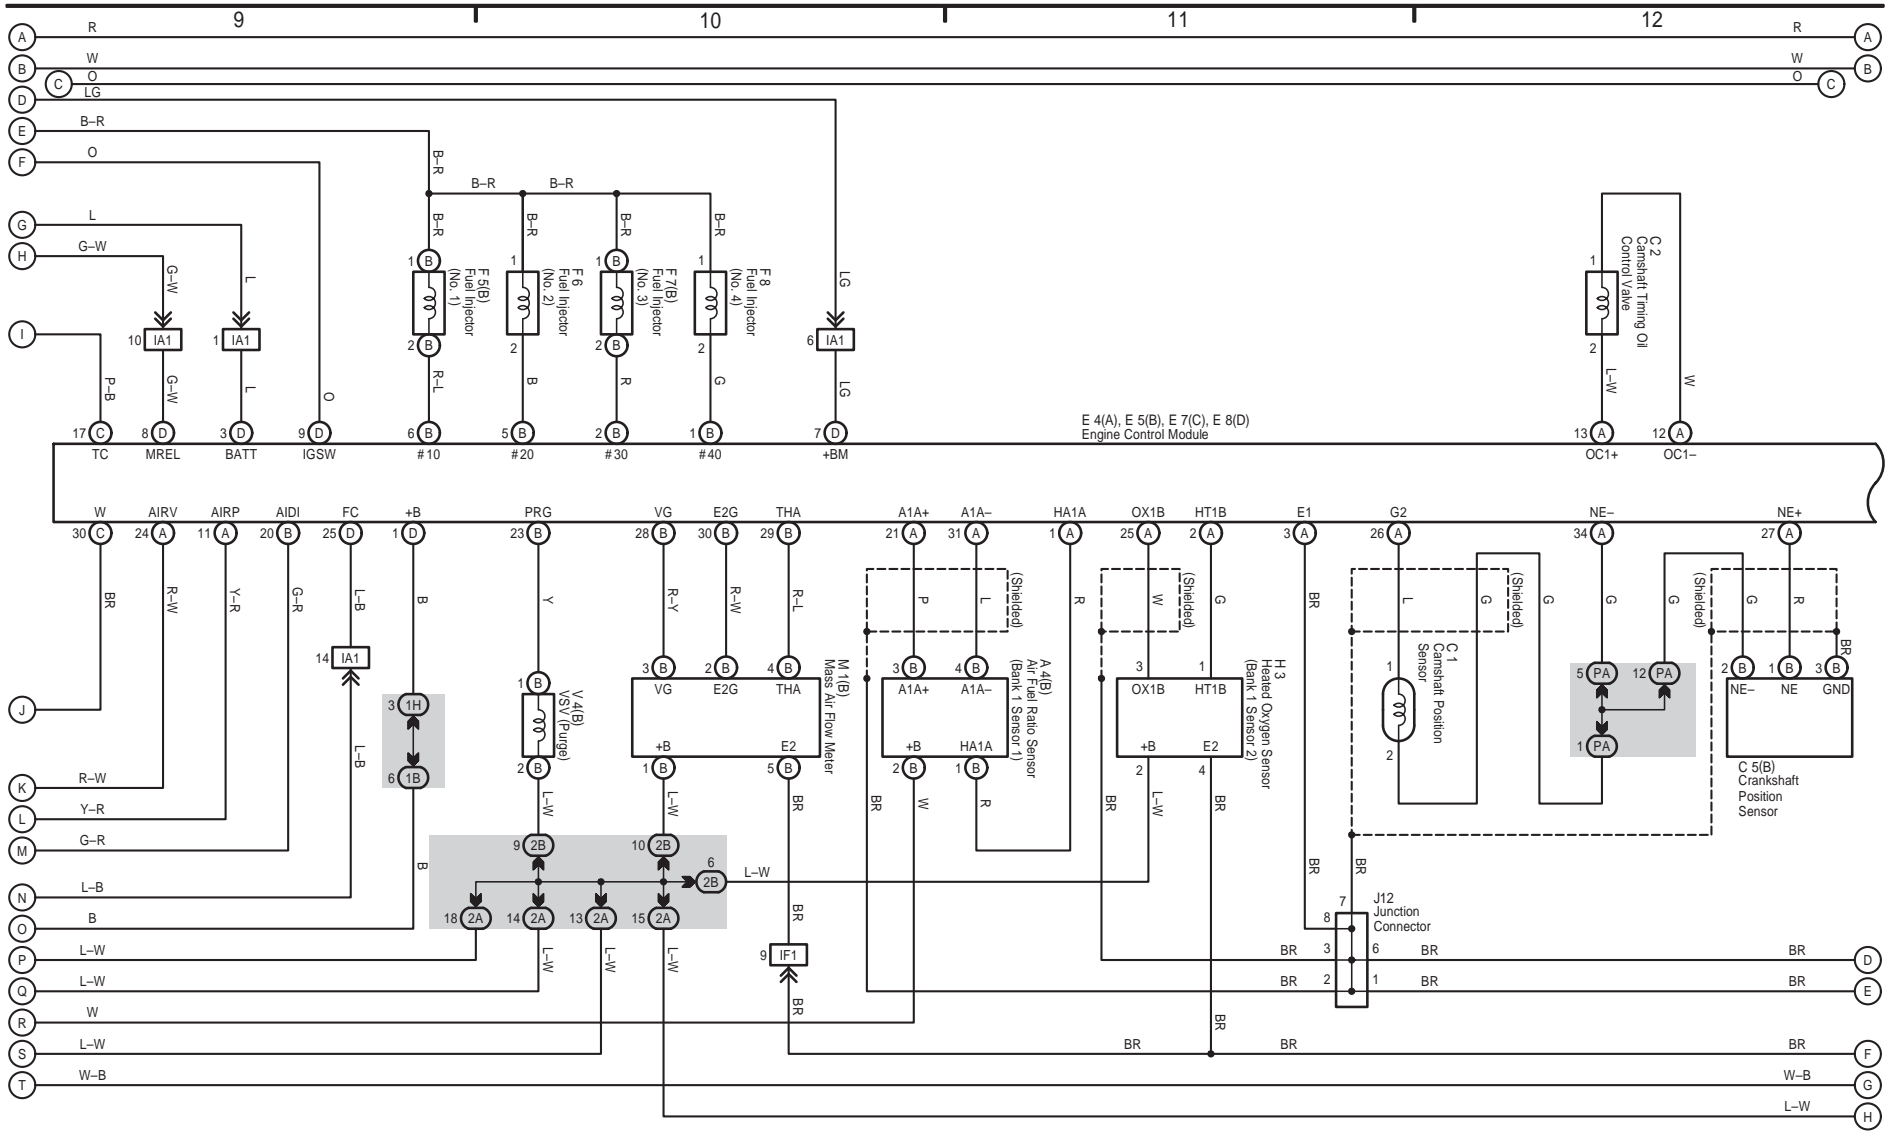


Engine Control (2TR-FE)

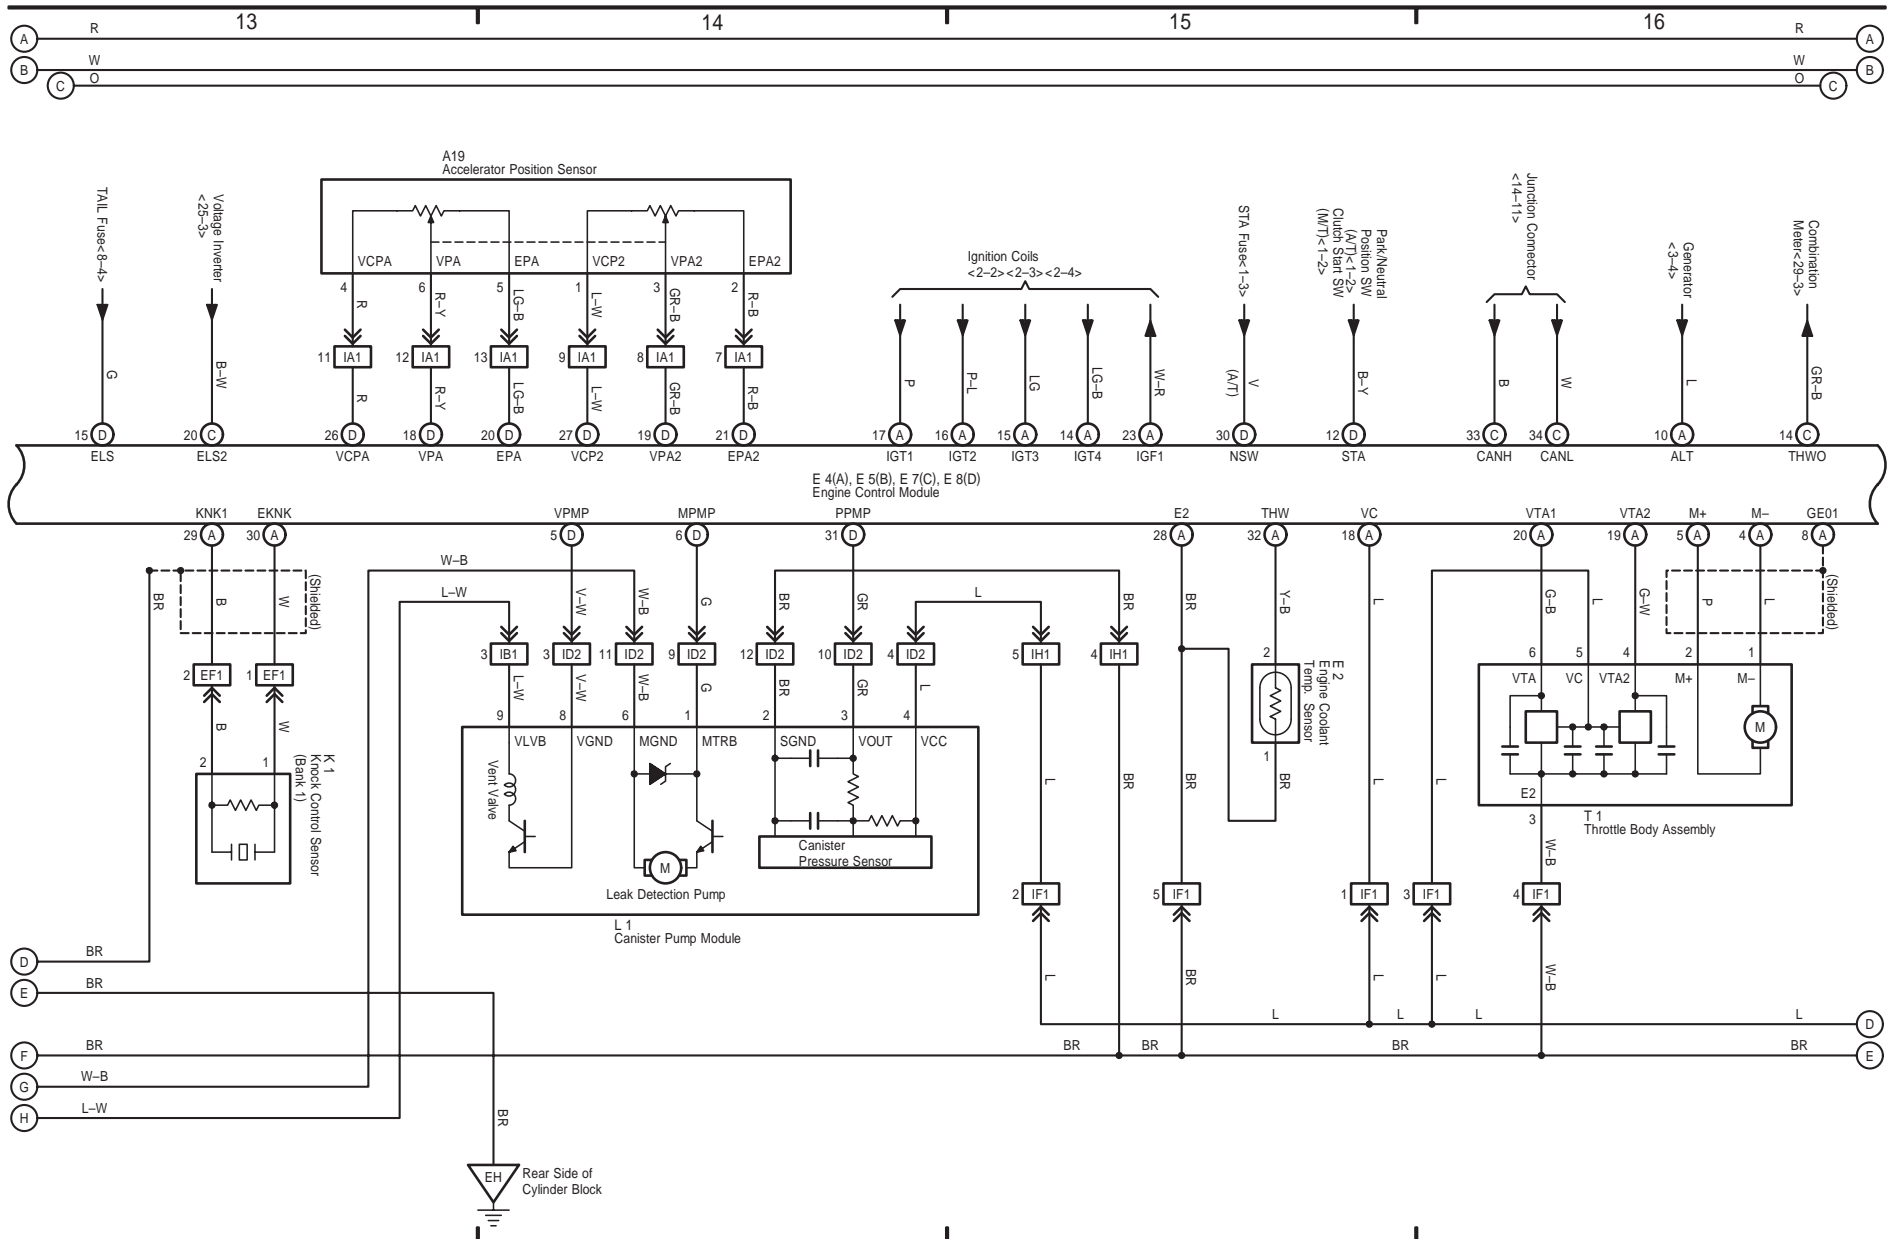

TOYOTA TACOMA (EM01D0U)



5 TOYOTA TACOMA (Cont' d)

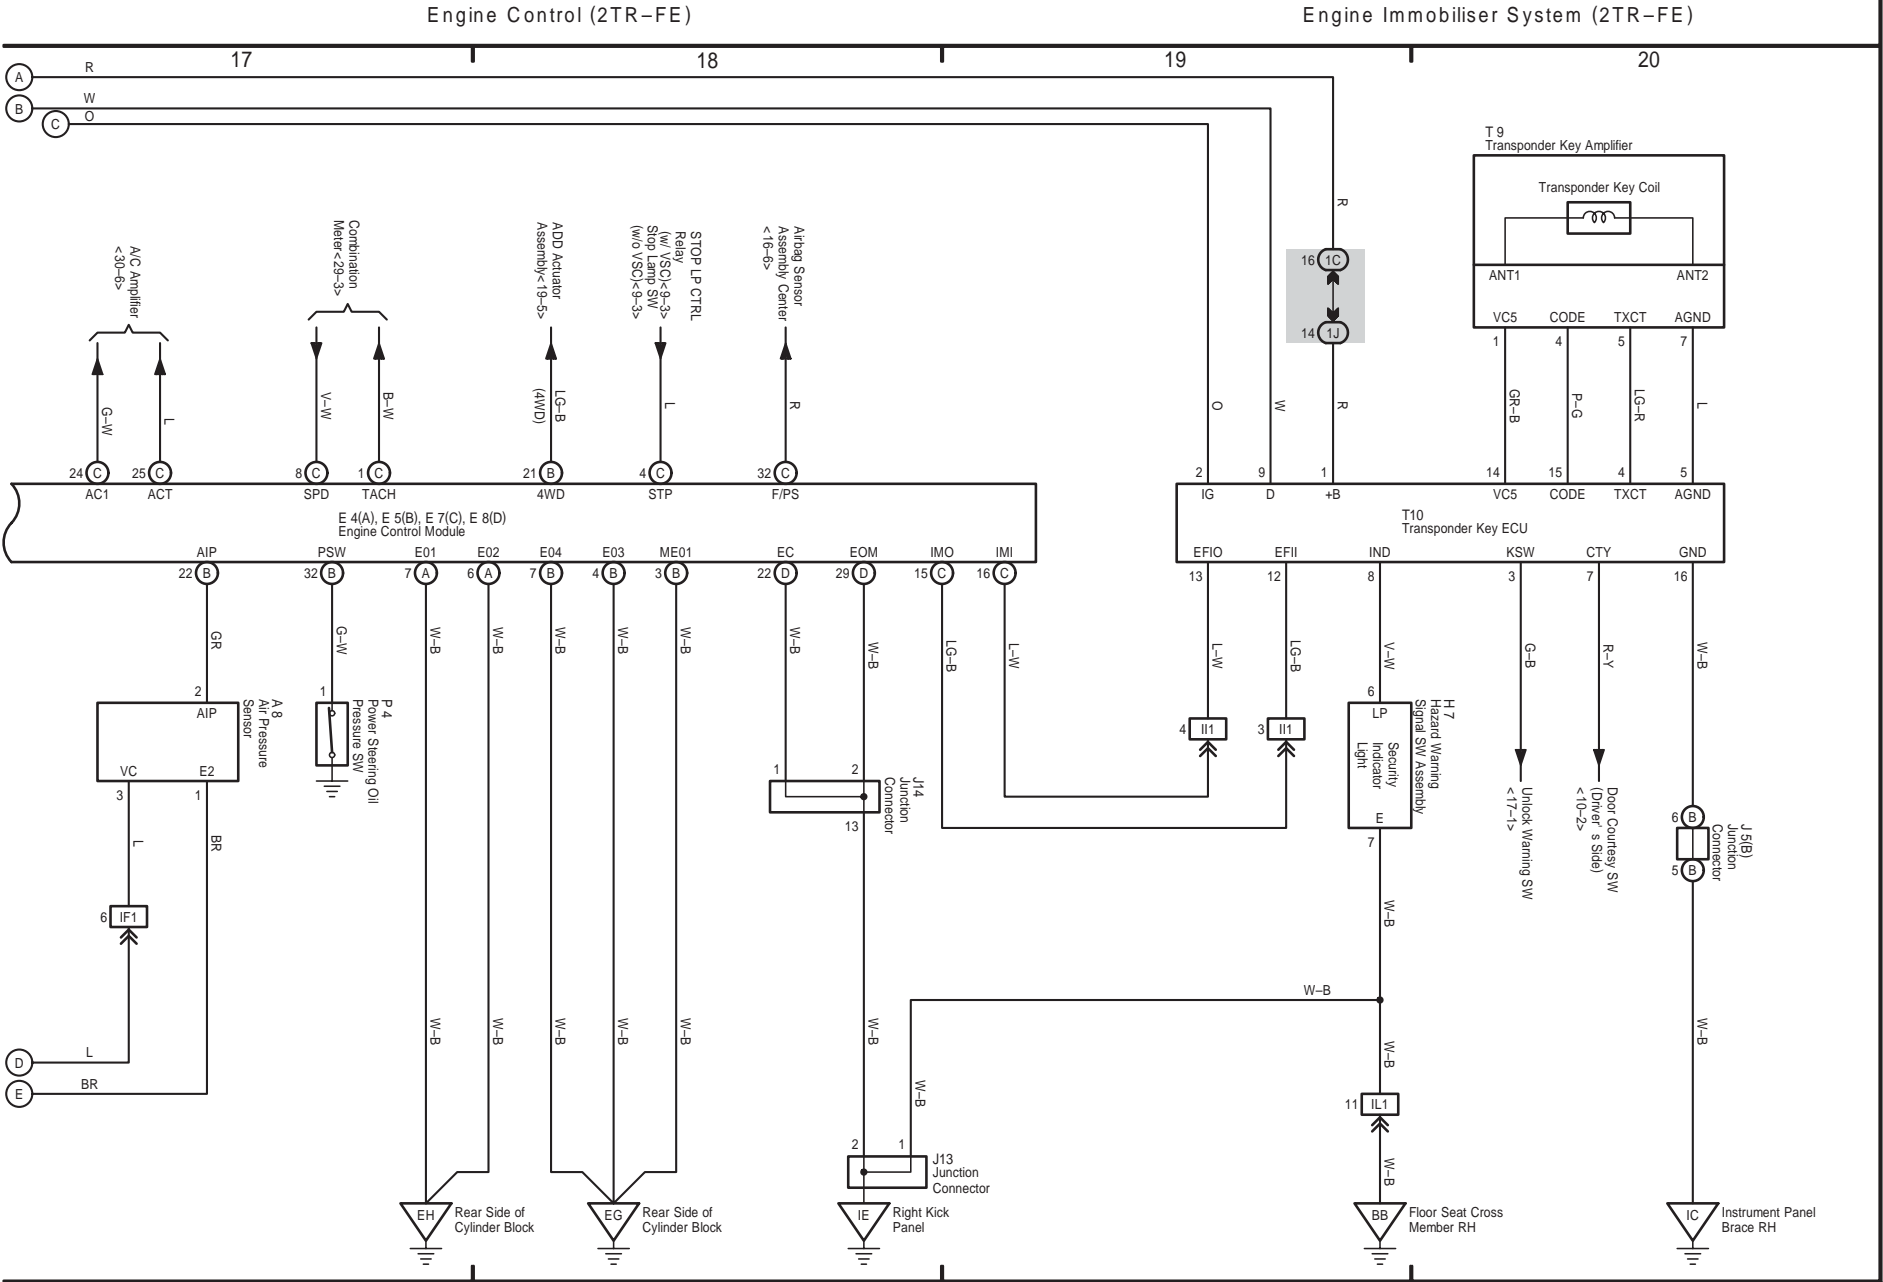


6 TOYOTA TACOMA

Power Source

Headlight

Front Fog Light

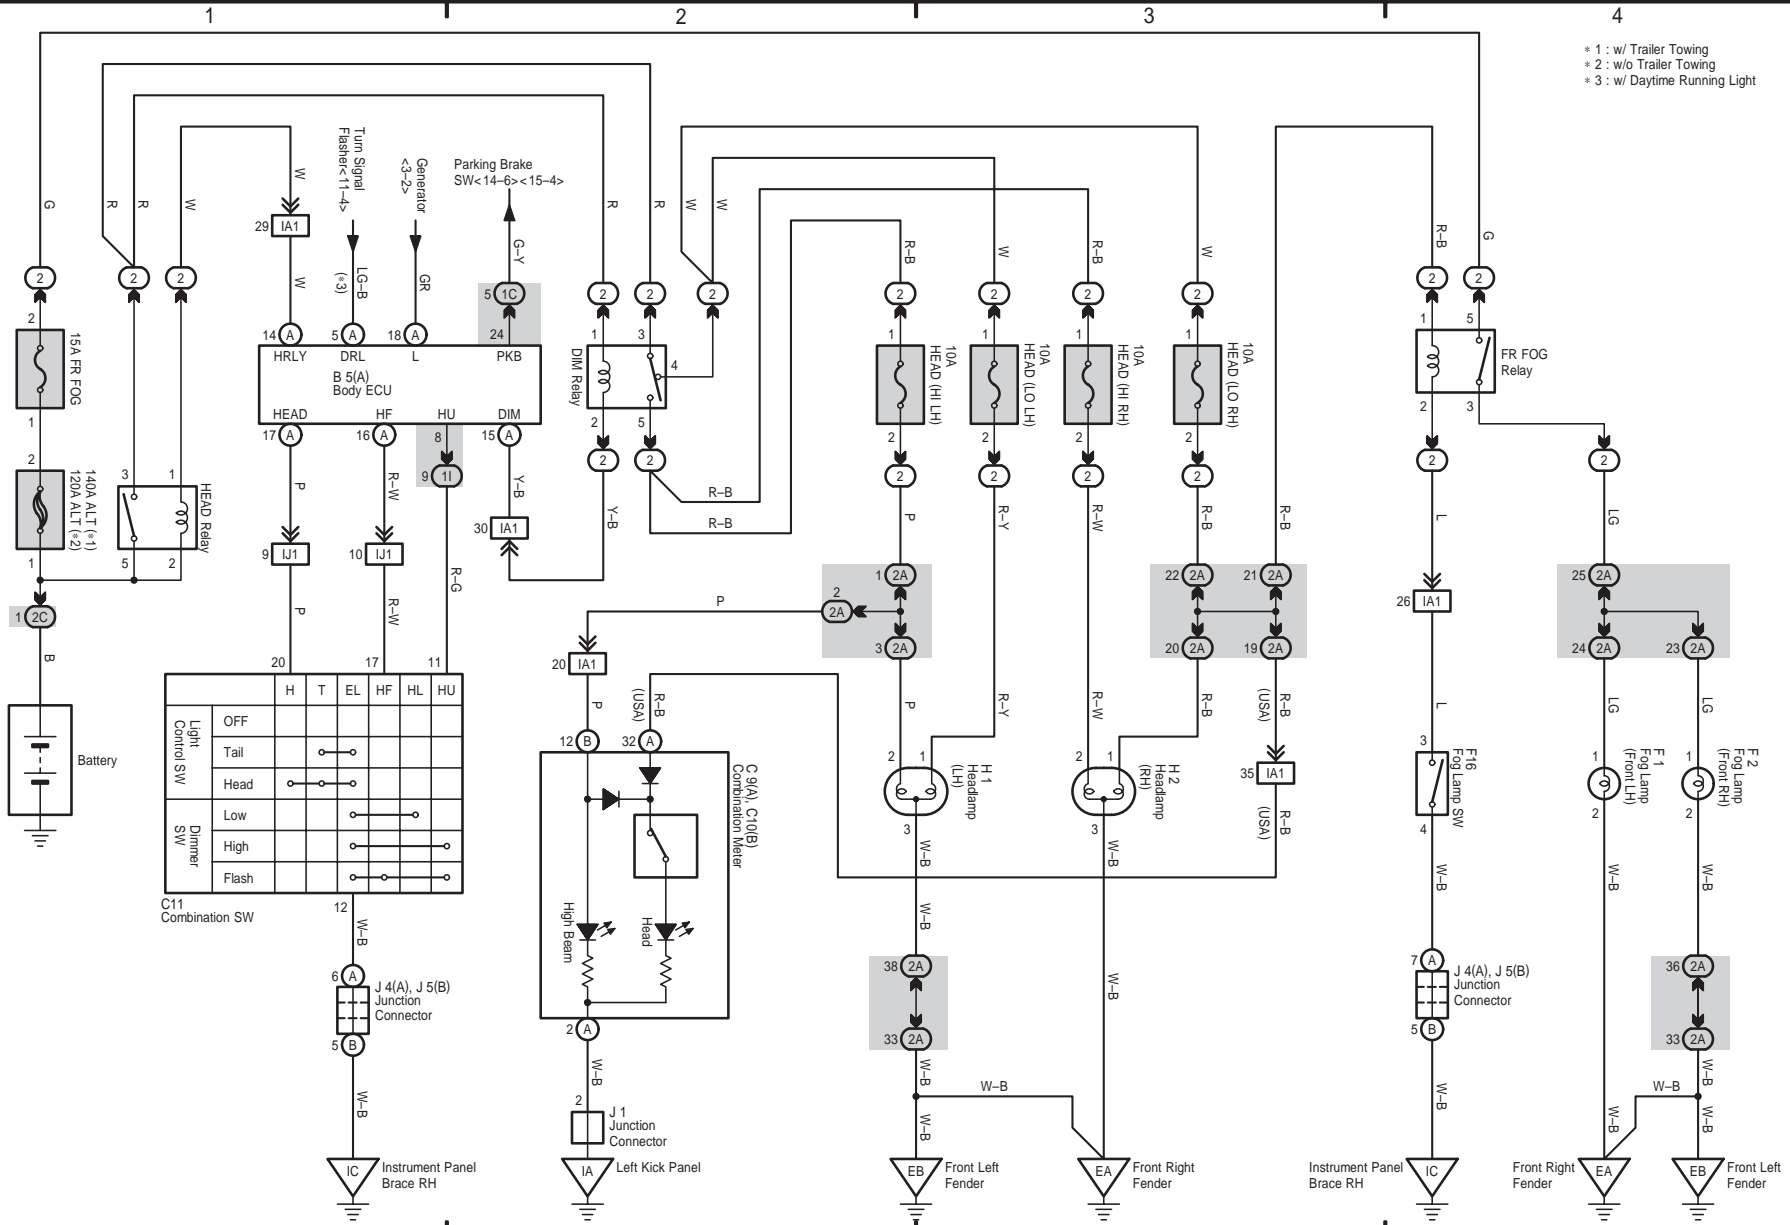


TOYOTA TACOMA (EM01D0U)




7 TOYOTA TACOMA

(Cont. next page)

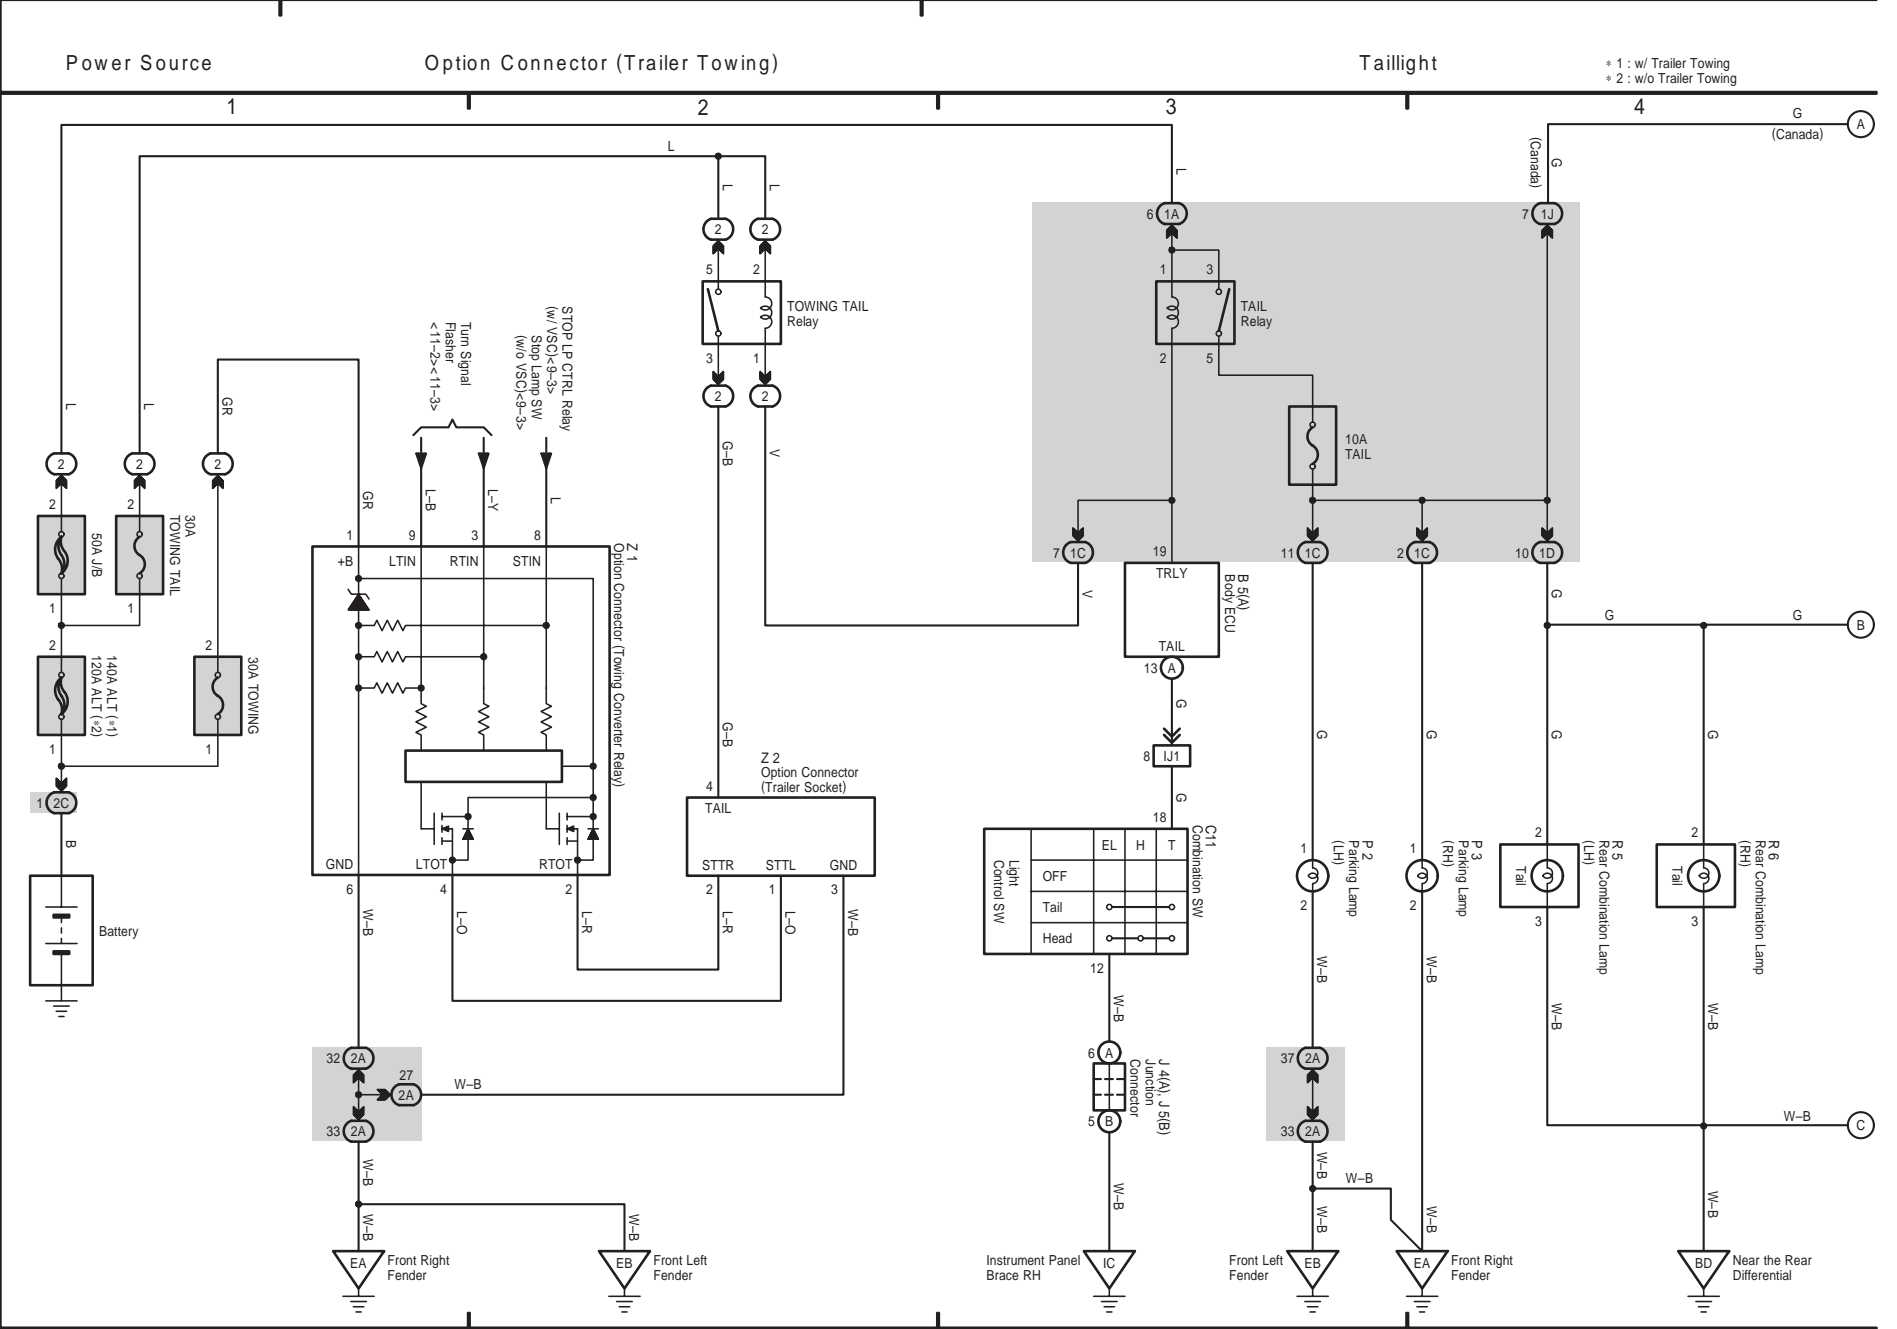

7 TOYOTA TACOMA (Cont' d)

Taillight

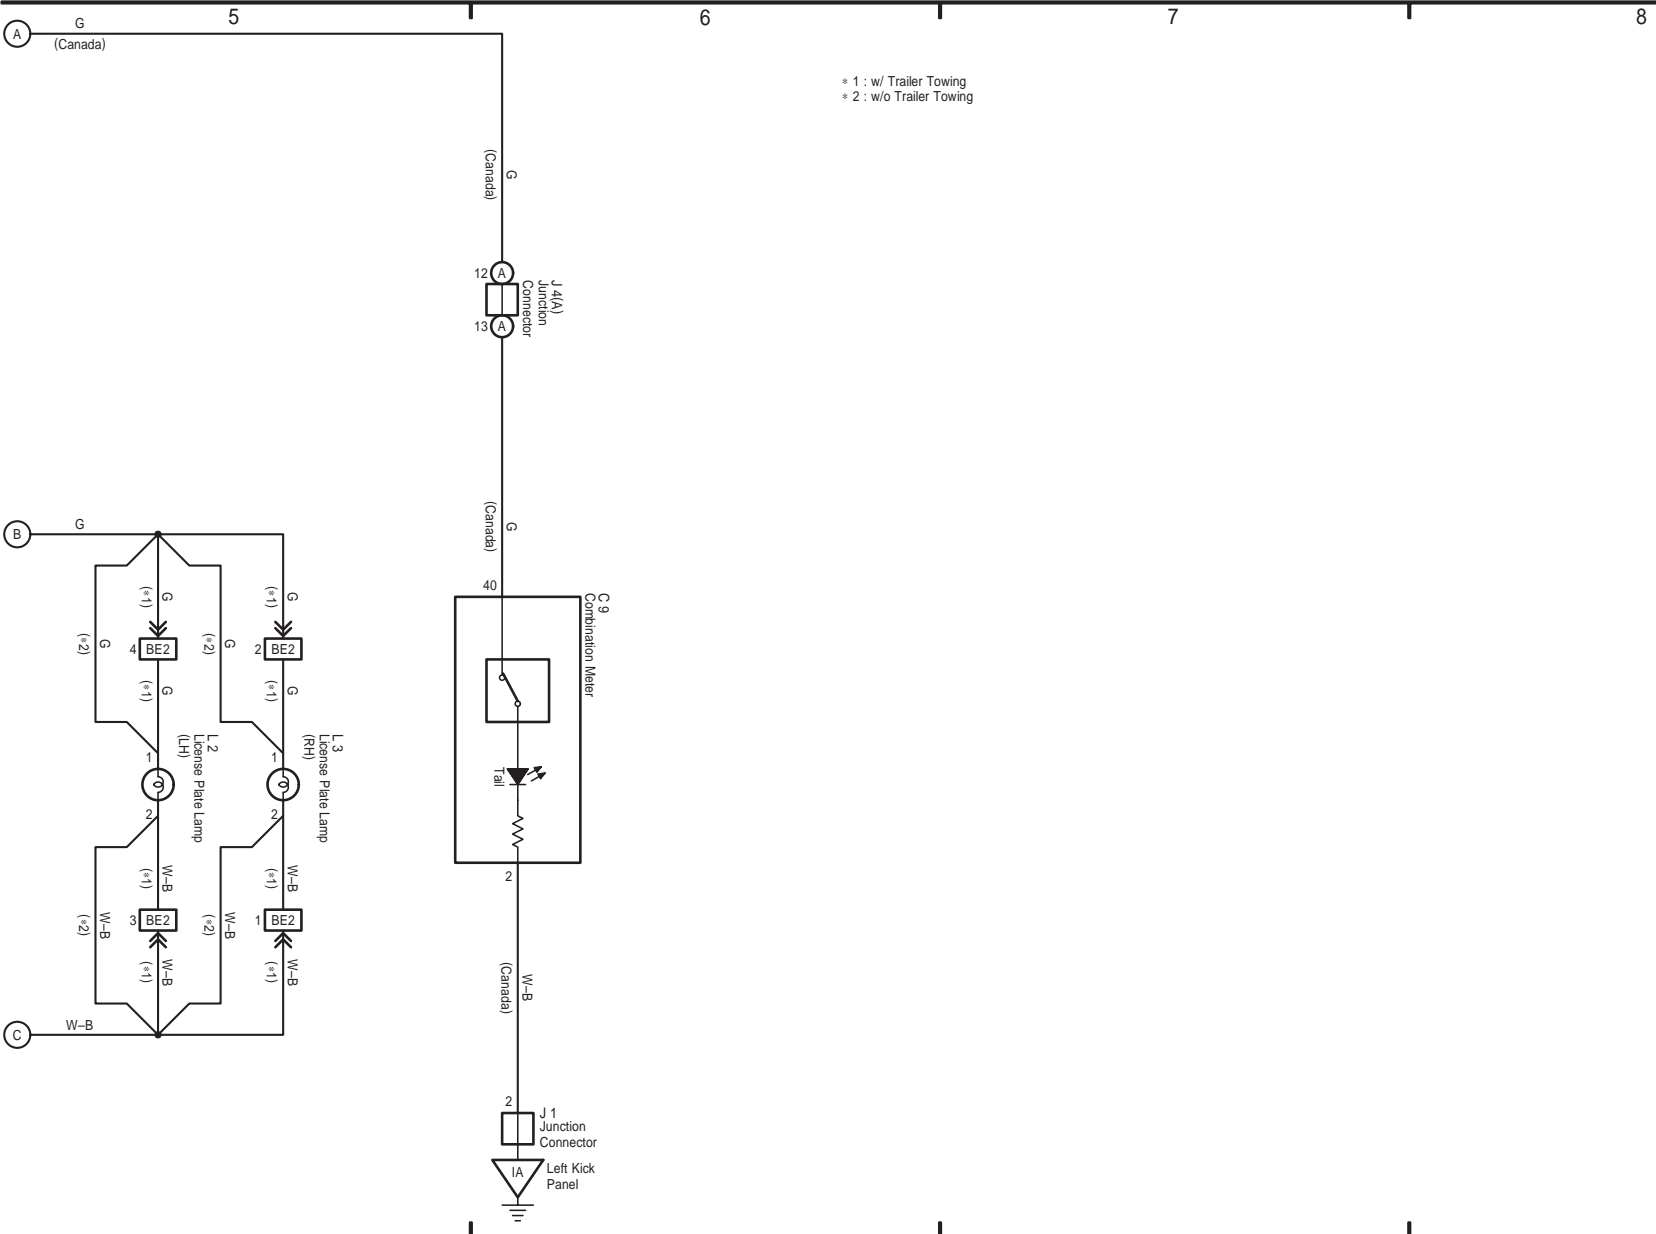

TOYOTA TACOMA (EM01D0U)


8 TOYOTA TACOMA

Power Source

Illumination

* 1 : w/ Trailer Towing
* 2 : w/o Trailer Towing

* 3 : w/ Downhill Assist Control
* 4 : Separate Type Amplifier
* 5 : Built-in Type Amplifier

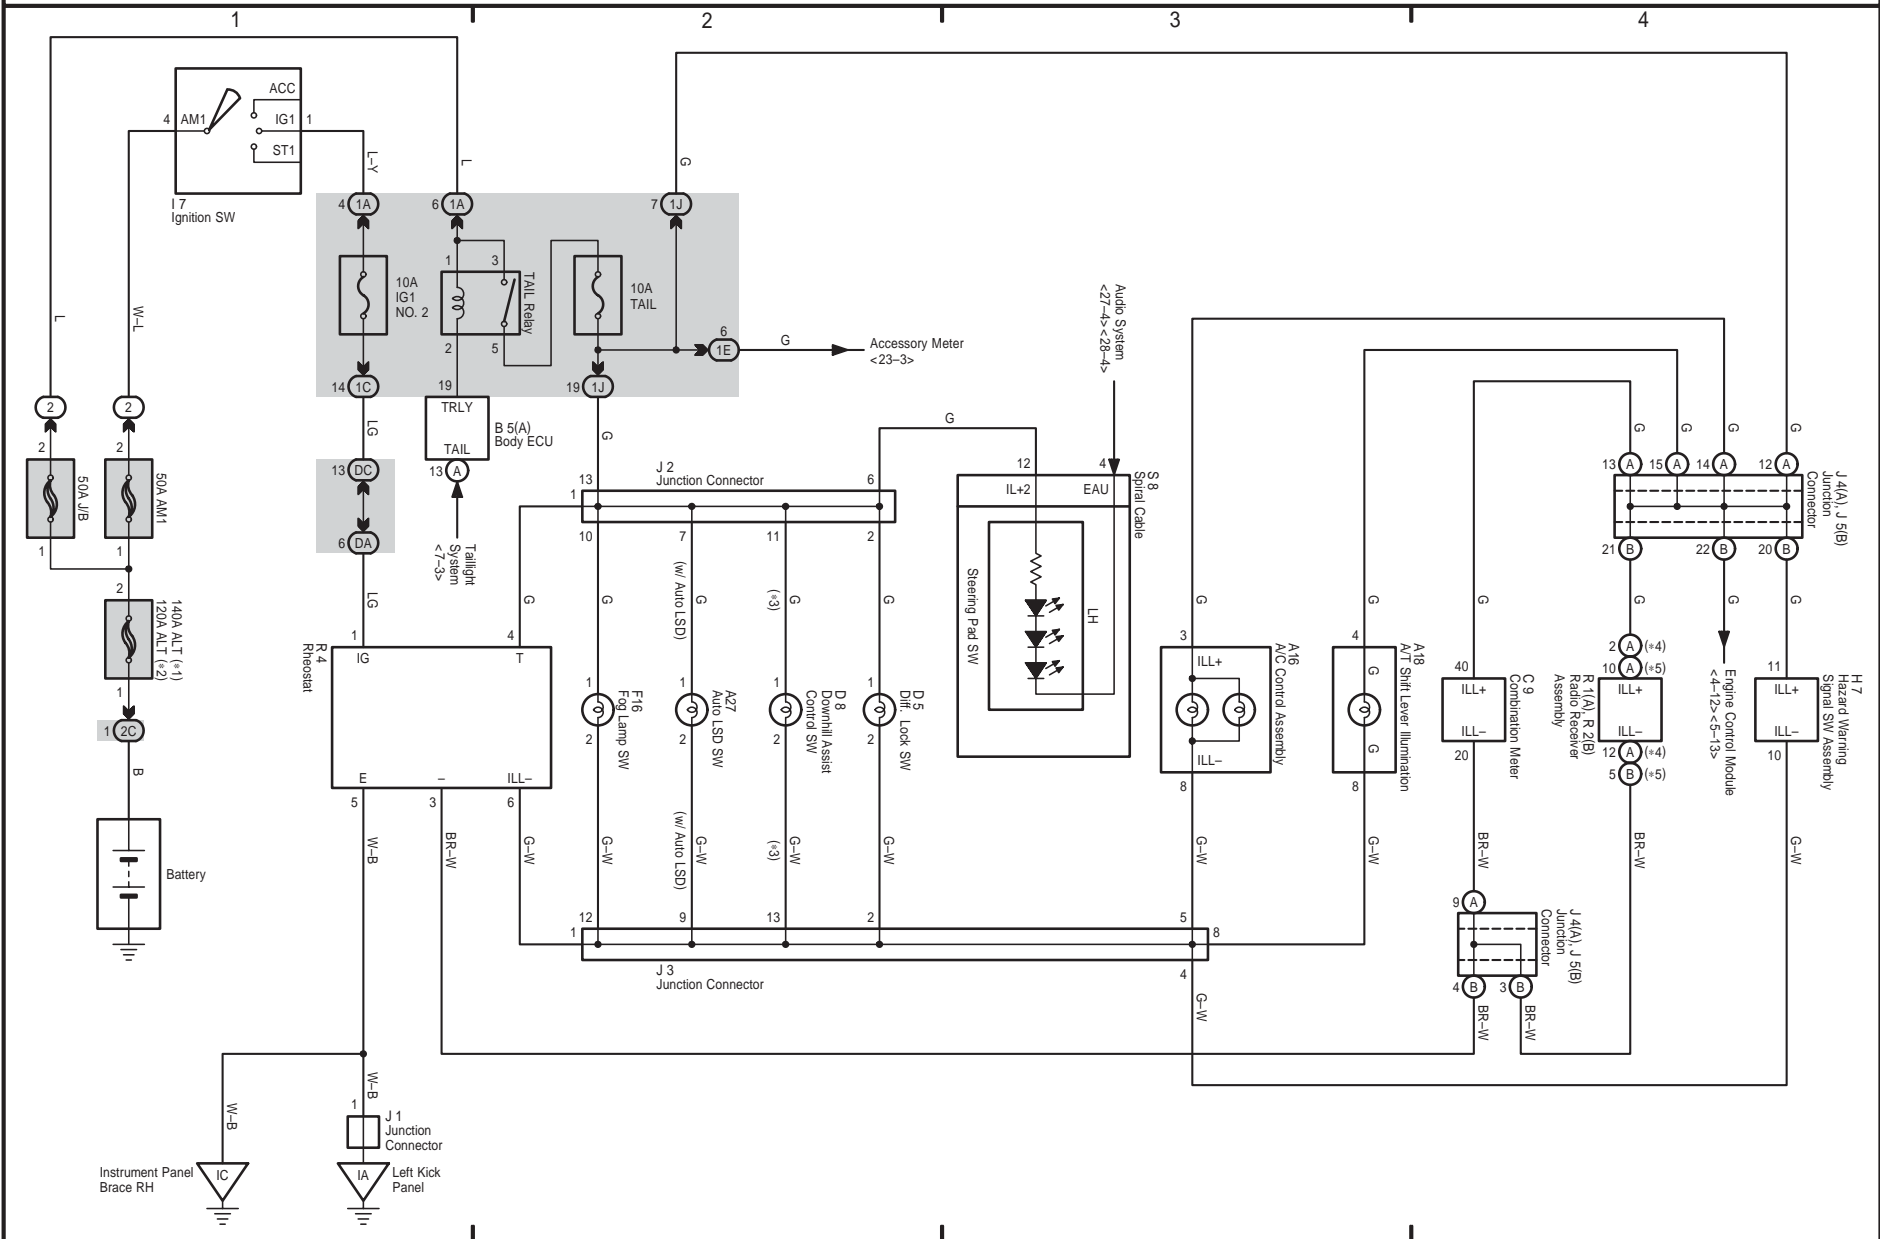


9 TOYOTA TACOMA

Power Source

Back-Up Light

Stop Light

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ VSC
- * 4 : w/o VSC

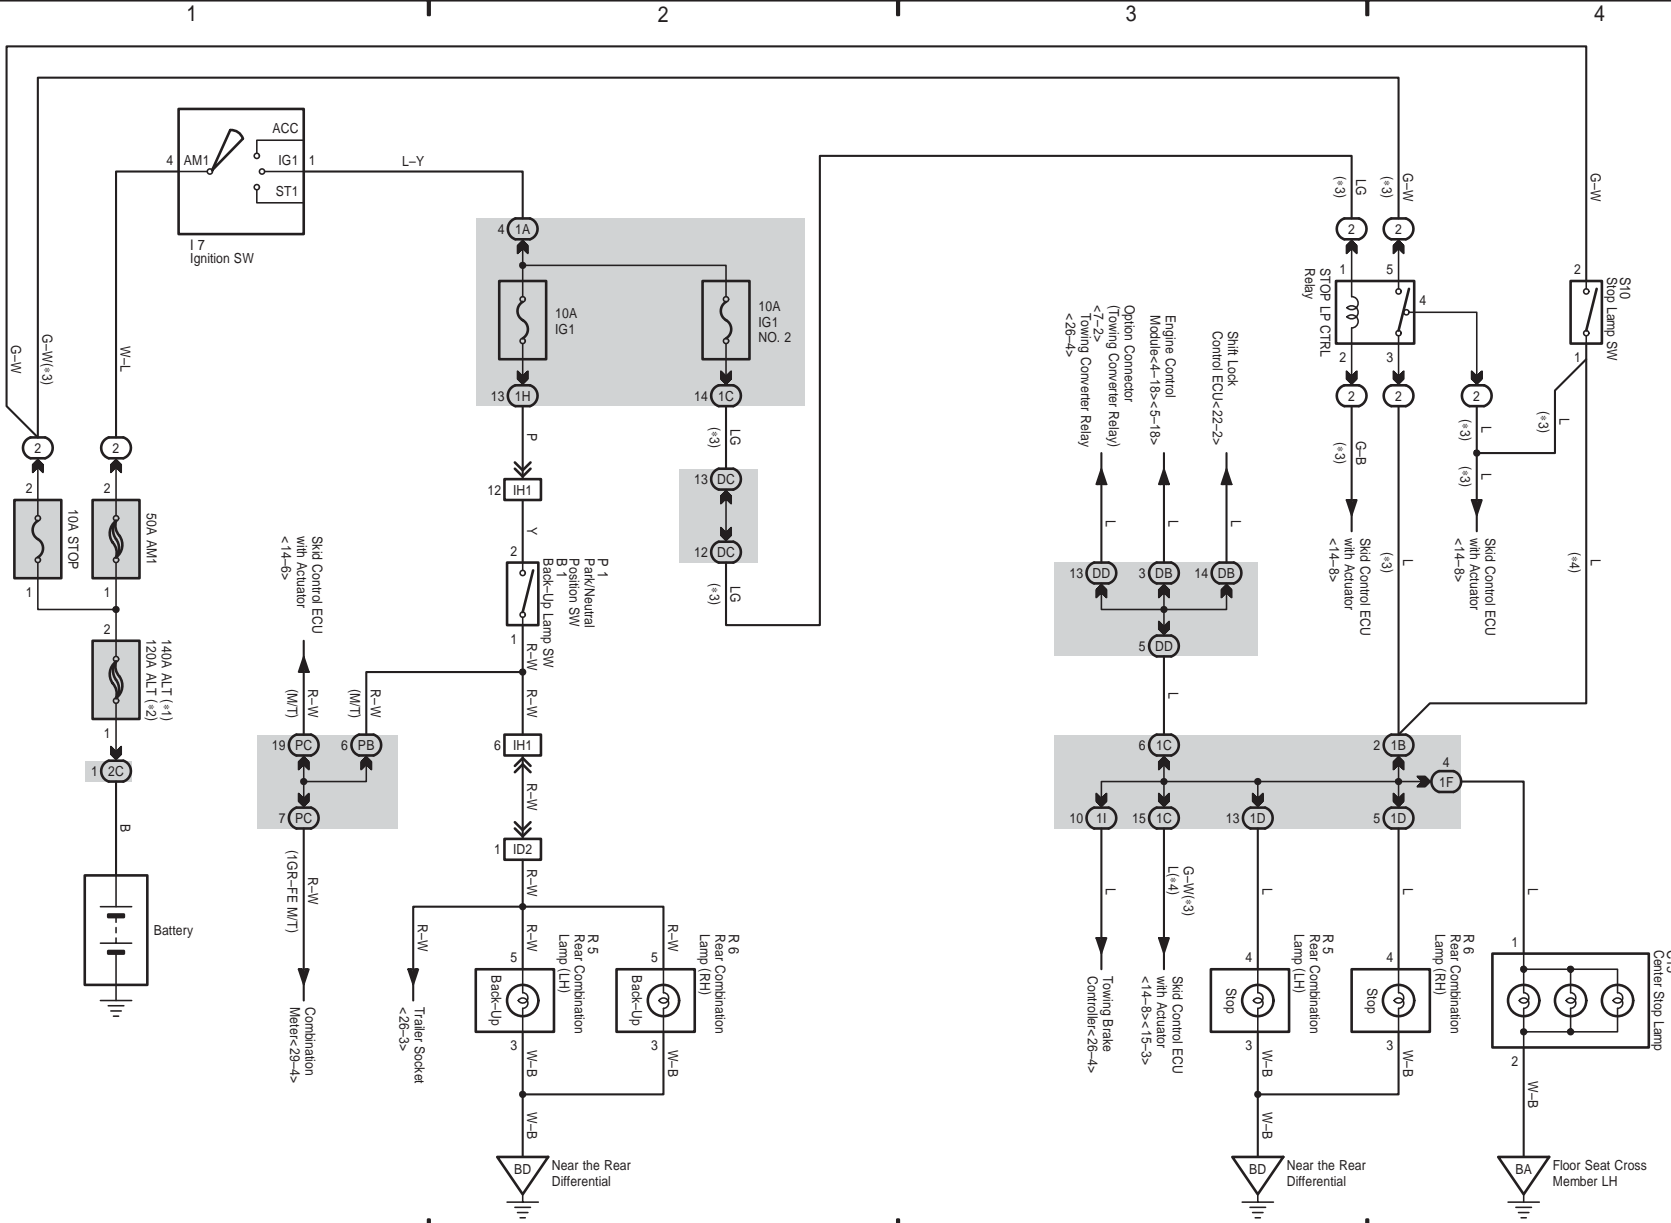


TOYOTA TACOMA (EM01D0U)




10 TOYOTA TACOMA

TOYOTA TACOMA (EM01D0U)

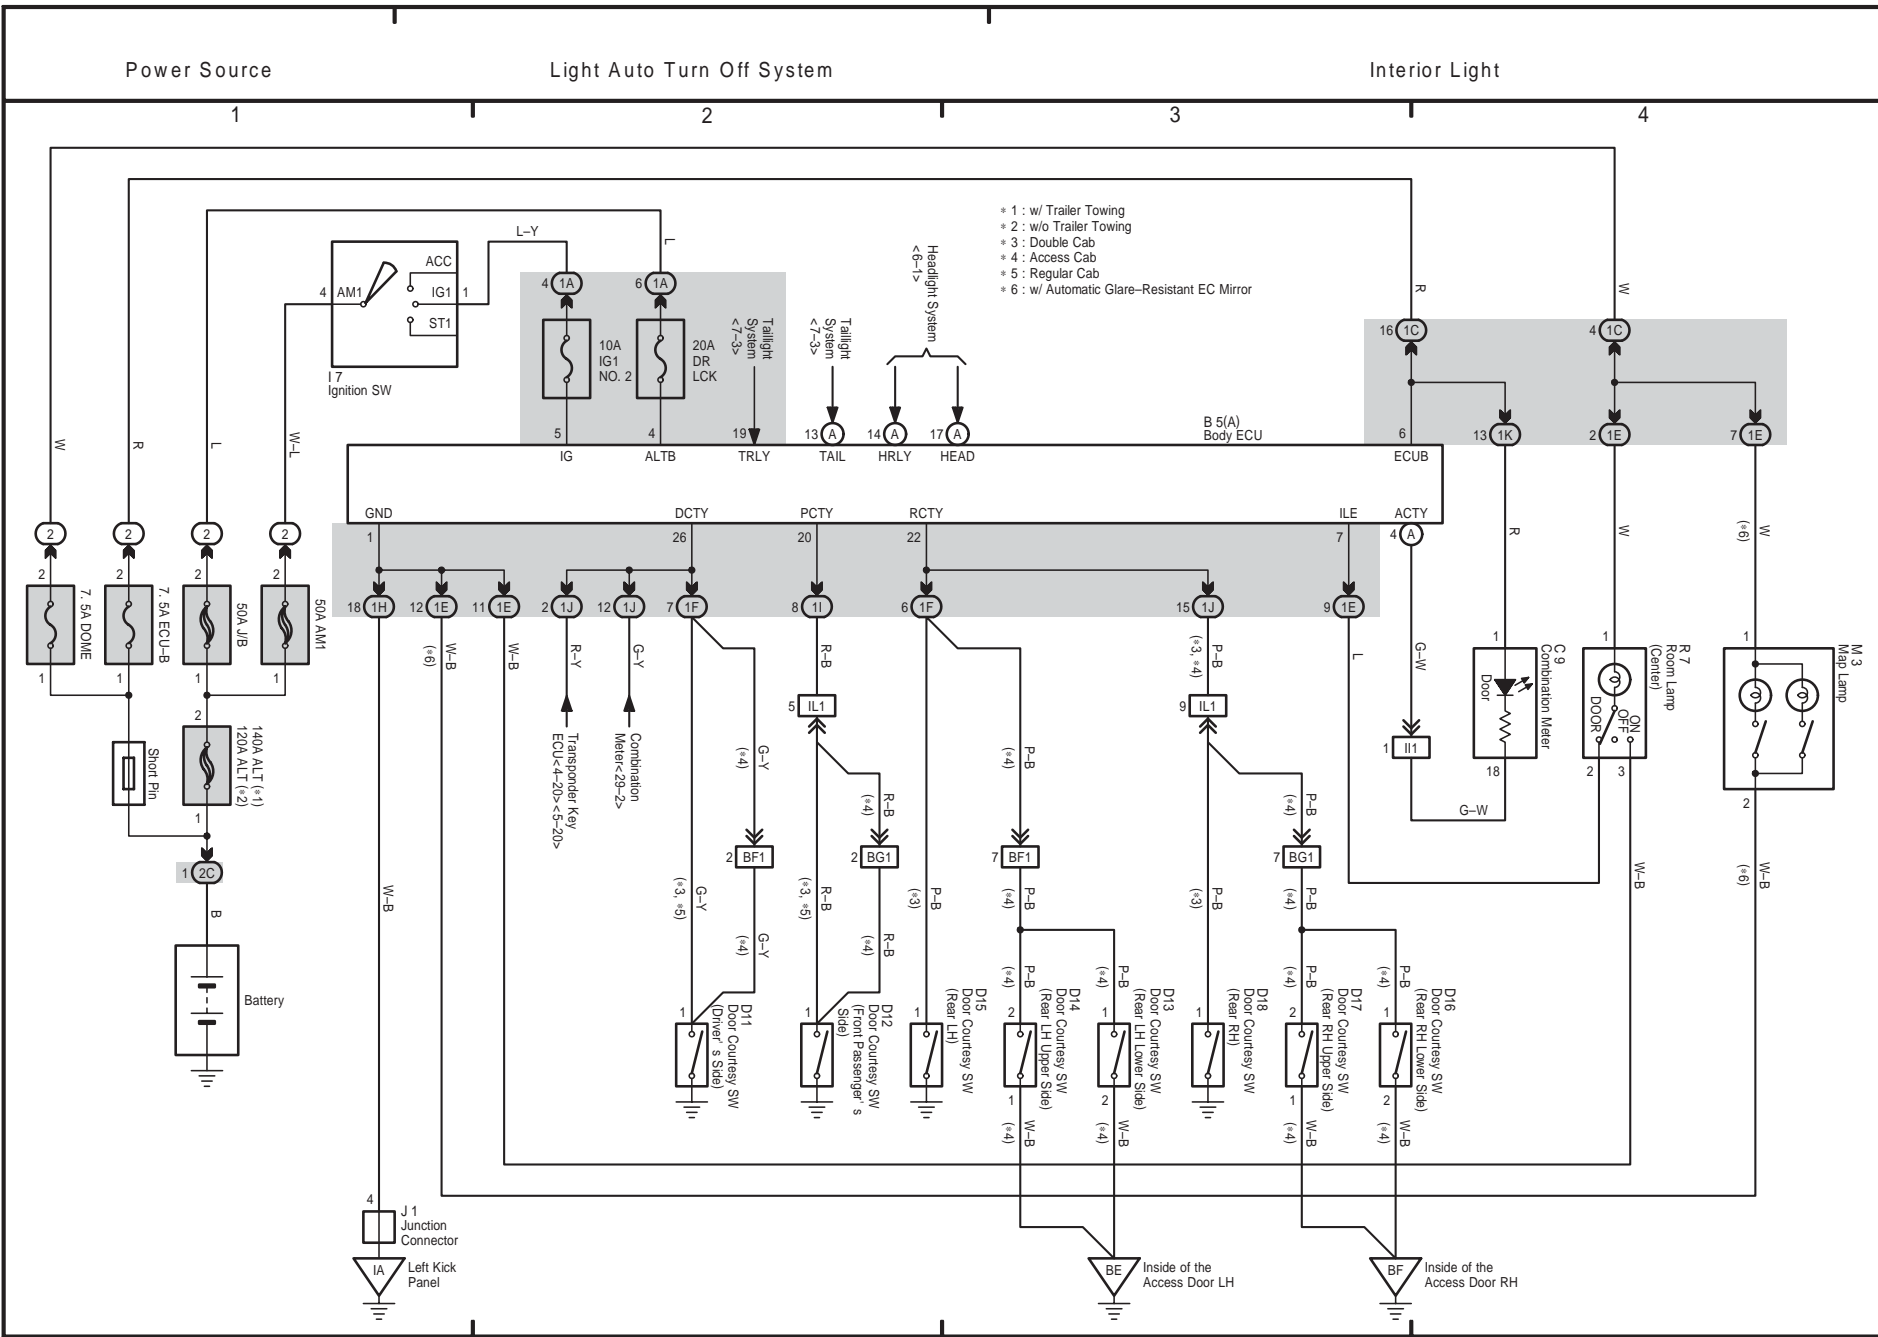


11 TOYOTA TACOMA

TOYOTA TACOMA (EM01D0U)

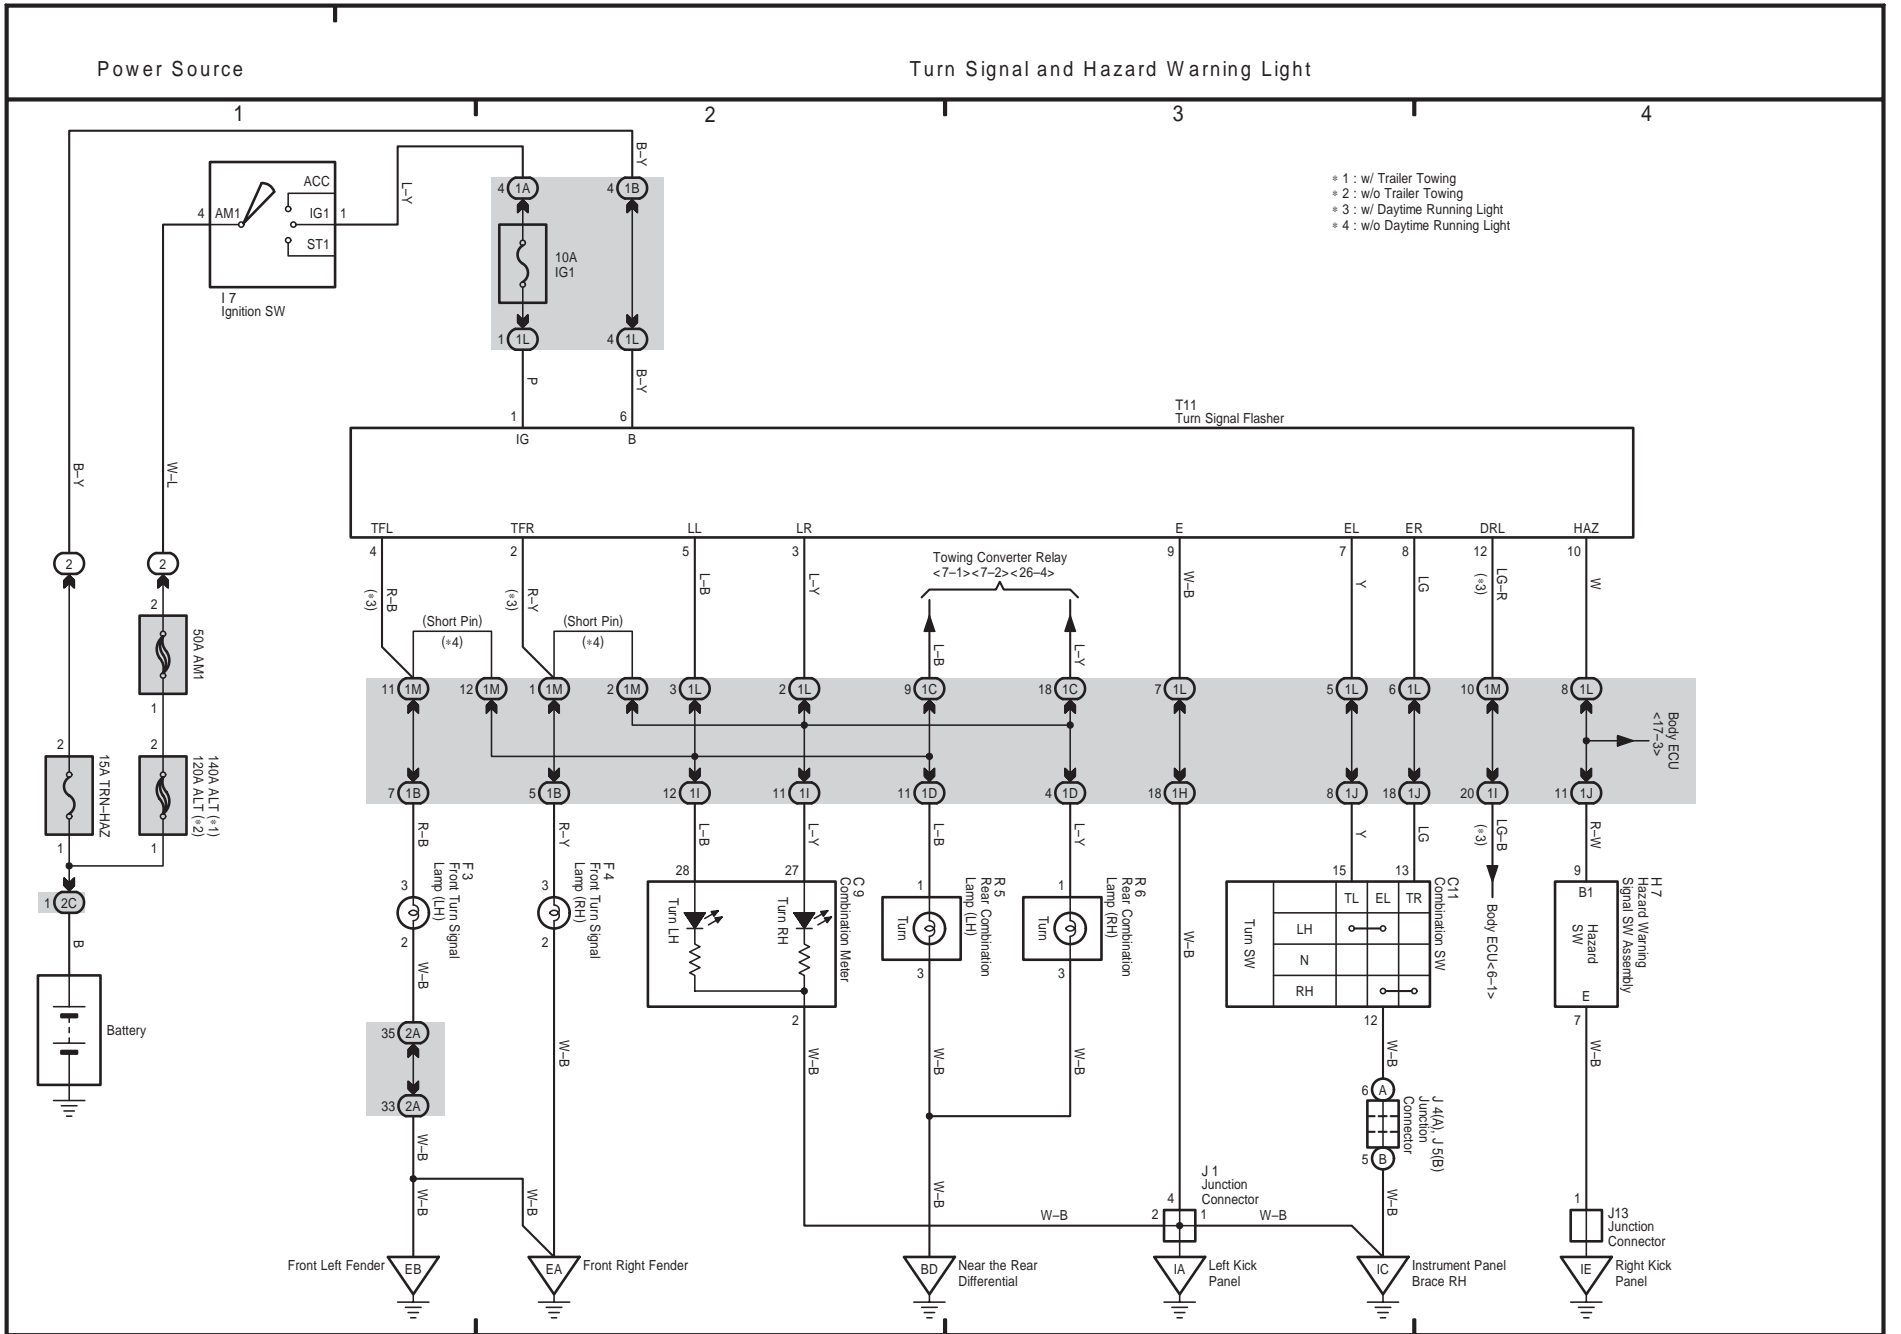


TOYOTA TACOMA (EM01D0U)

OVERALL ELECTRICAL WIRING DIAGRAM

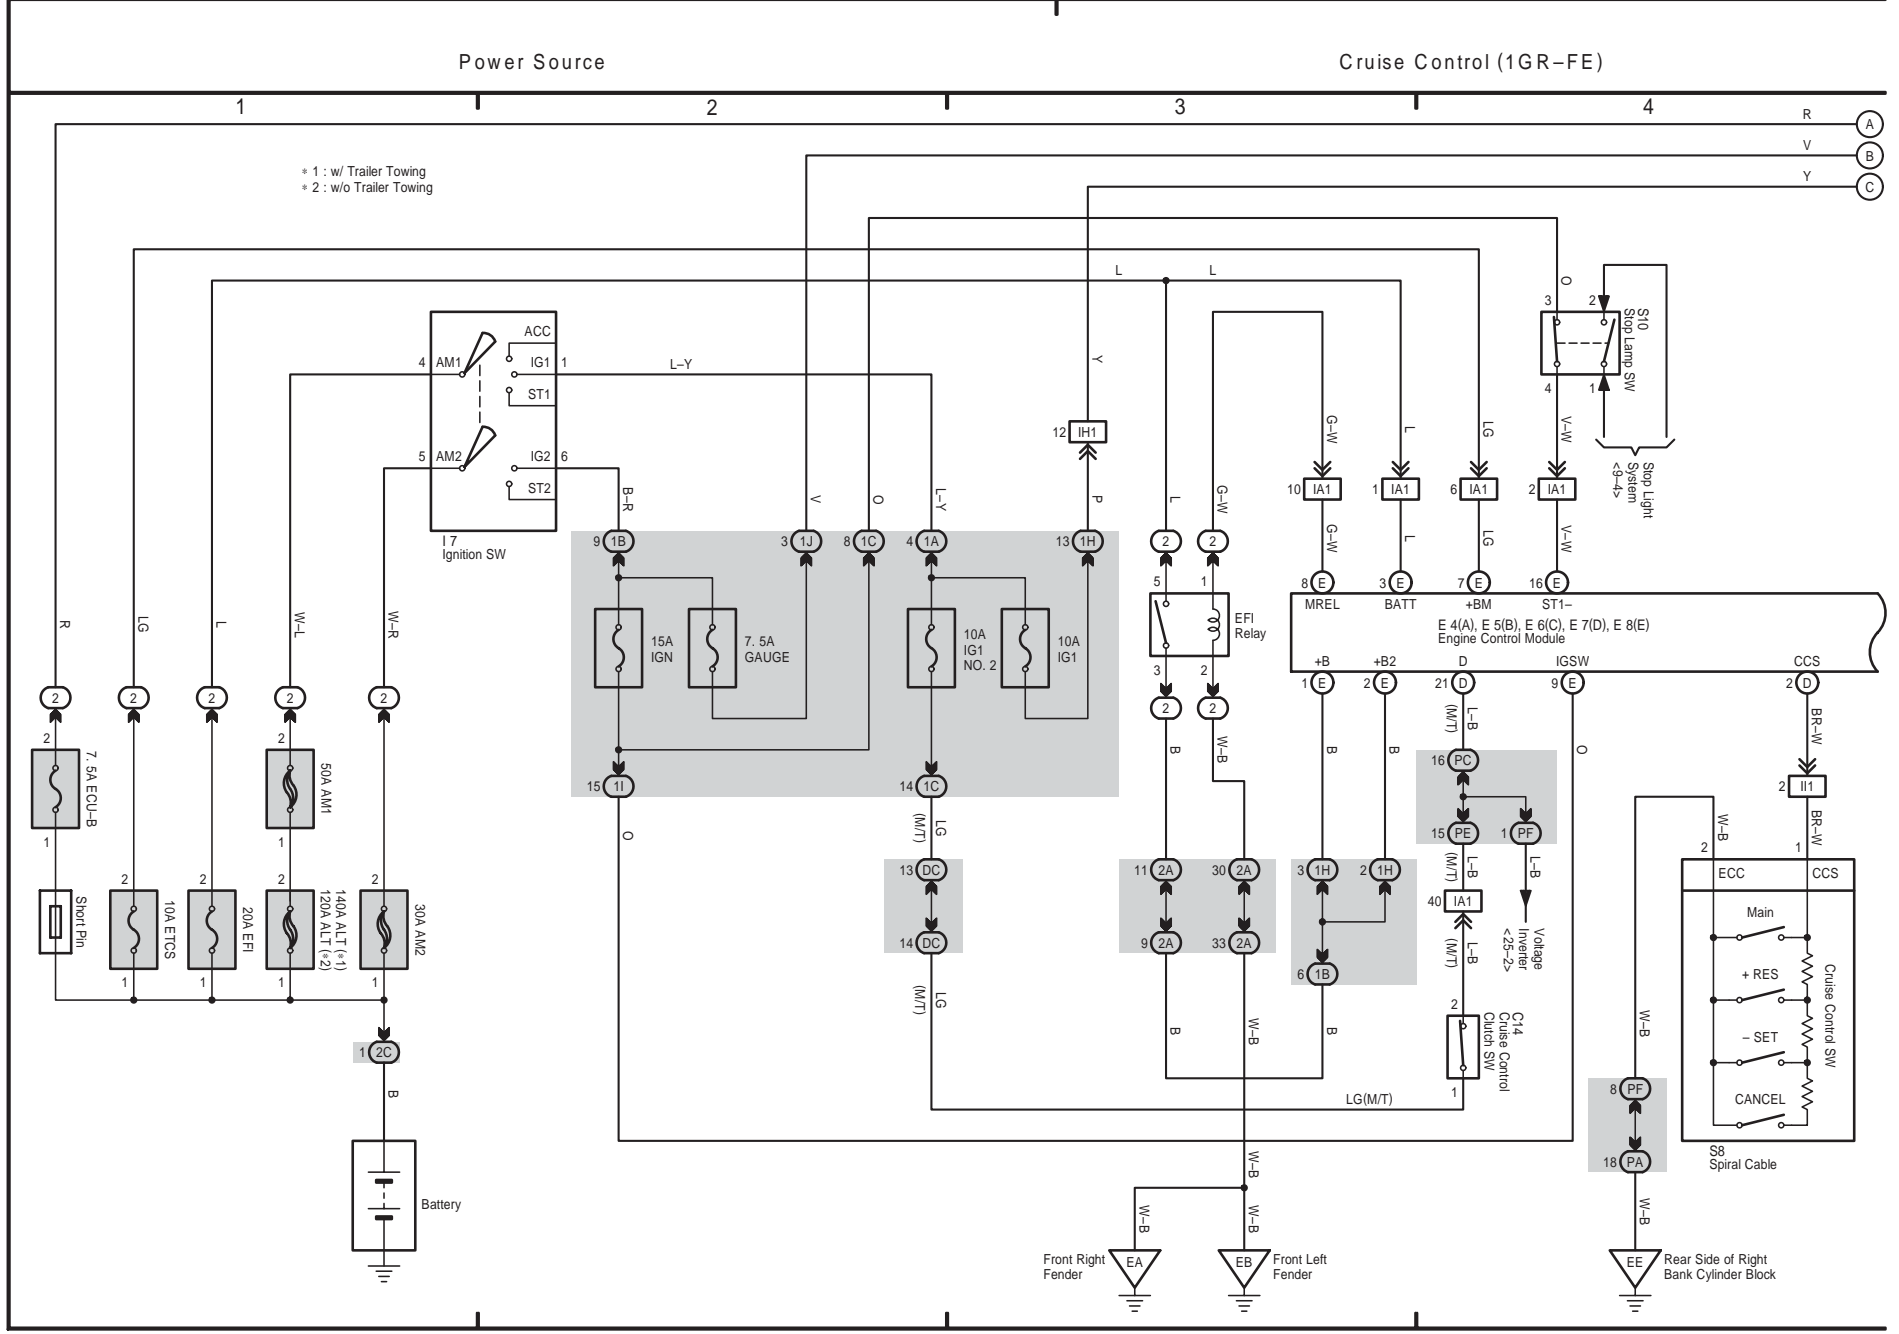


Electronically Controlled Transmission and A/T Indicator (1GR-FE)

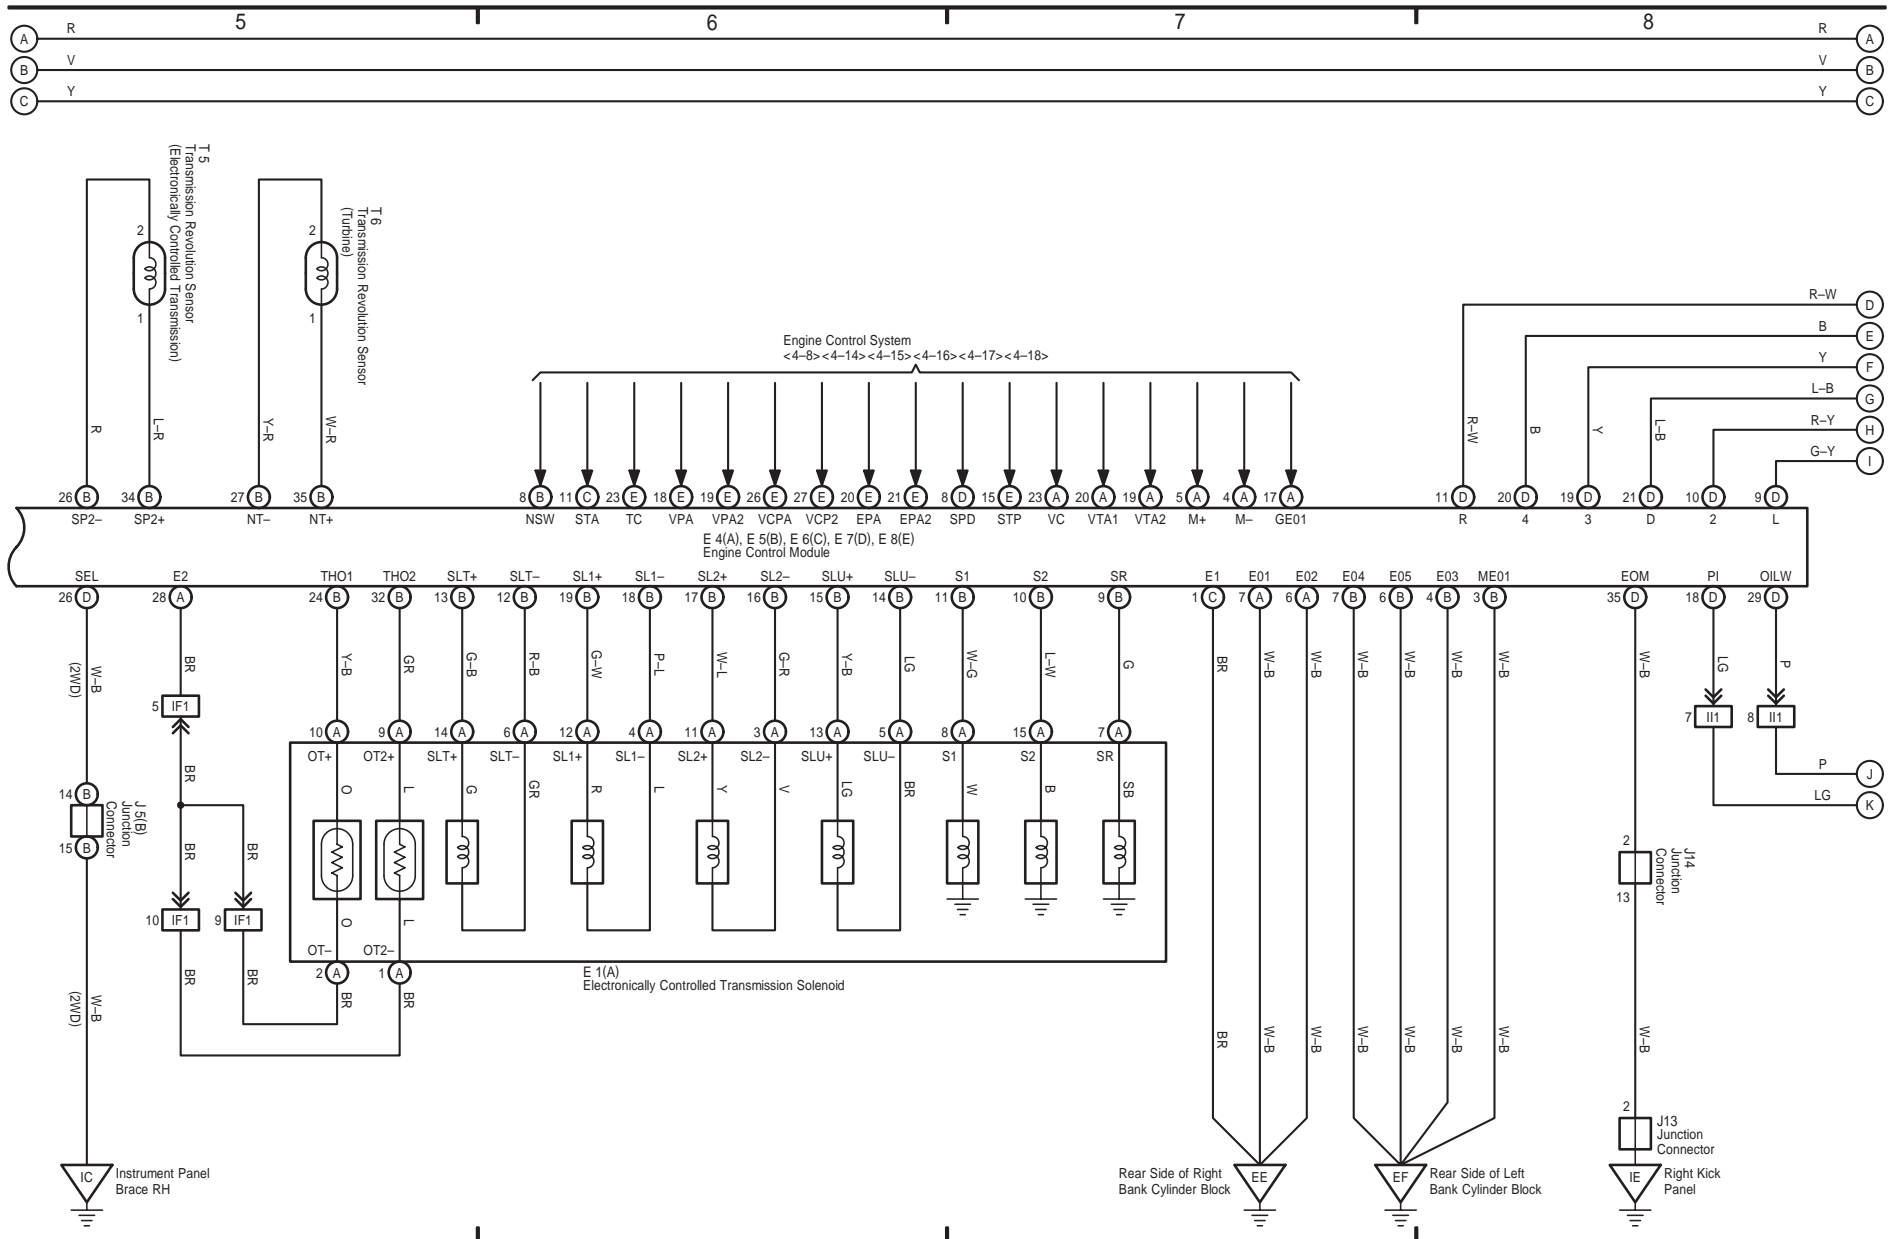


TOYOTA TACOMA (EM01D0U)




Electronically Controlled Transmission and A/T Indicator (1GR-FE)

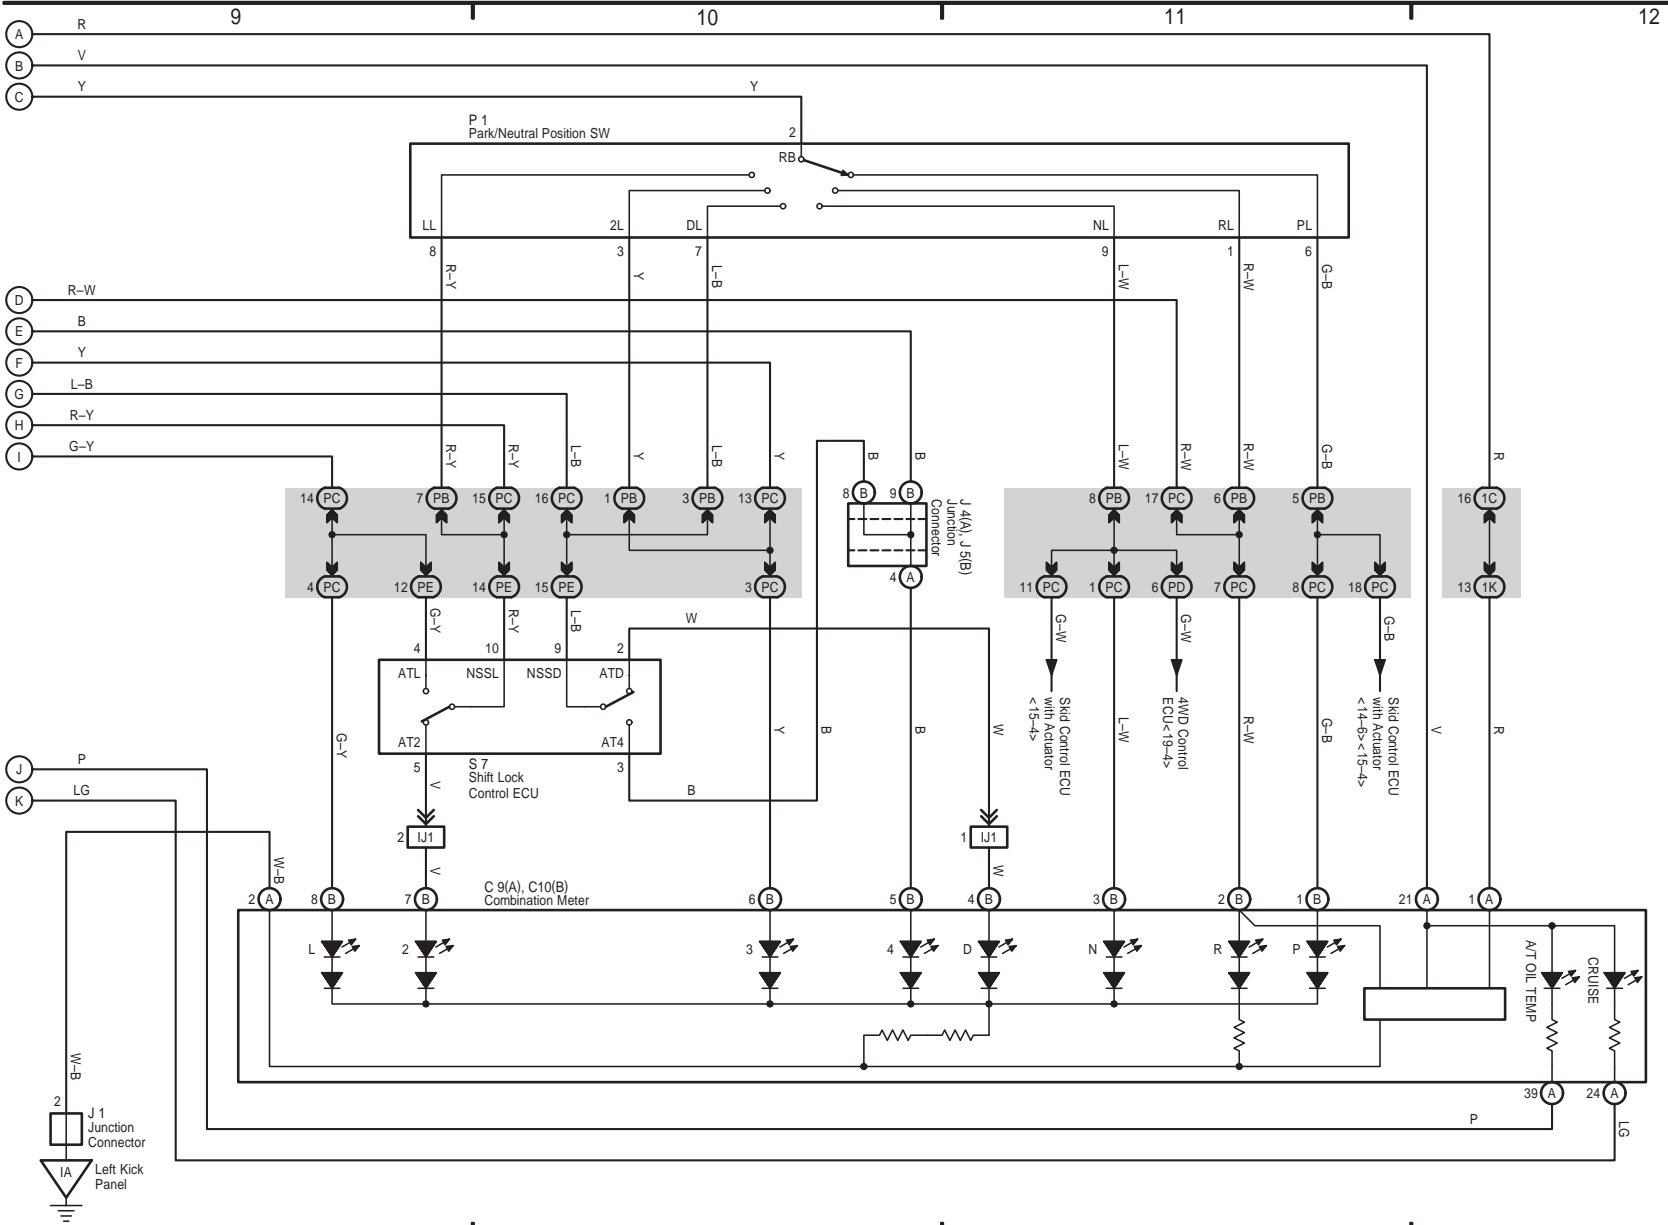

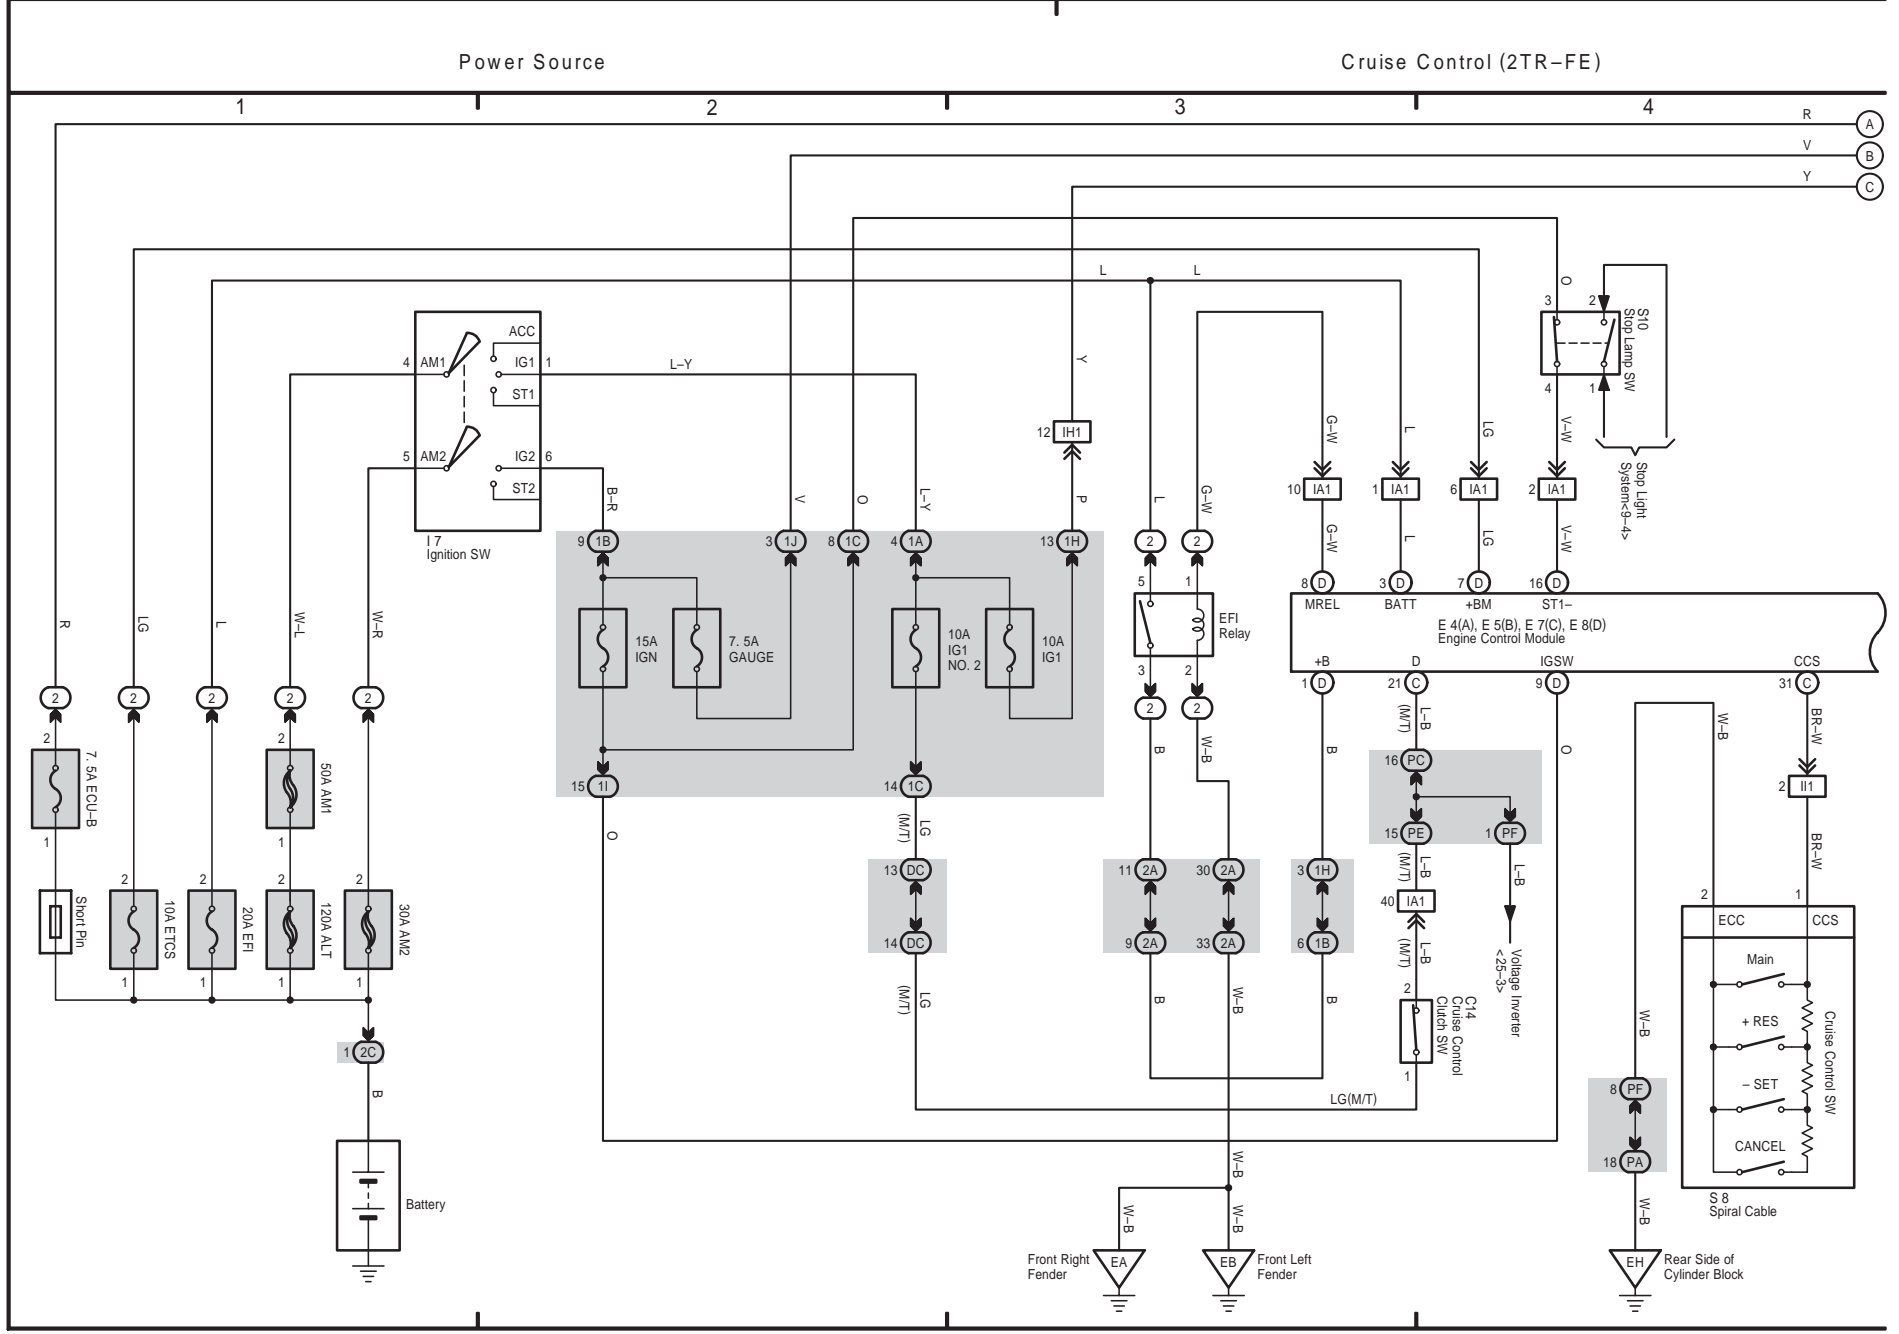


Electronically Controlled Transmission and A/T Indicator (2TR-FE)

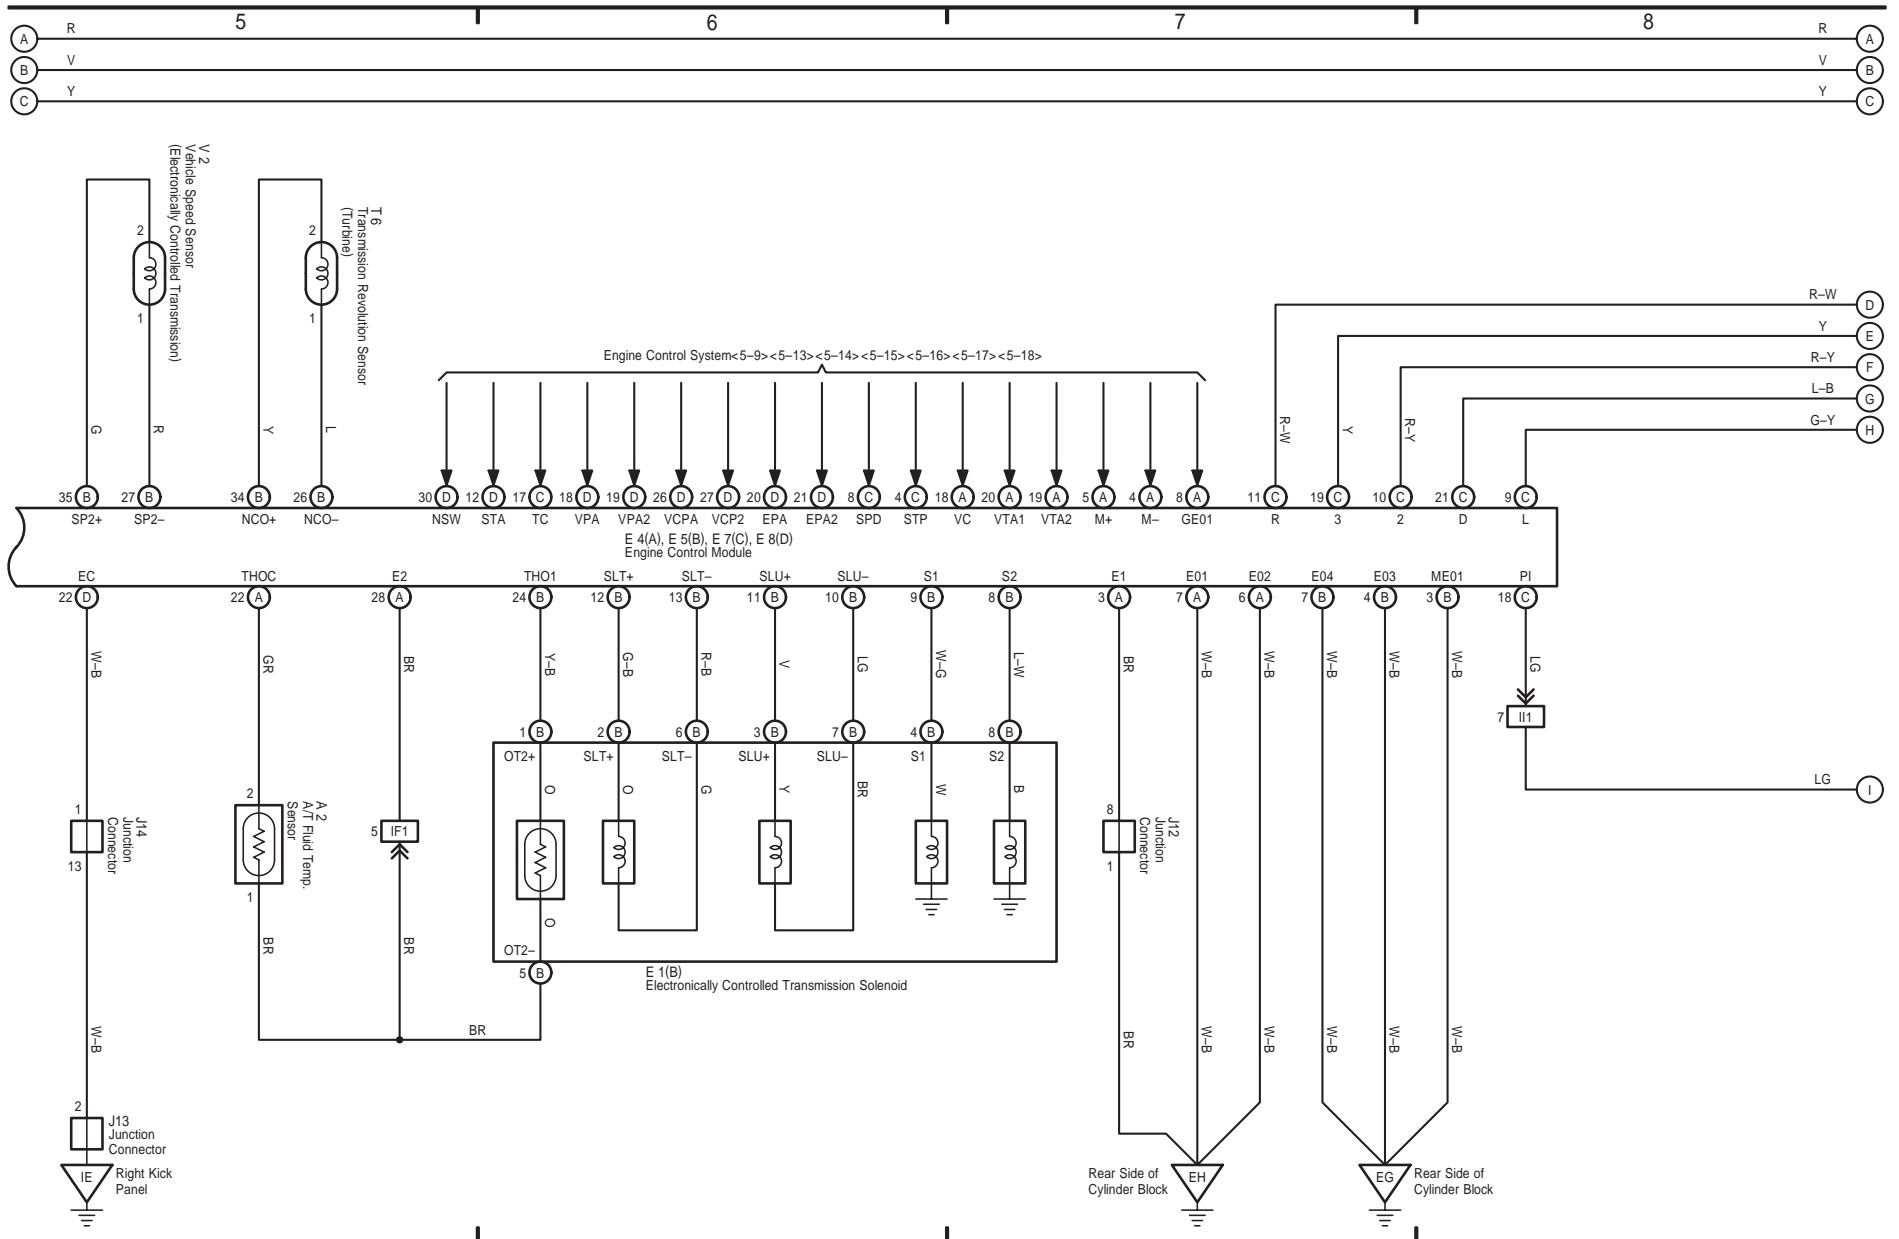


TOYOTA TACOMA (EM01D0U)




Electronically Controlled Transmission and A/T Indicator (2TR-FE)

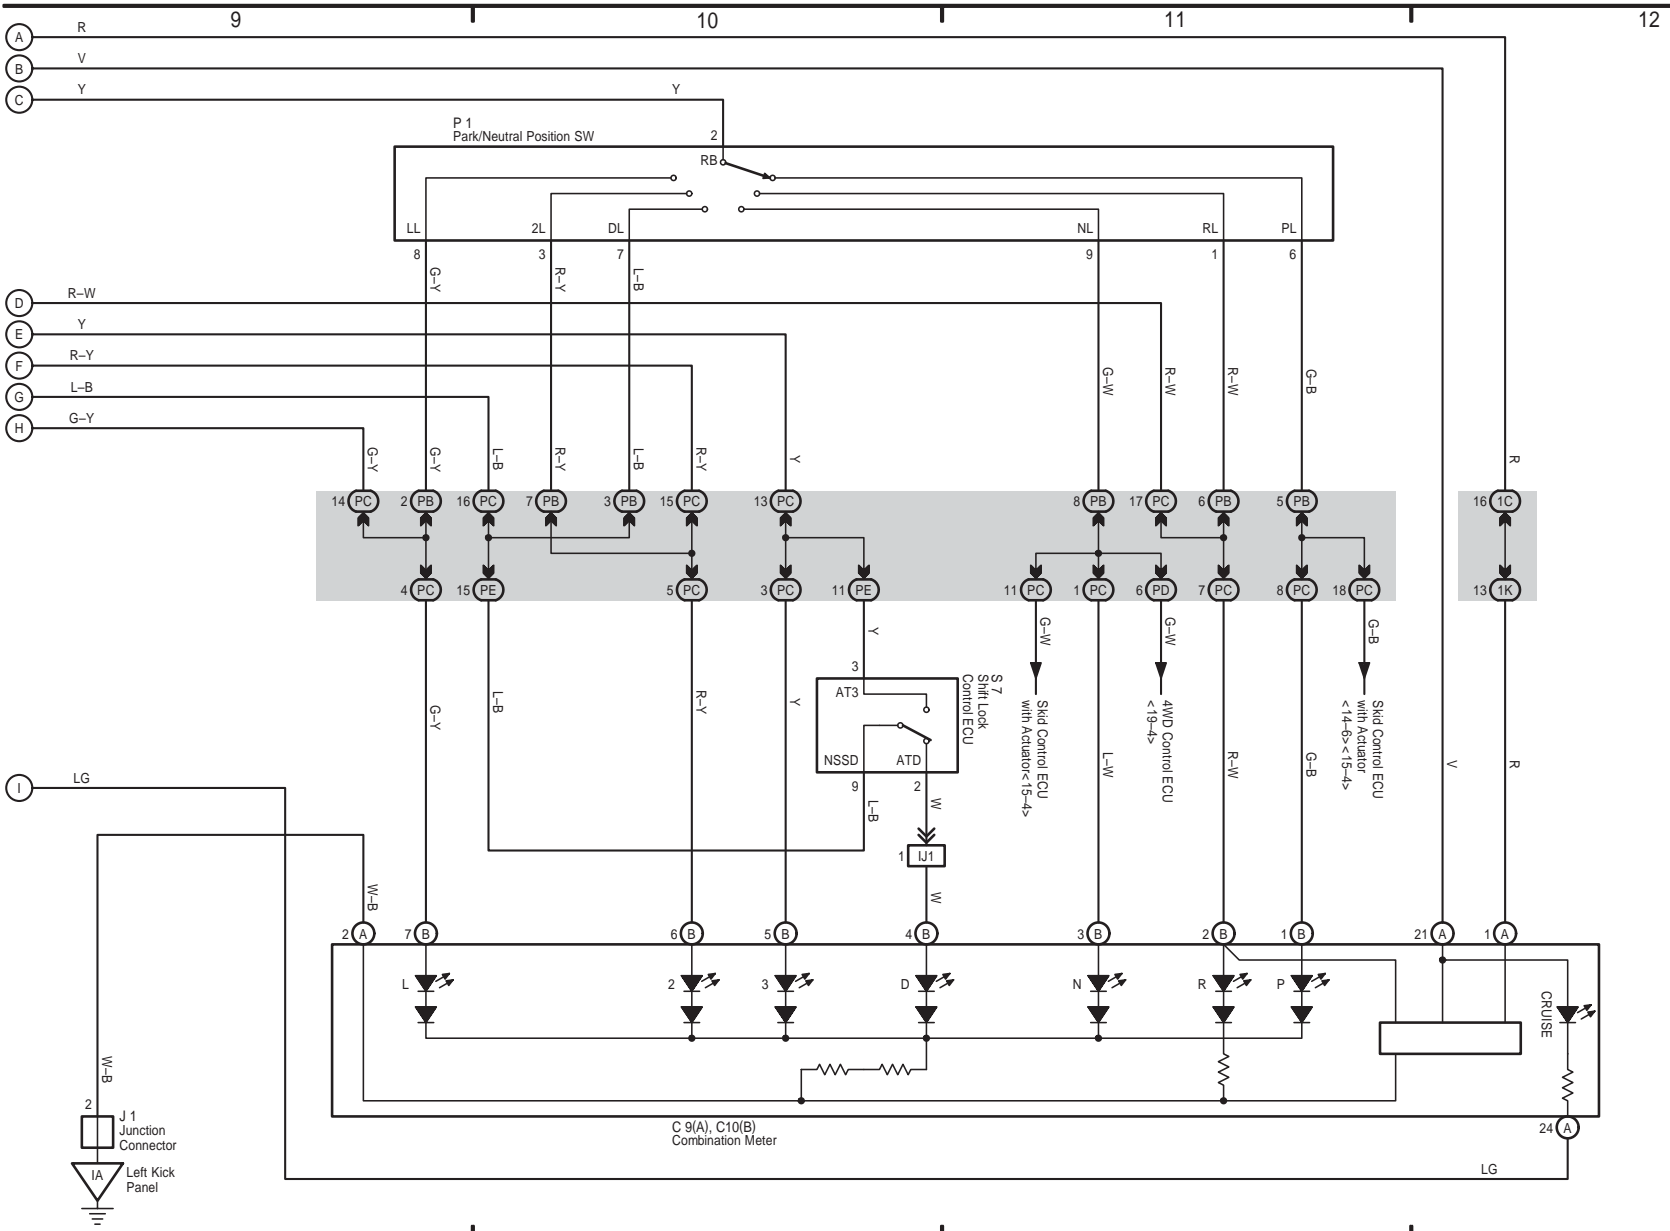

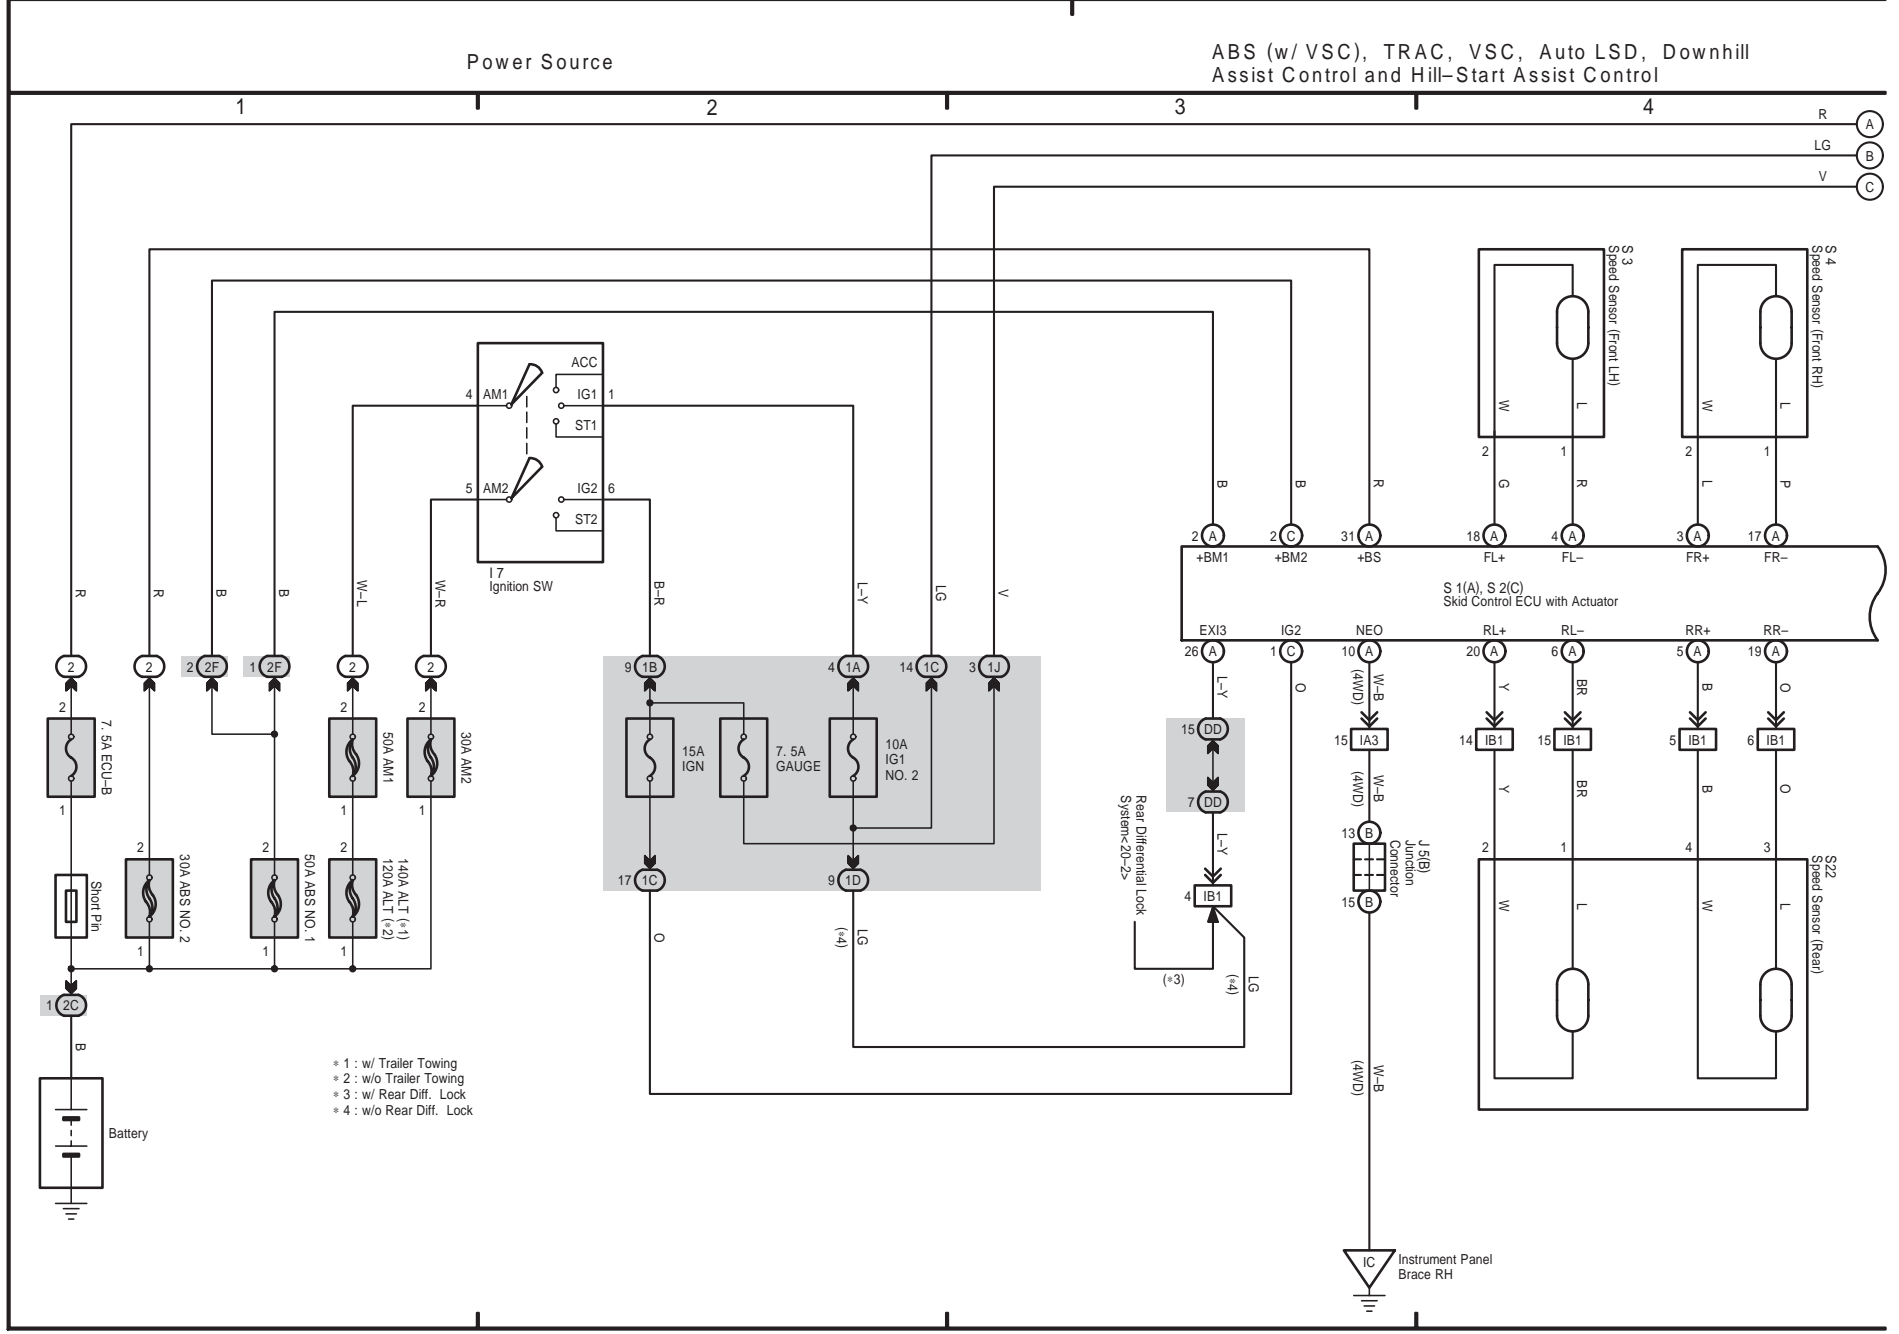

ABS (w/ VSC), TRAC, VSC, Auto LSD, Downhill Assist Control and Hill-Start Assist Control

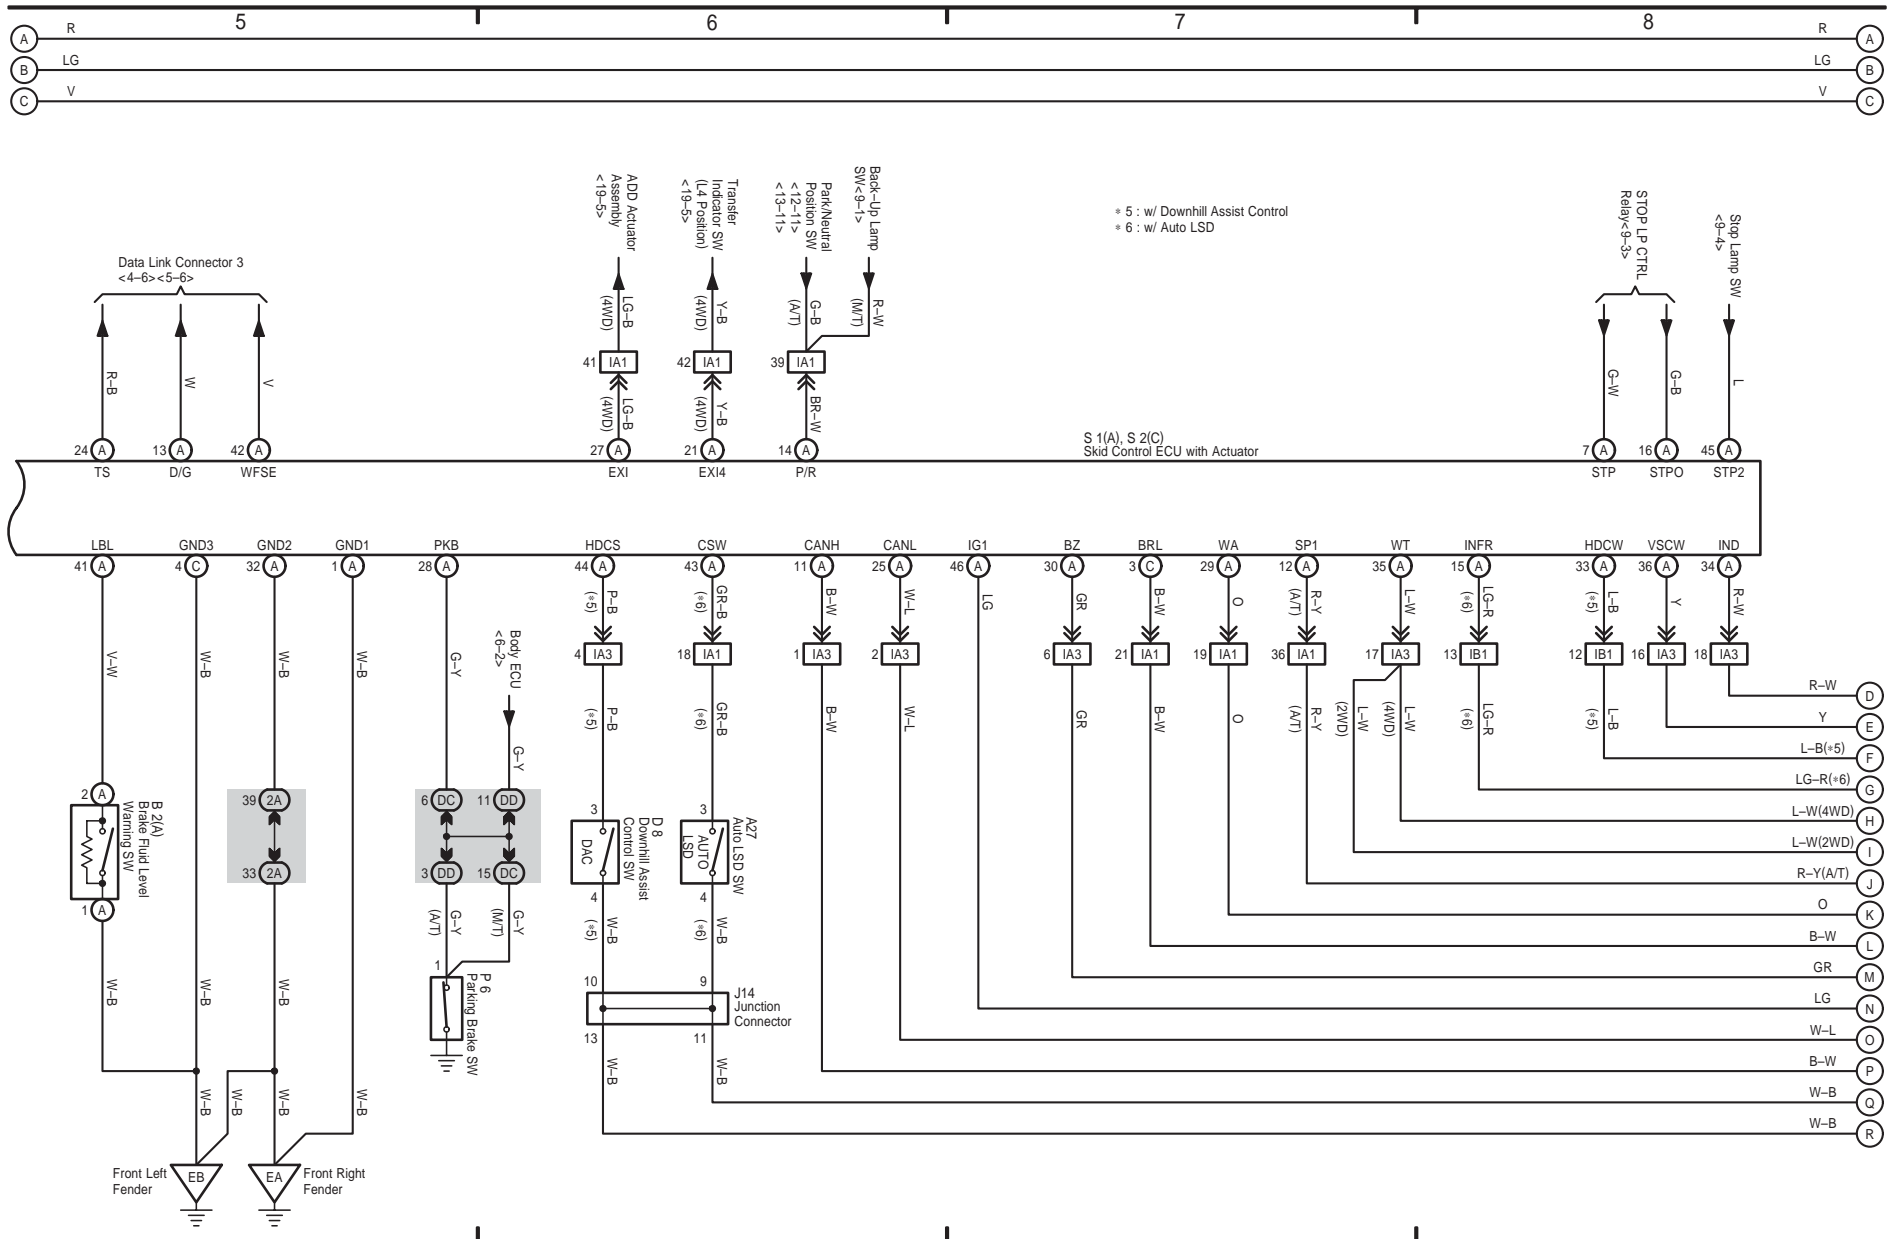


TOYOTA TACOMA (EM01D0U)




14 TOYOTA TACOMA (Cont' d)

ABS (w/ VSC), TRAC, VSC, Auto LSD, Downhill Assist Control and Hill-Start Assist Control


Multiplex Communication System (CAN)

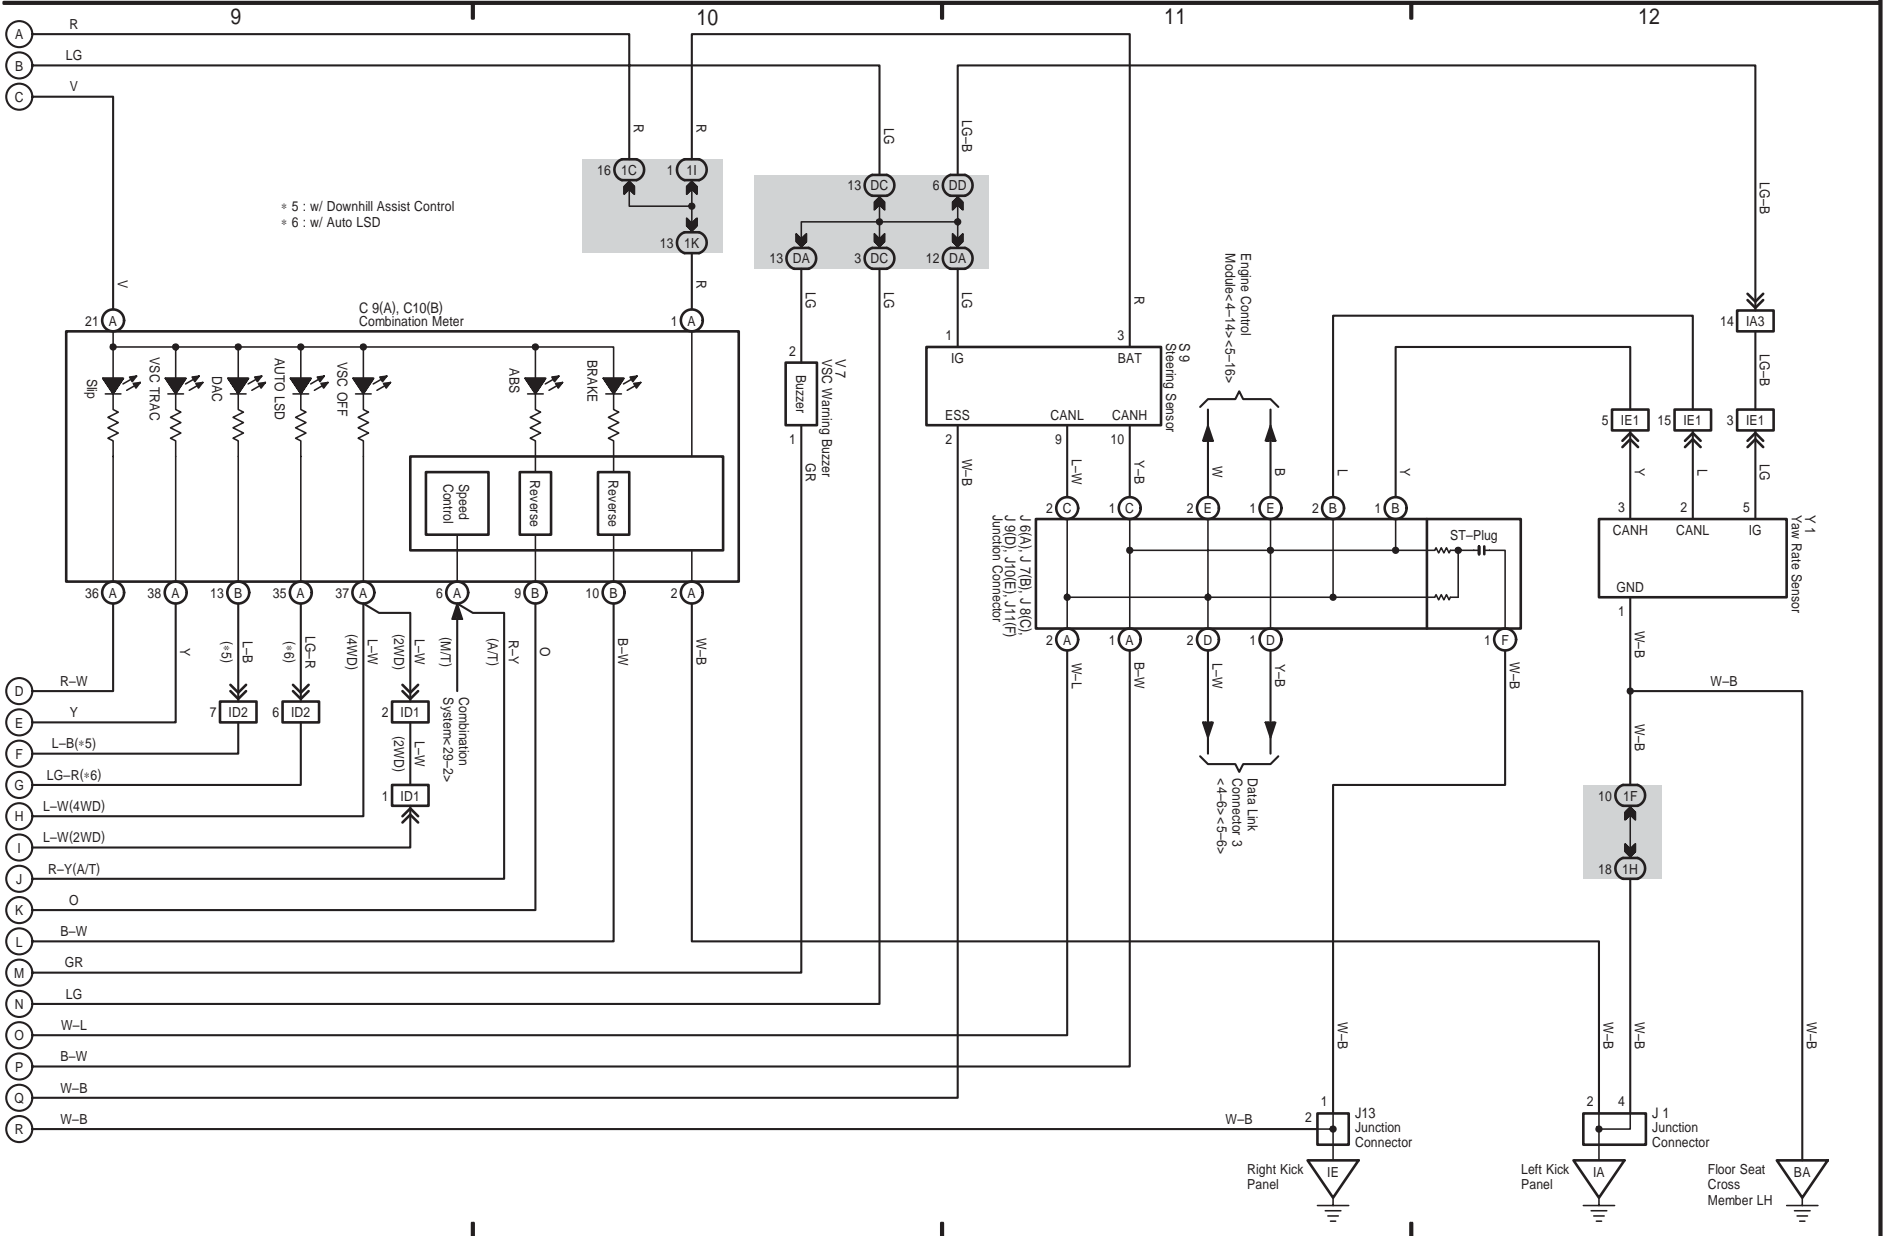

ABS (w/o VSC)

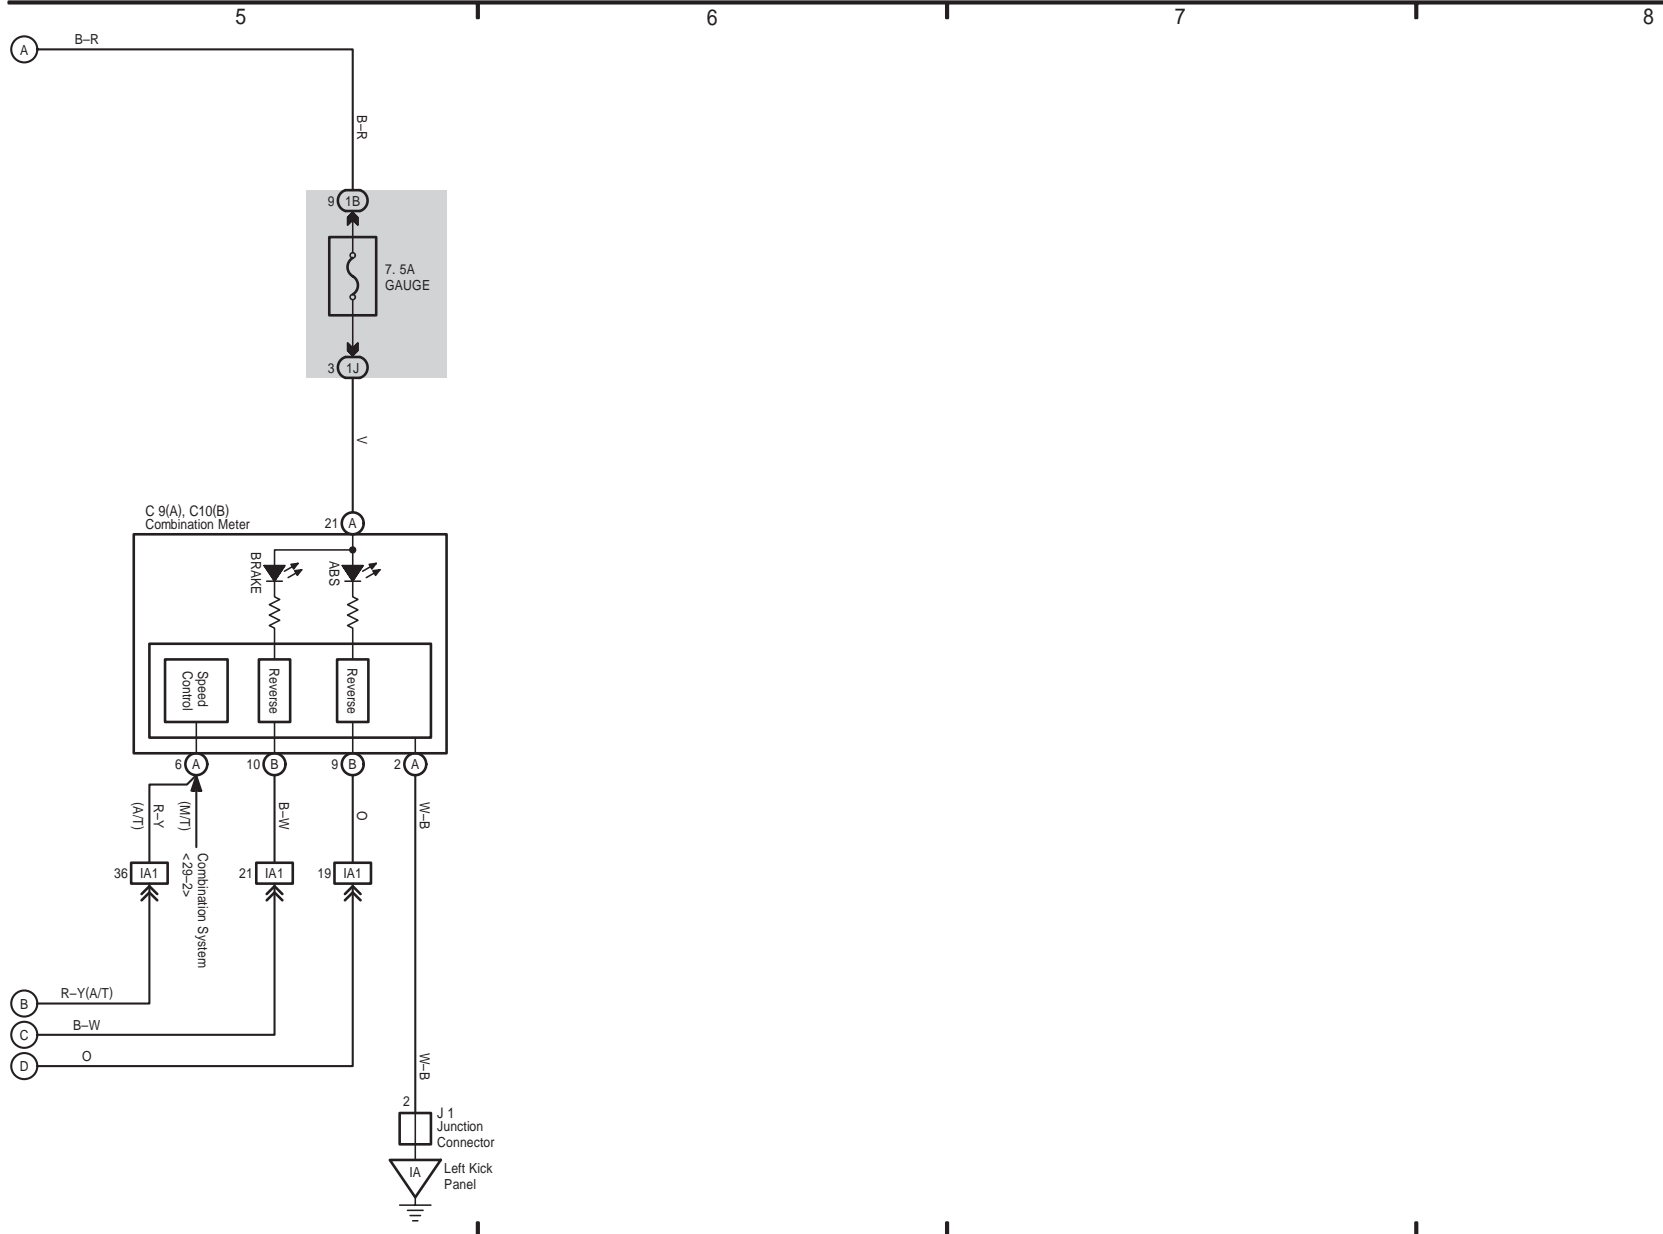


TOYOTA TACOMA (EM01D0U)

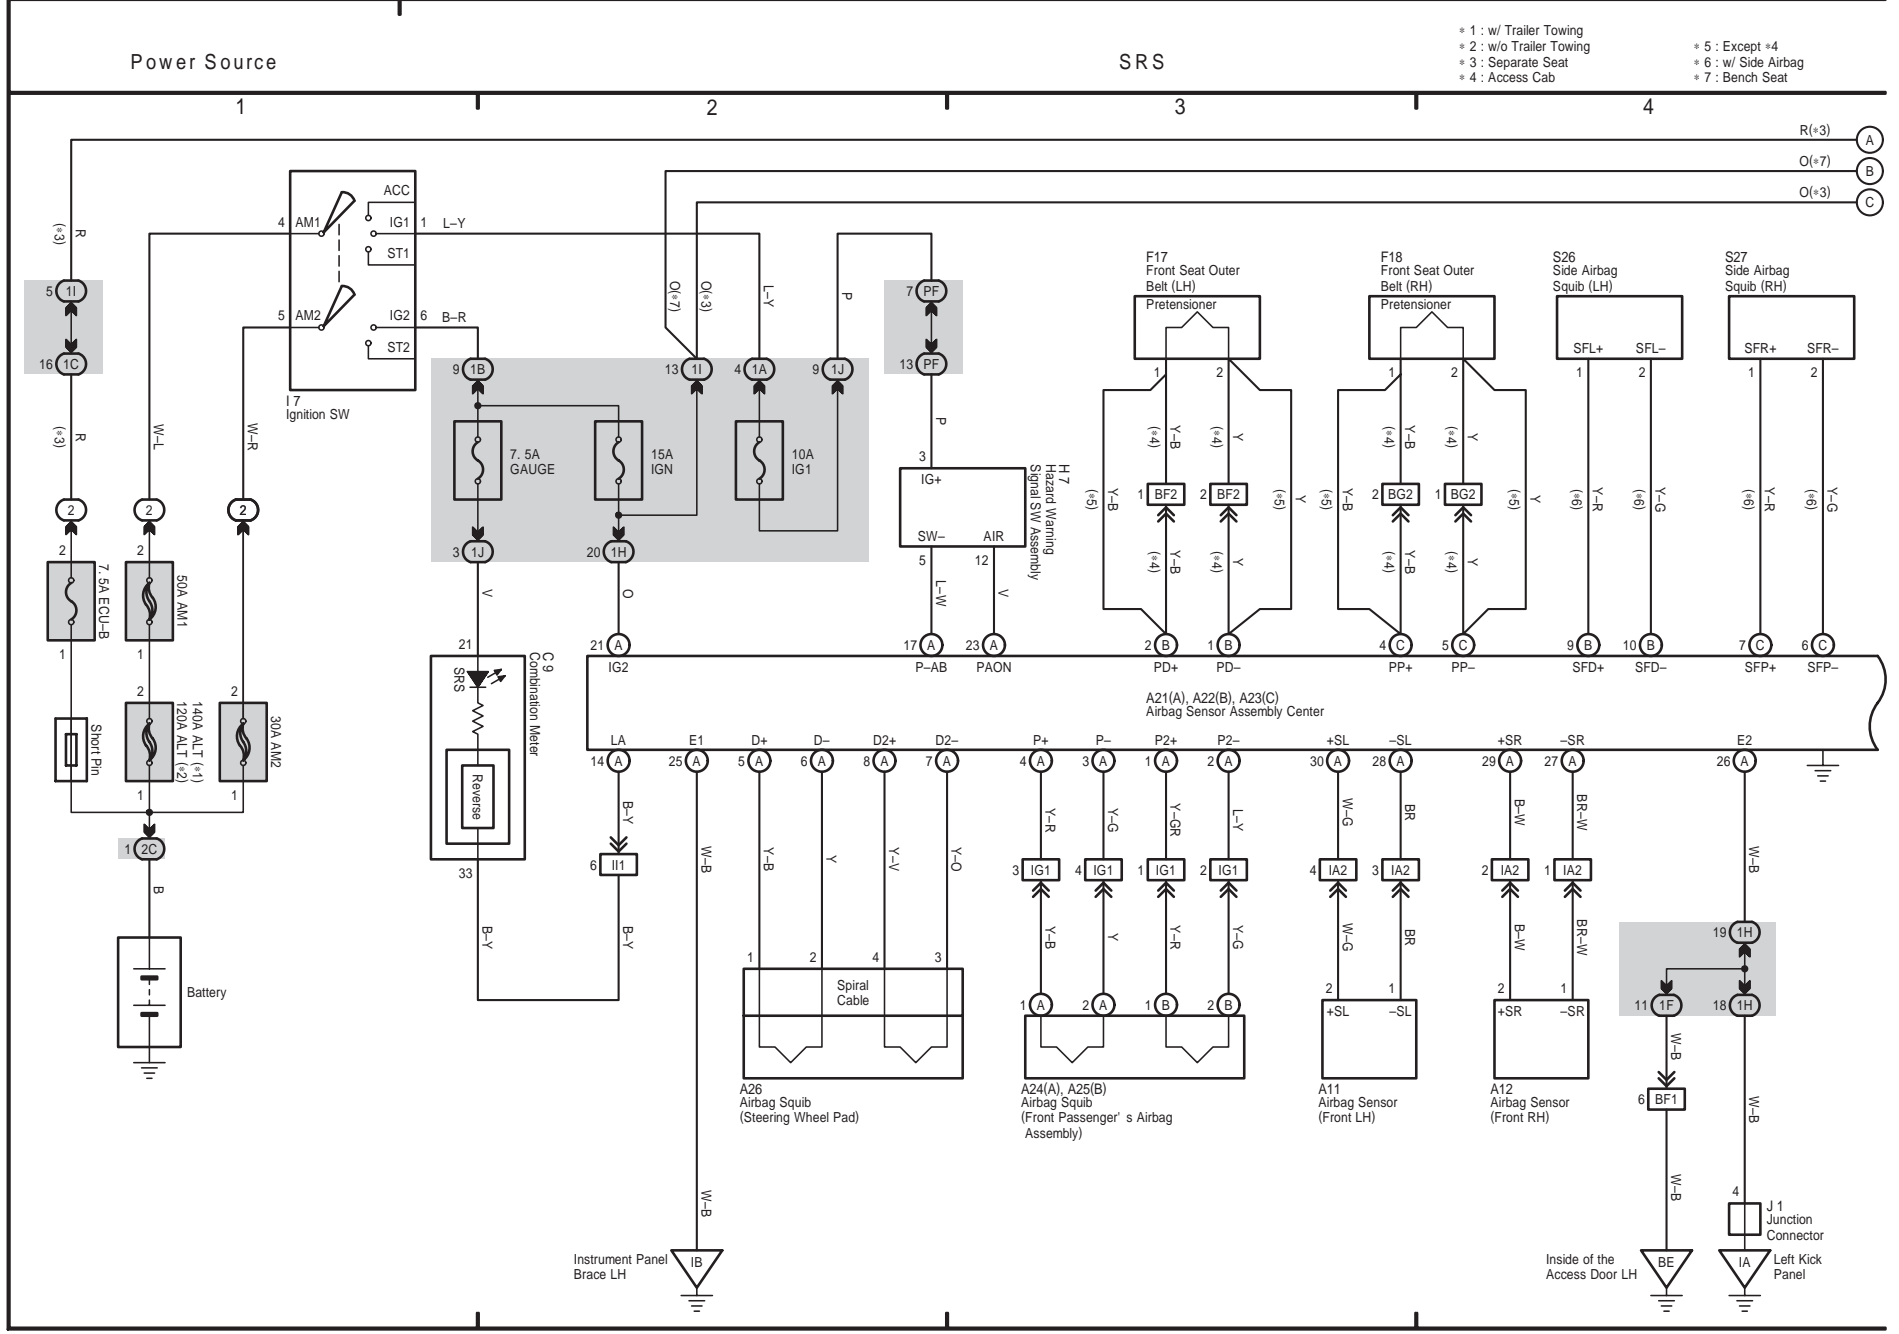

SRS

- * 3 : Separate Seat
- * 6 : w/ Side Airbag
- * 7 : Bench Seat
- * 8 : Except Double Cab

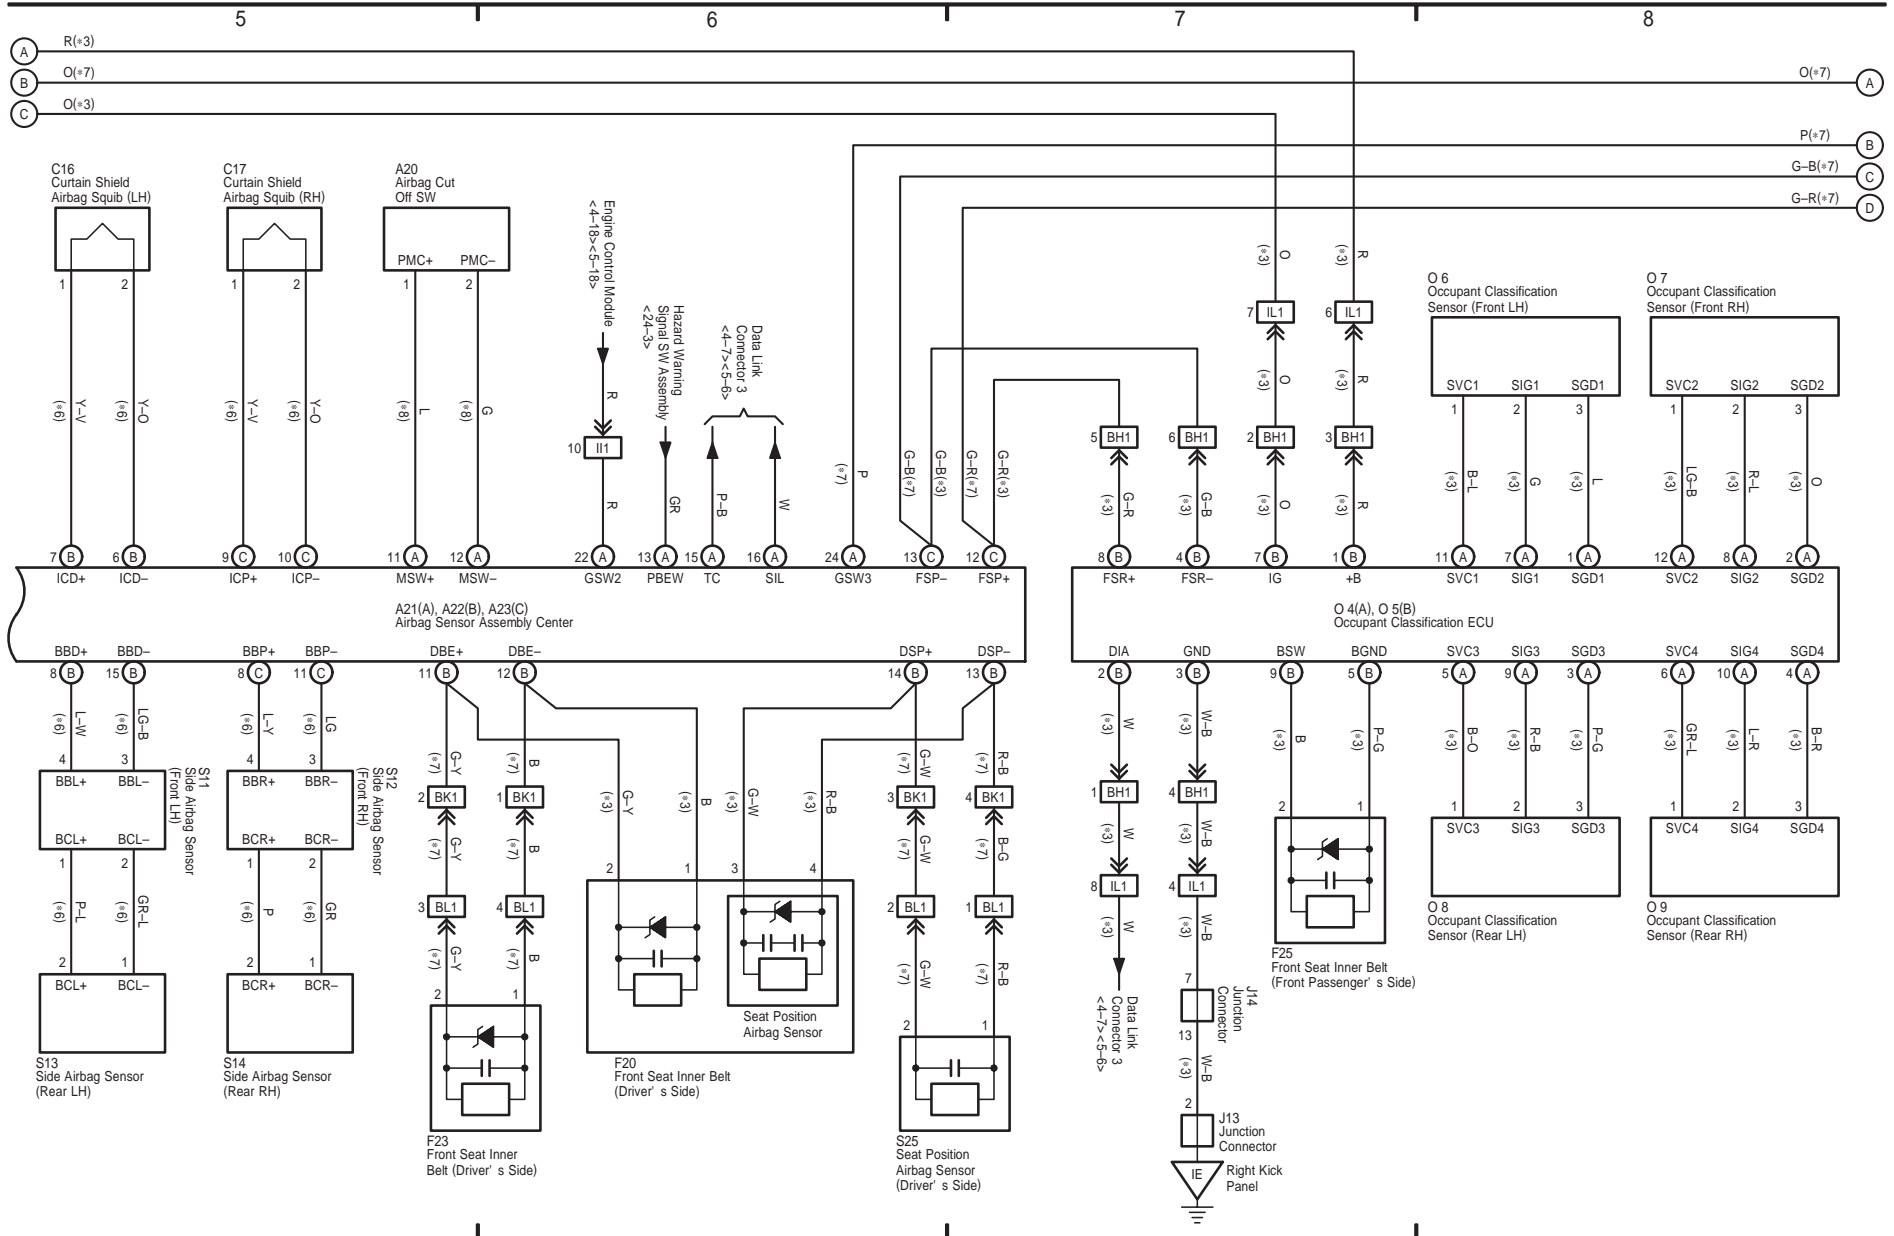


TOYOTA TACOMA (EM01D0U)




16 TOYOTA TACOMA(Cont' d)


SRS

* 7 : Bench Seat

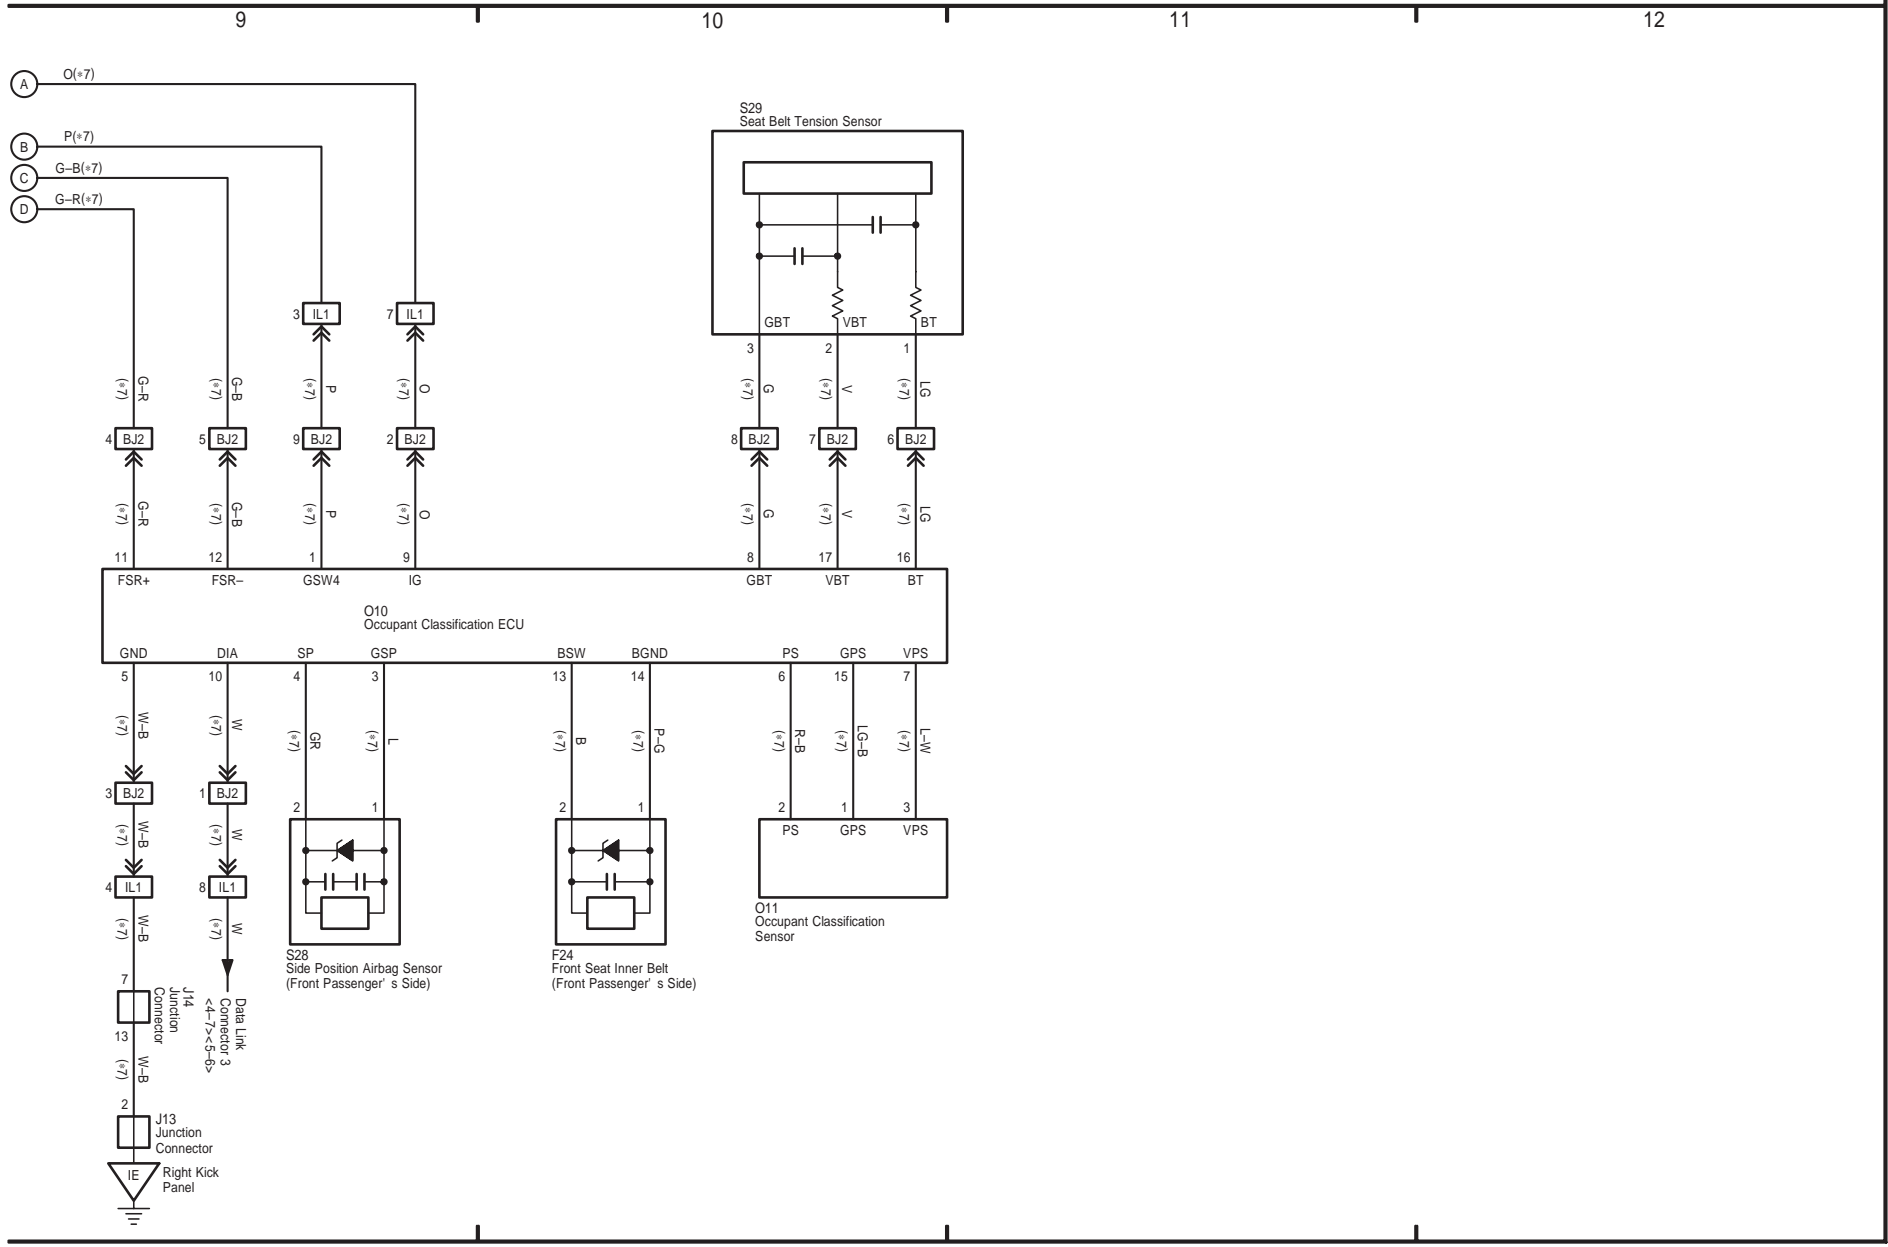

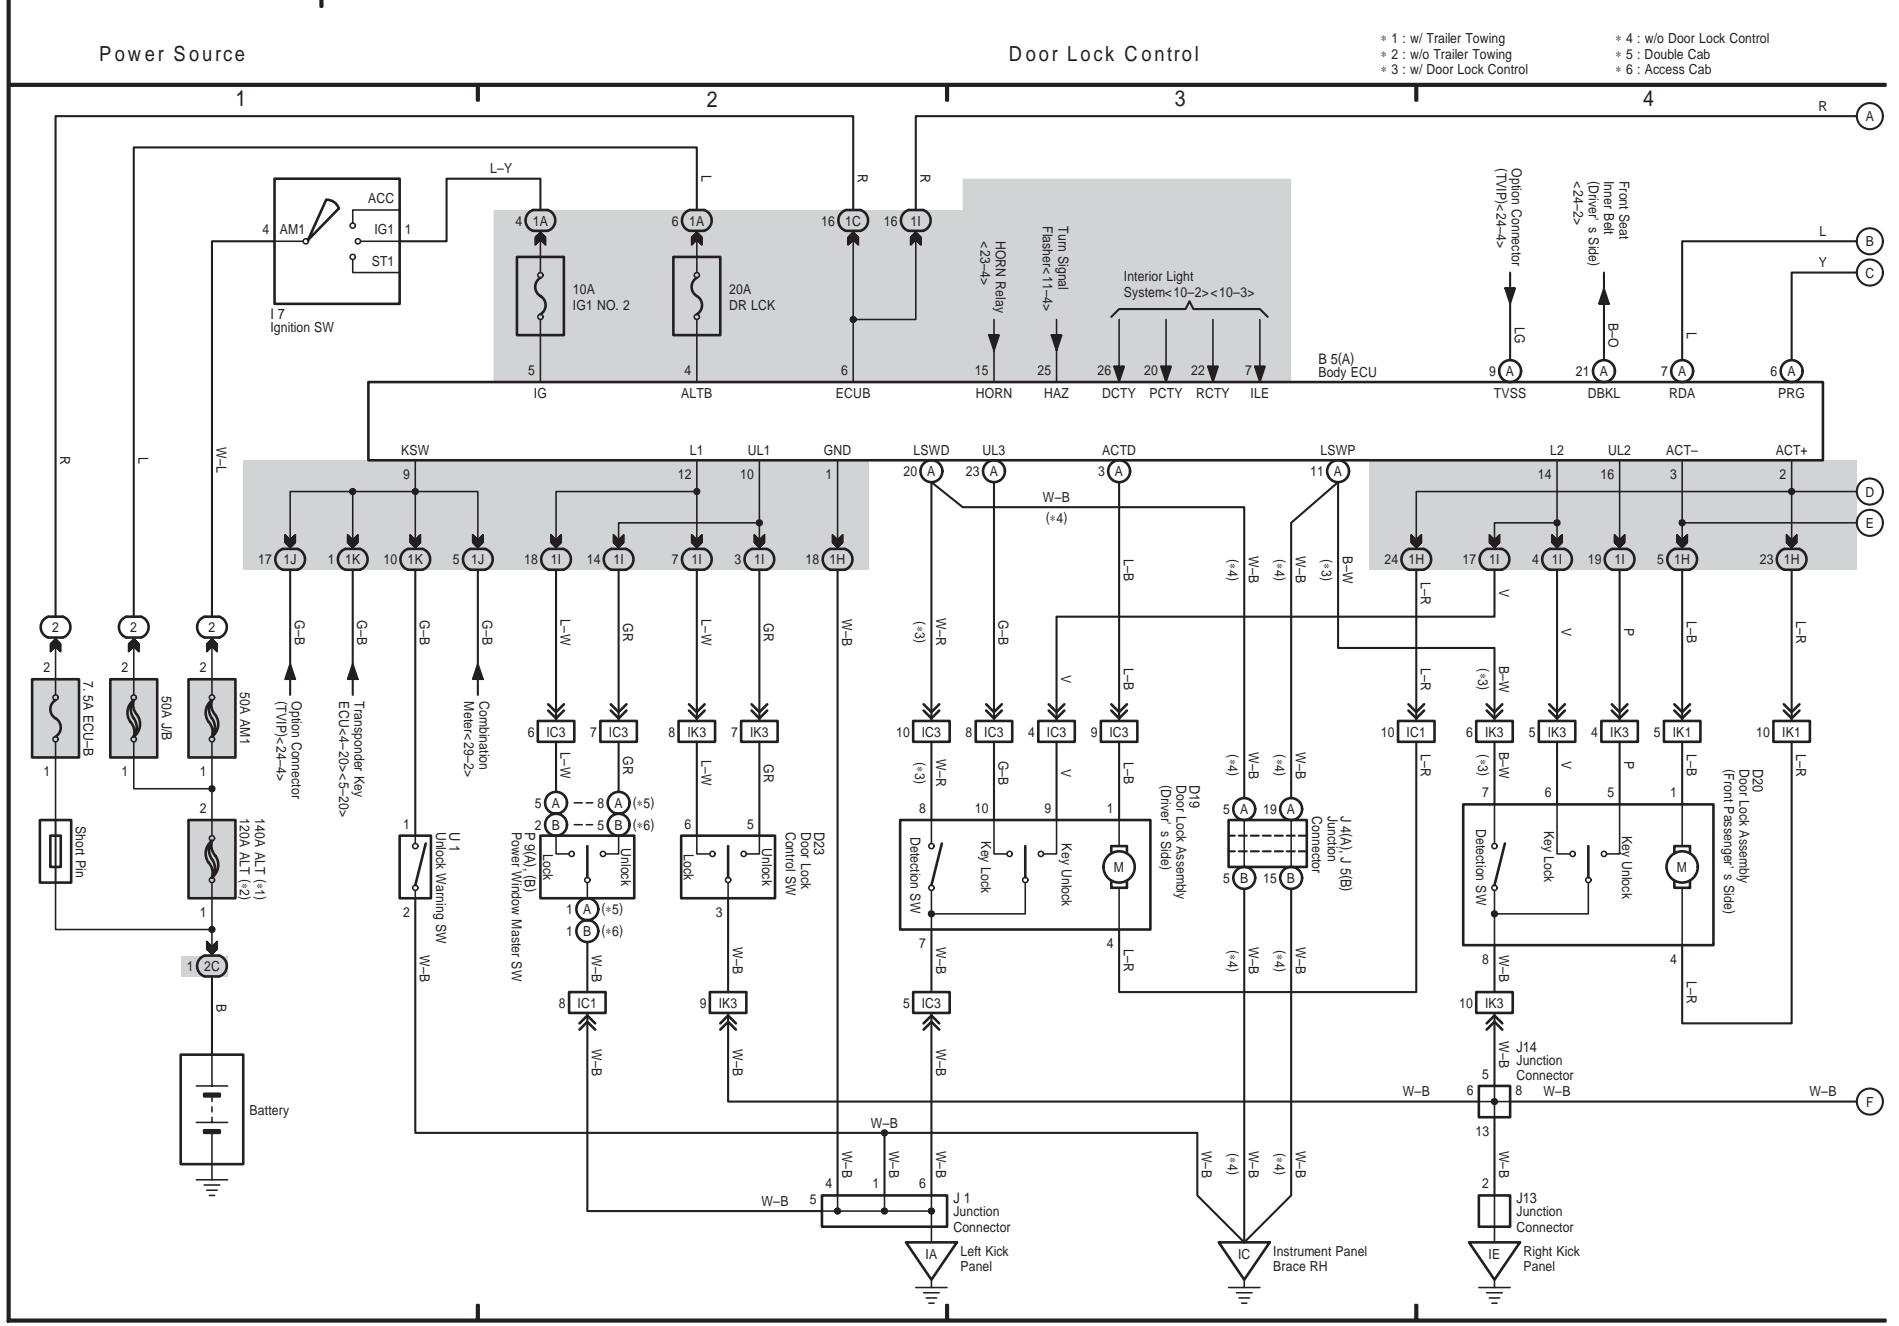



17 TOYOTA TACOMA (Cont' d)

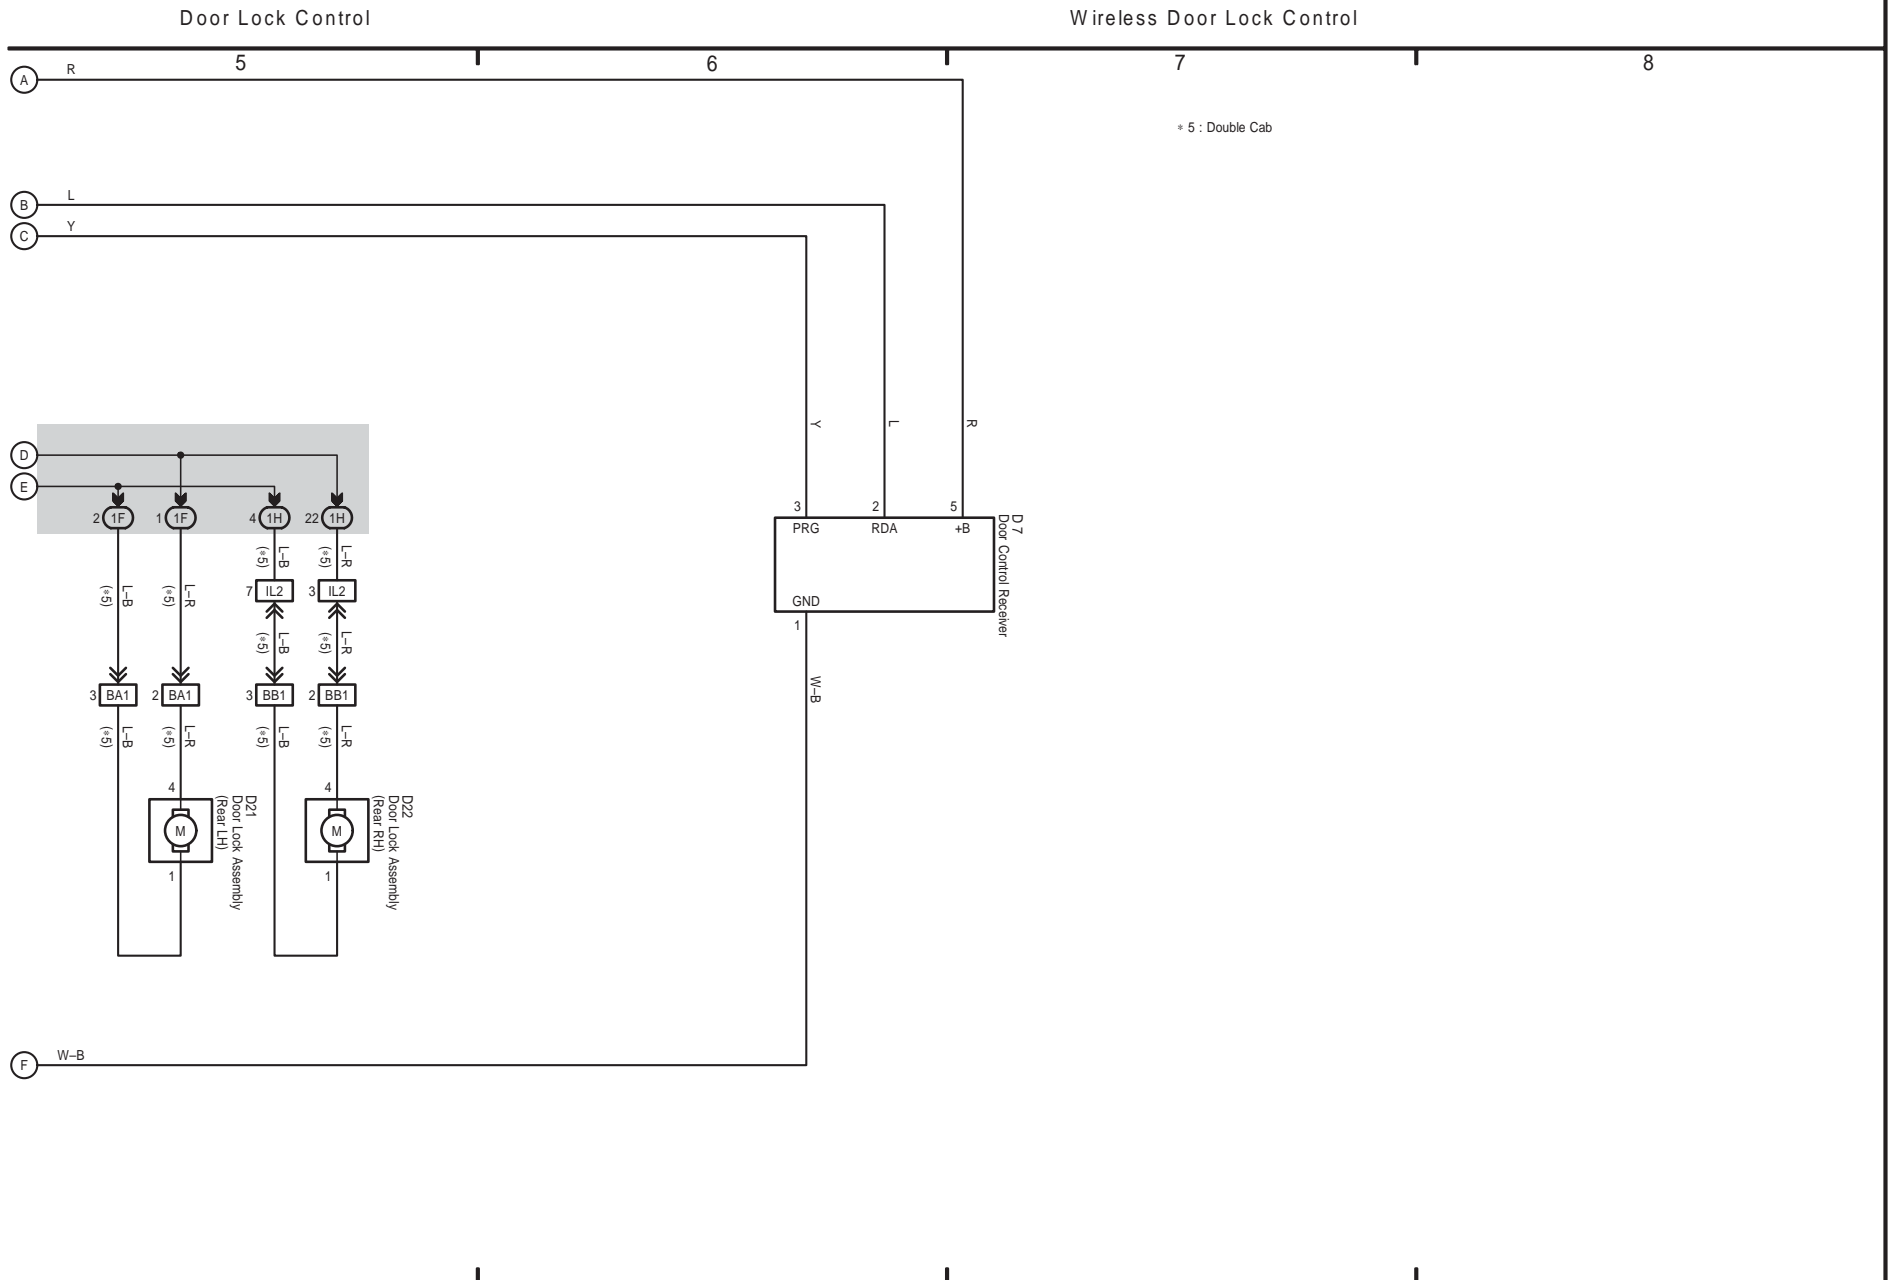

TOYOTA TACOMA (EM01D0U)


18 TOYOTA TACOMA

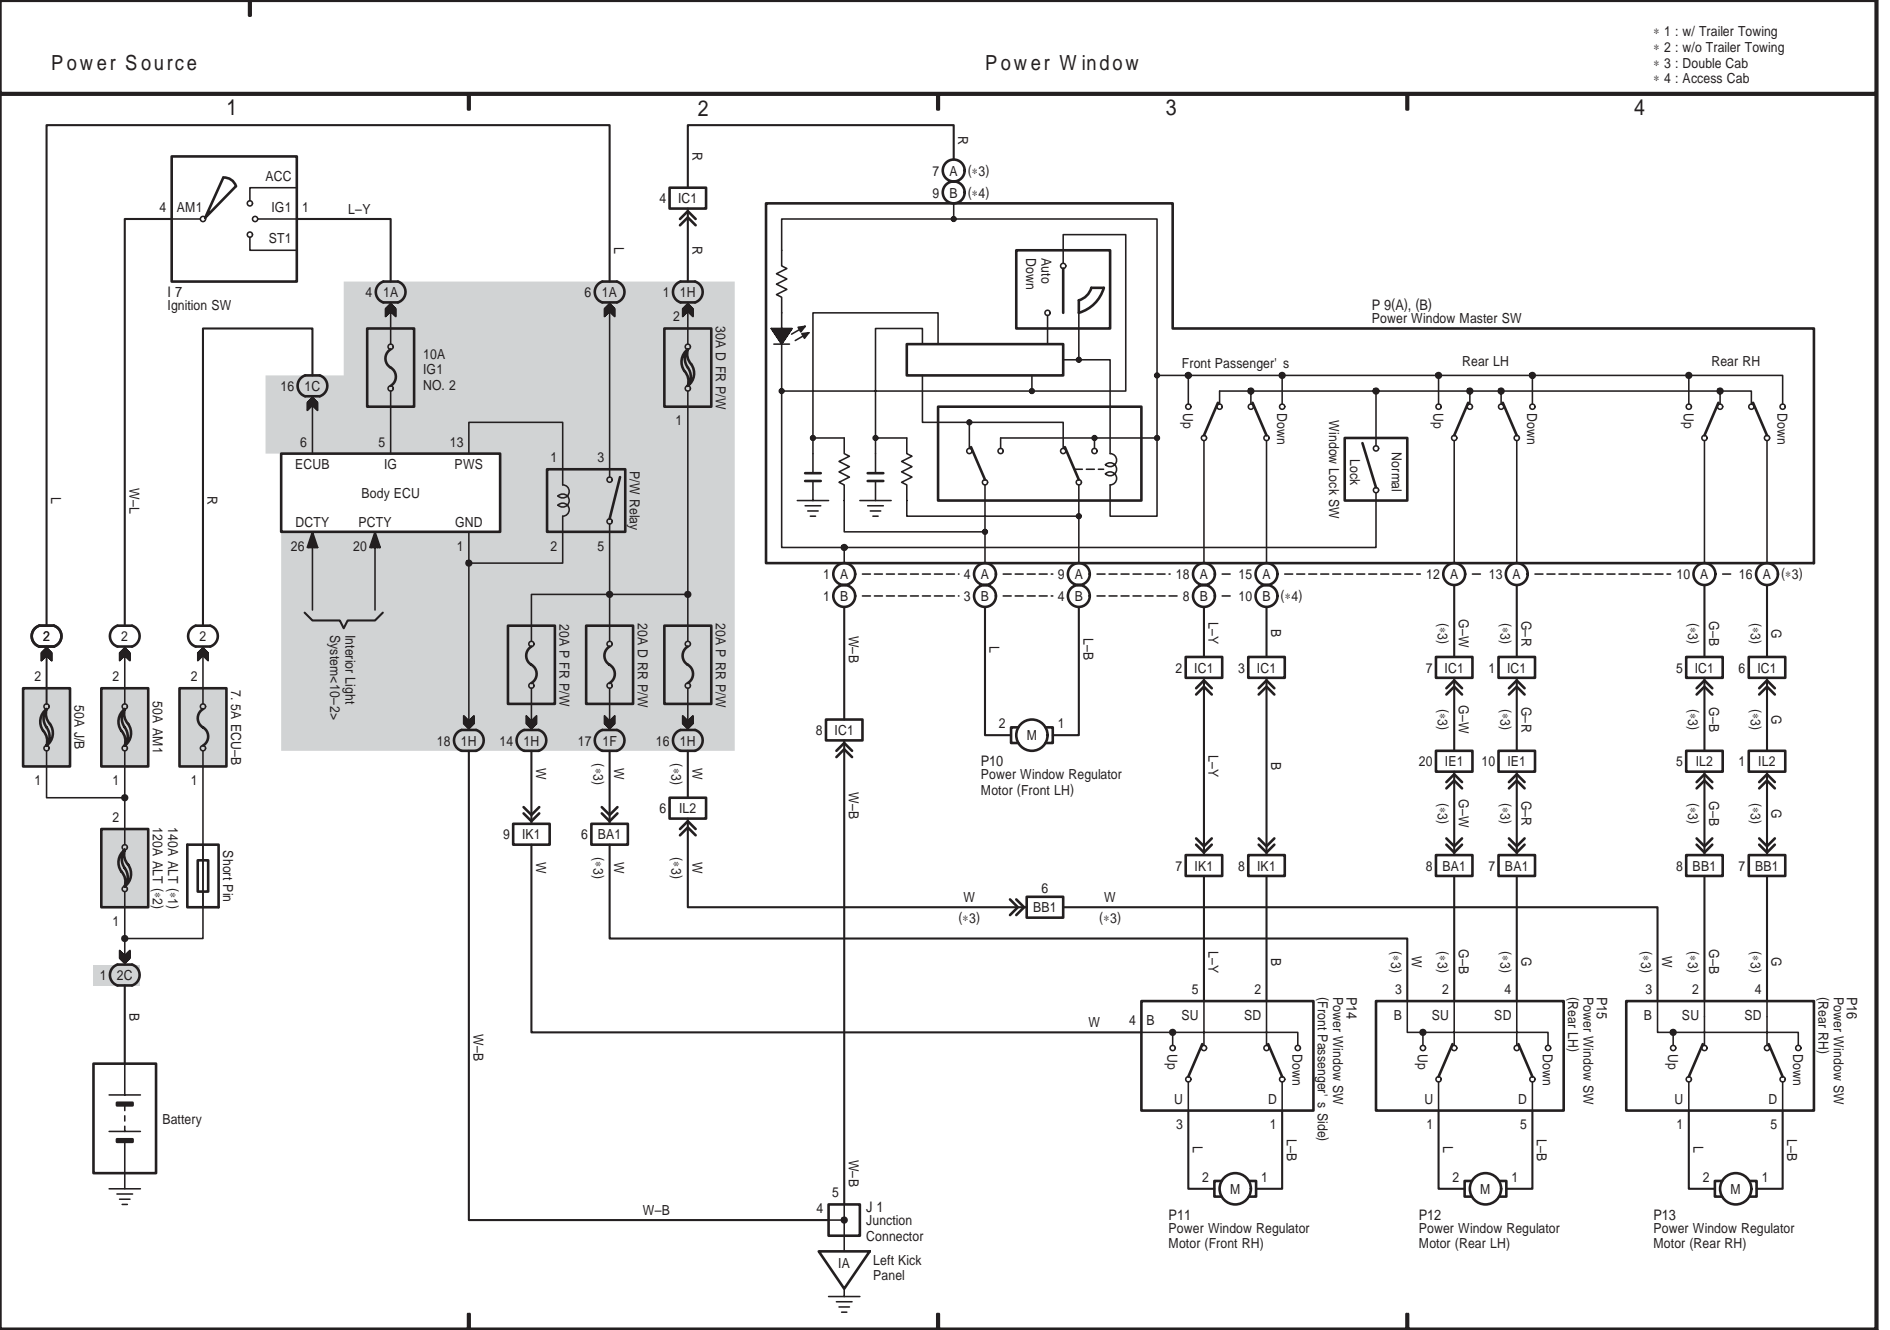

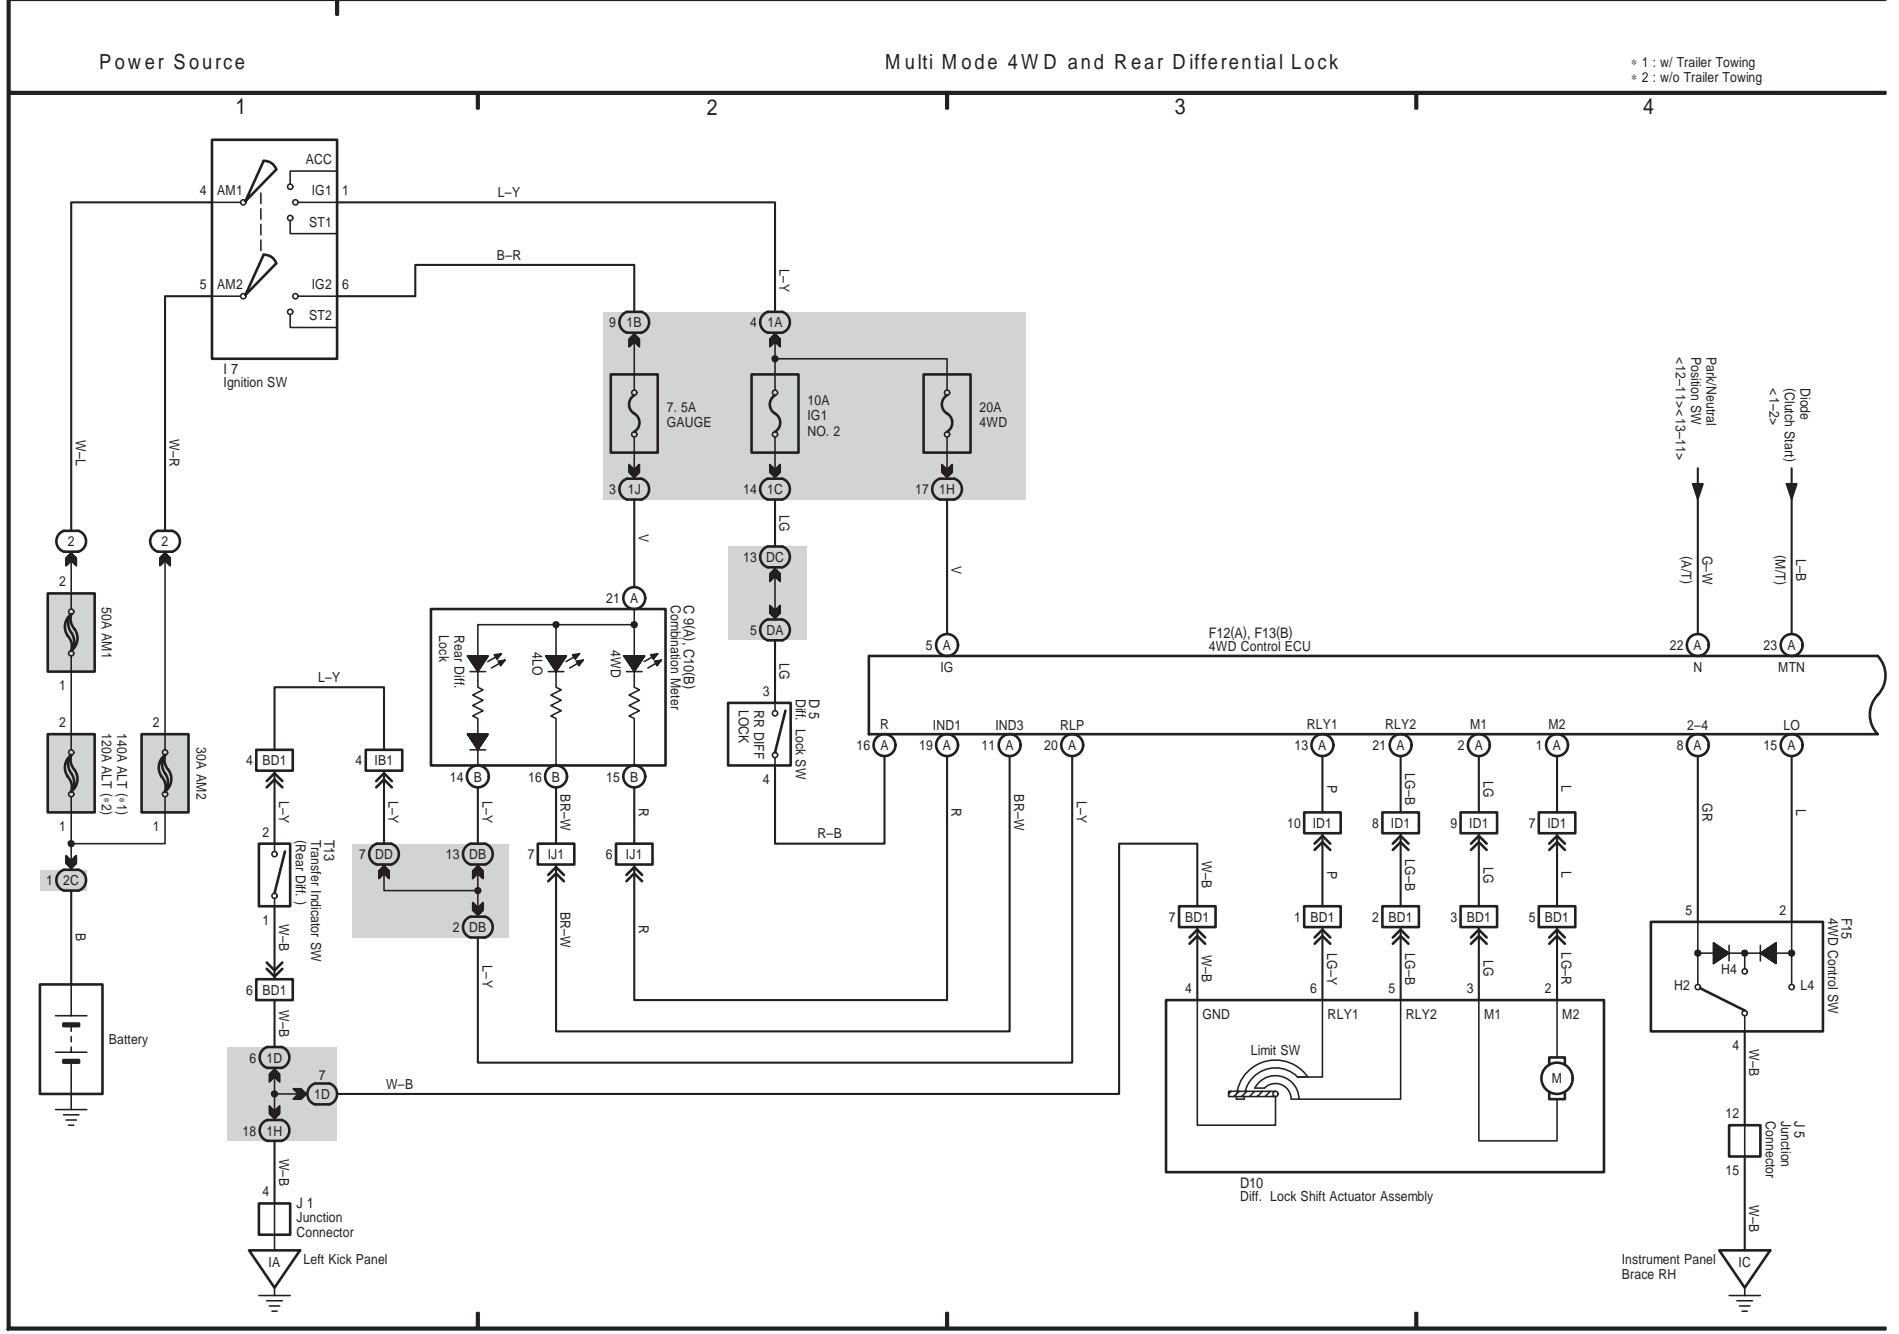

Multi Mode 4WD and Rear Differential Lock

+ 3 : w/ ADD
 + 4 : 1GR-FE
 + 5 : 2TR-FE

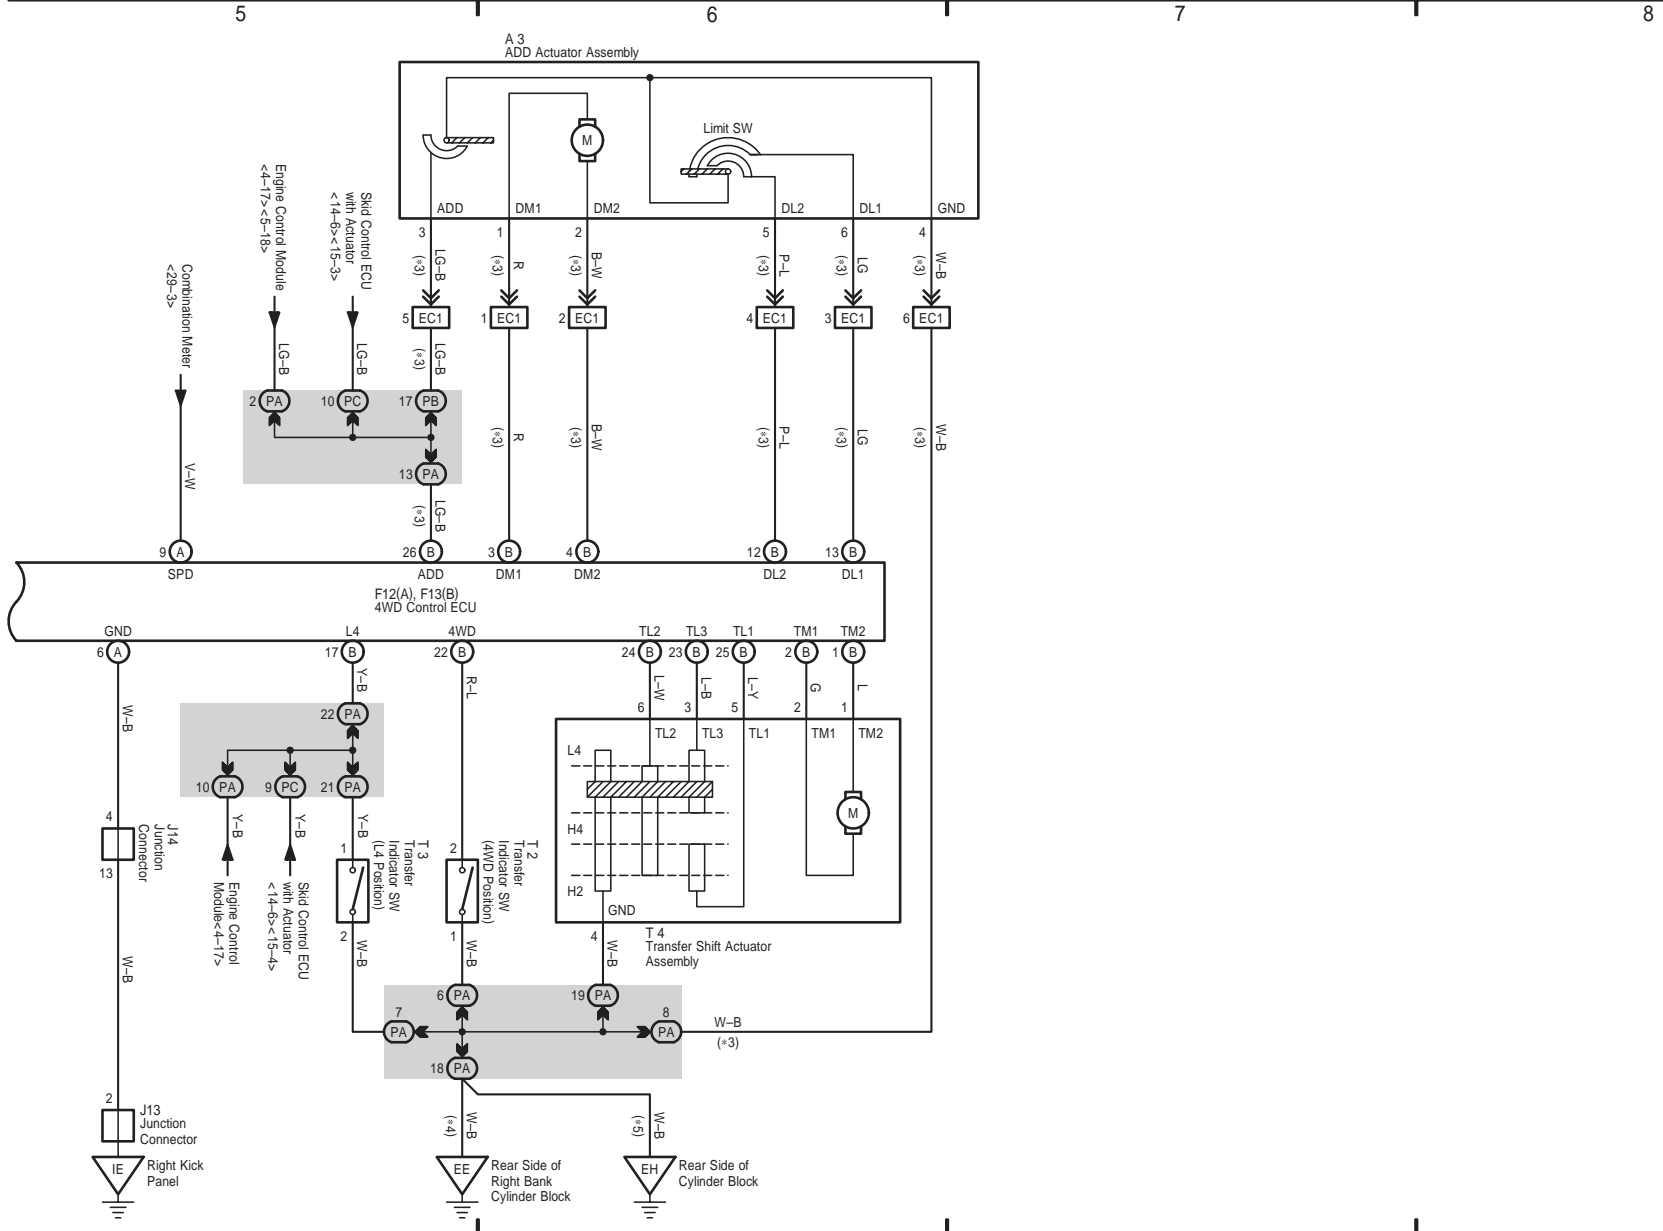


TOYOTA TACOMA (EM01D0U)



20 TOYOTA TACOMA


M OVERALL ELECTRICAL WIRING DIAGRAM

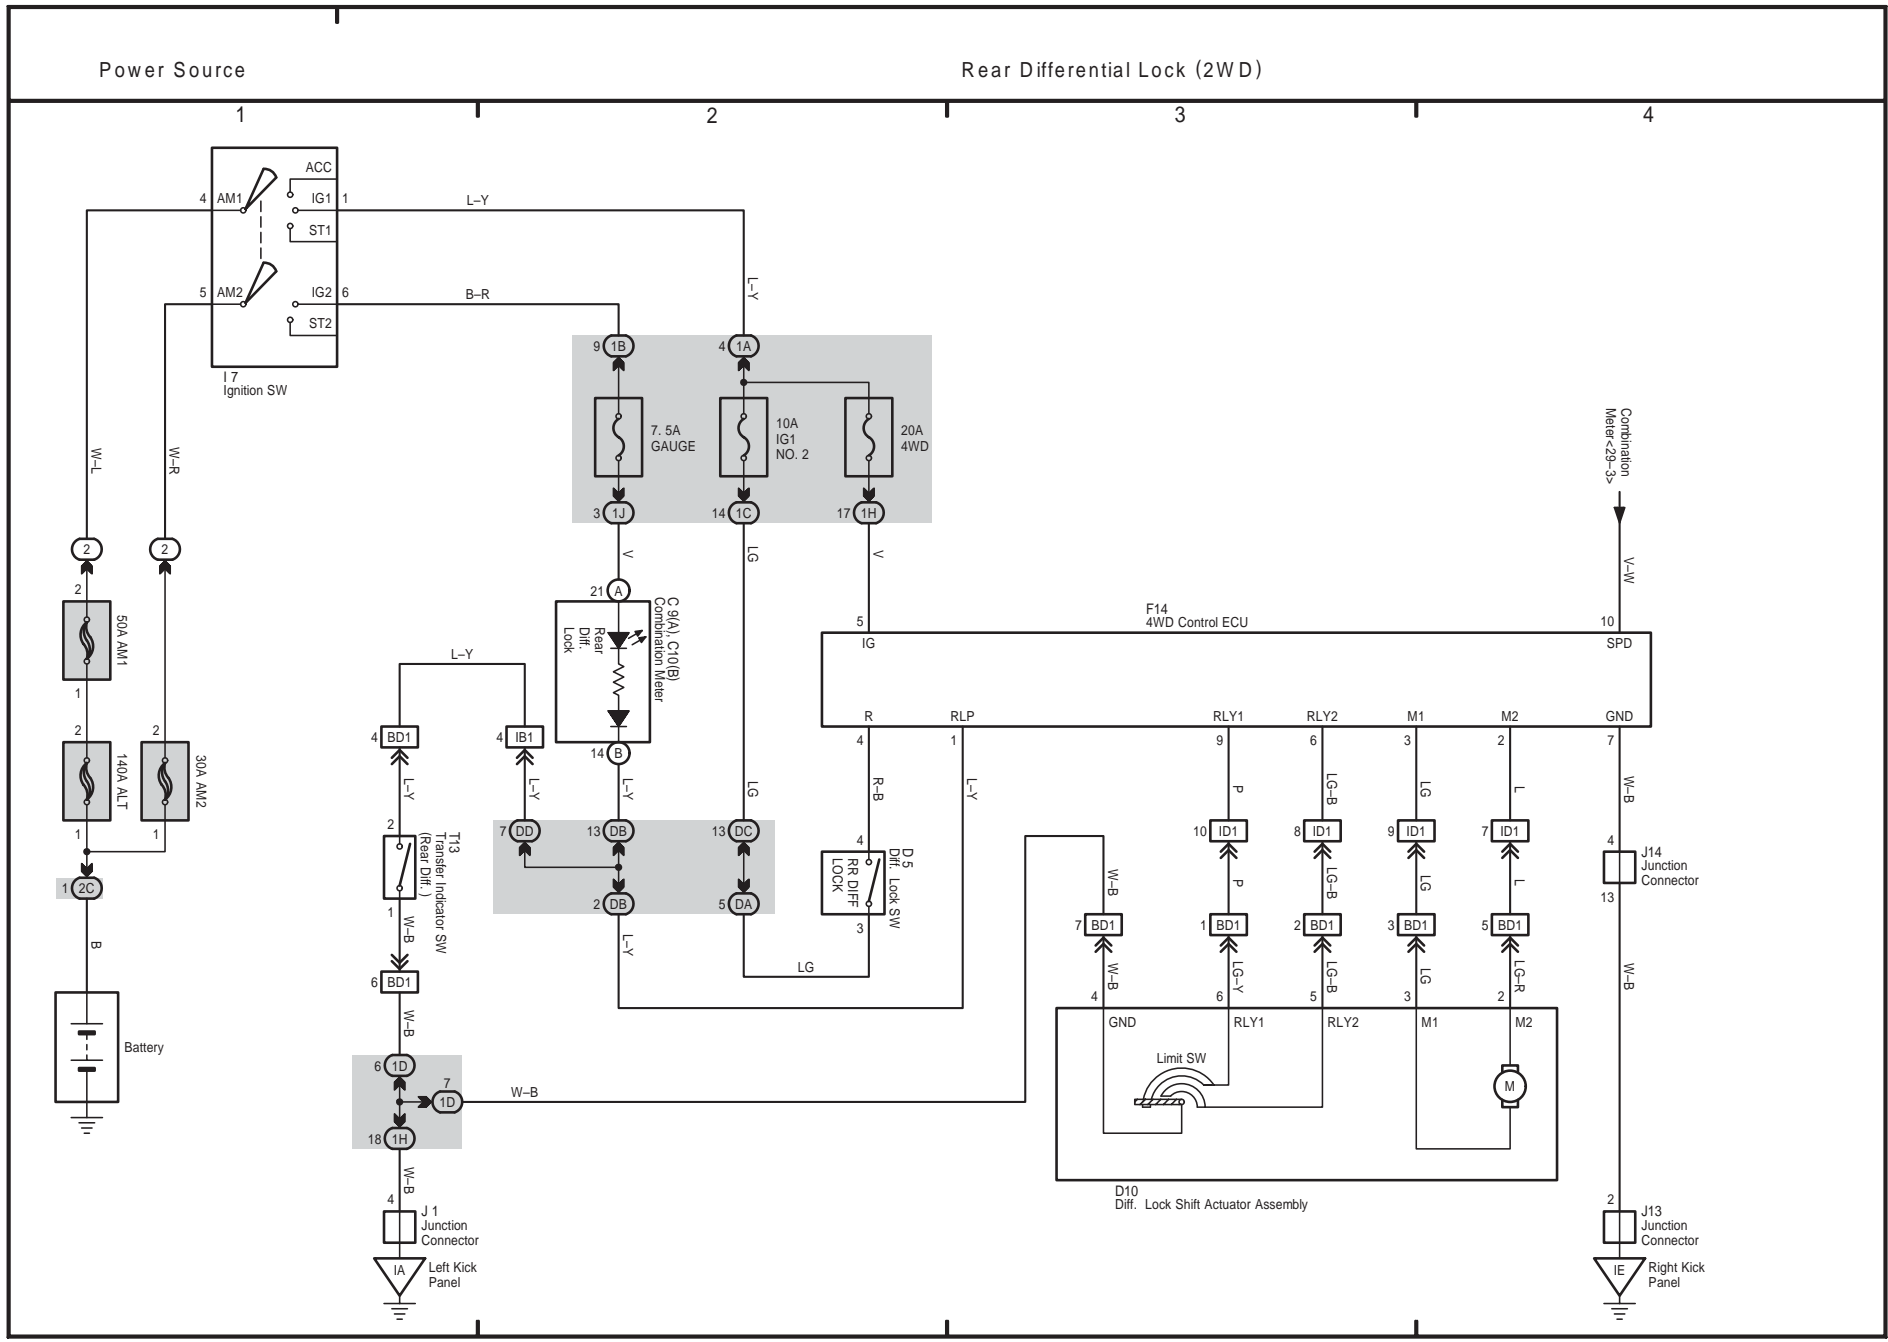

21 TOYOTA TACOMA


TOYOTA TACOMA (EM01D0U)

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : w/ INT Time SW
- * 4 : w/o INT Time SW

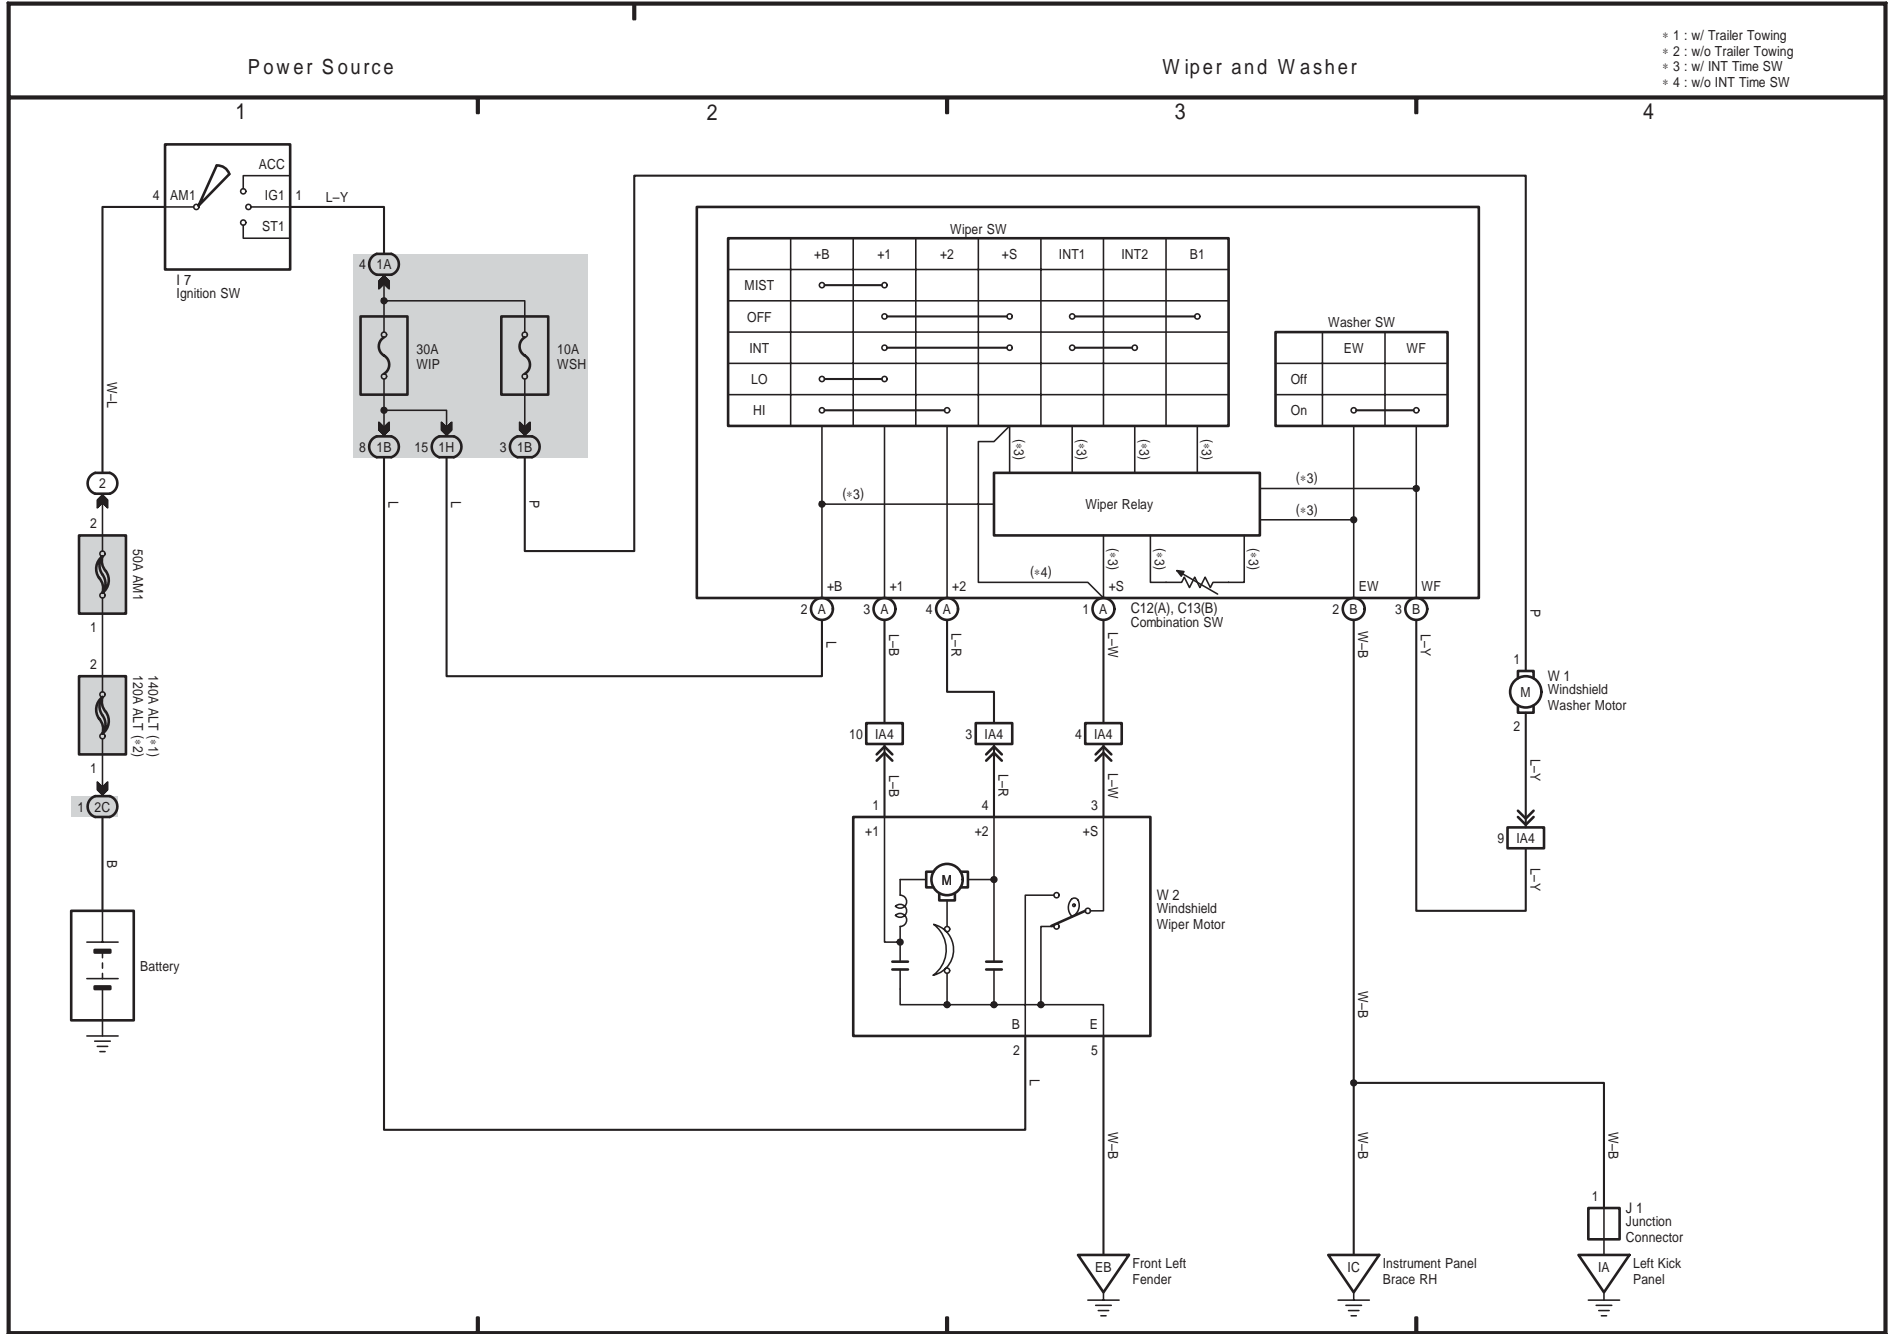

22 TOYOTA TACOMA

M OVERALL ELECTRICAL WIRING DIAGRAM

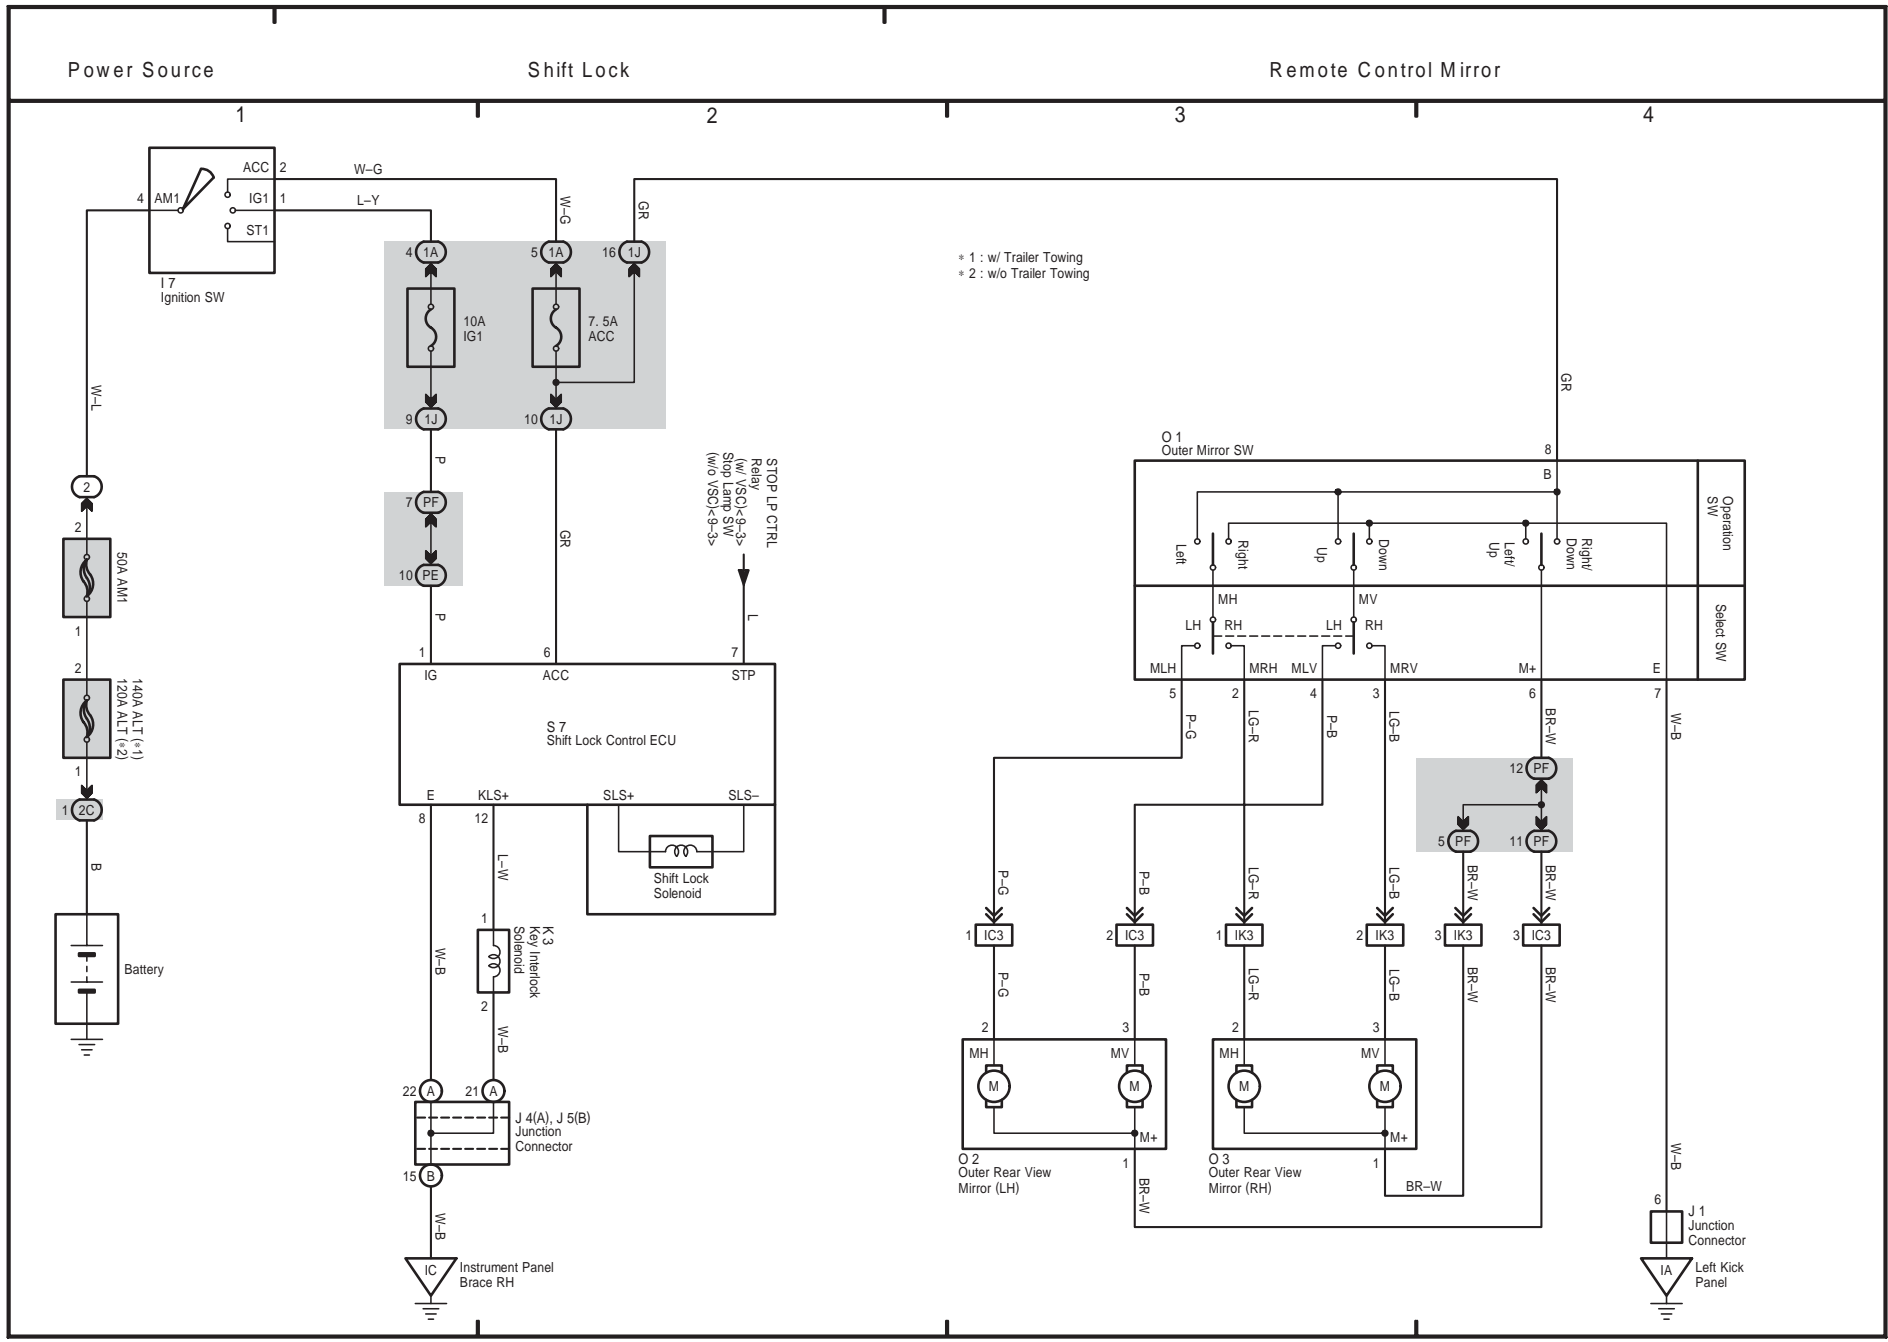


23 TOYOTA TACOMA

Power Source

Automatic Glare-Resistant
EC Mirror

Accessory Meter

Horn

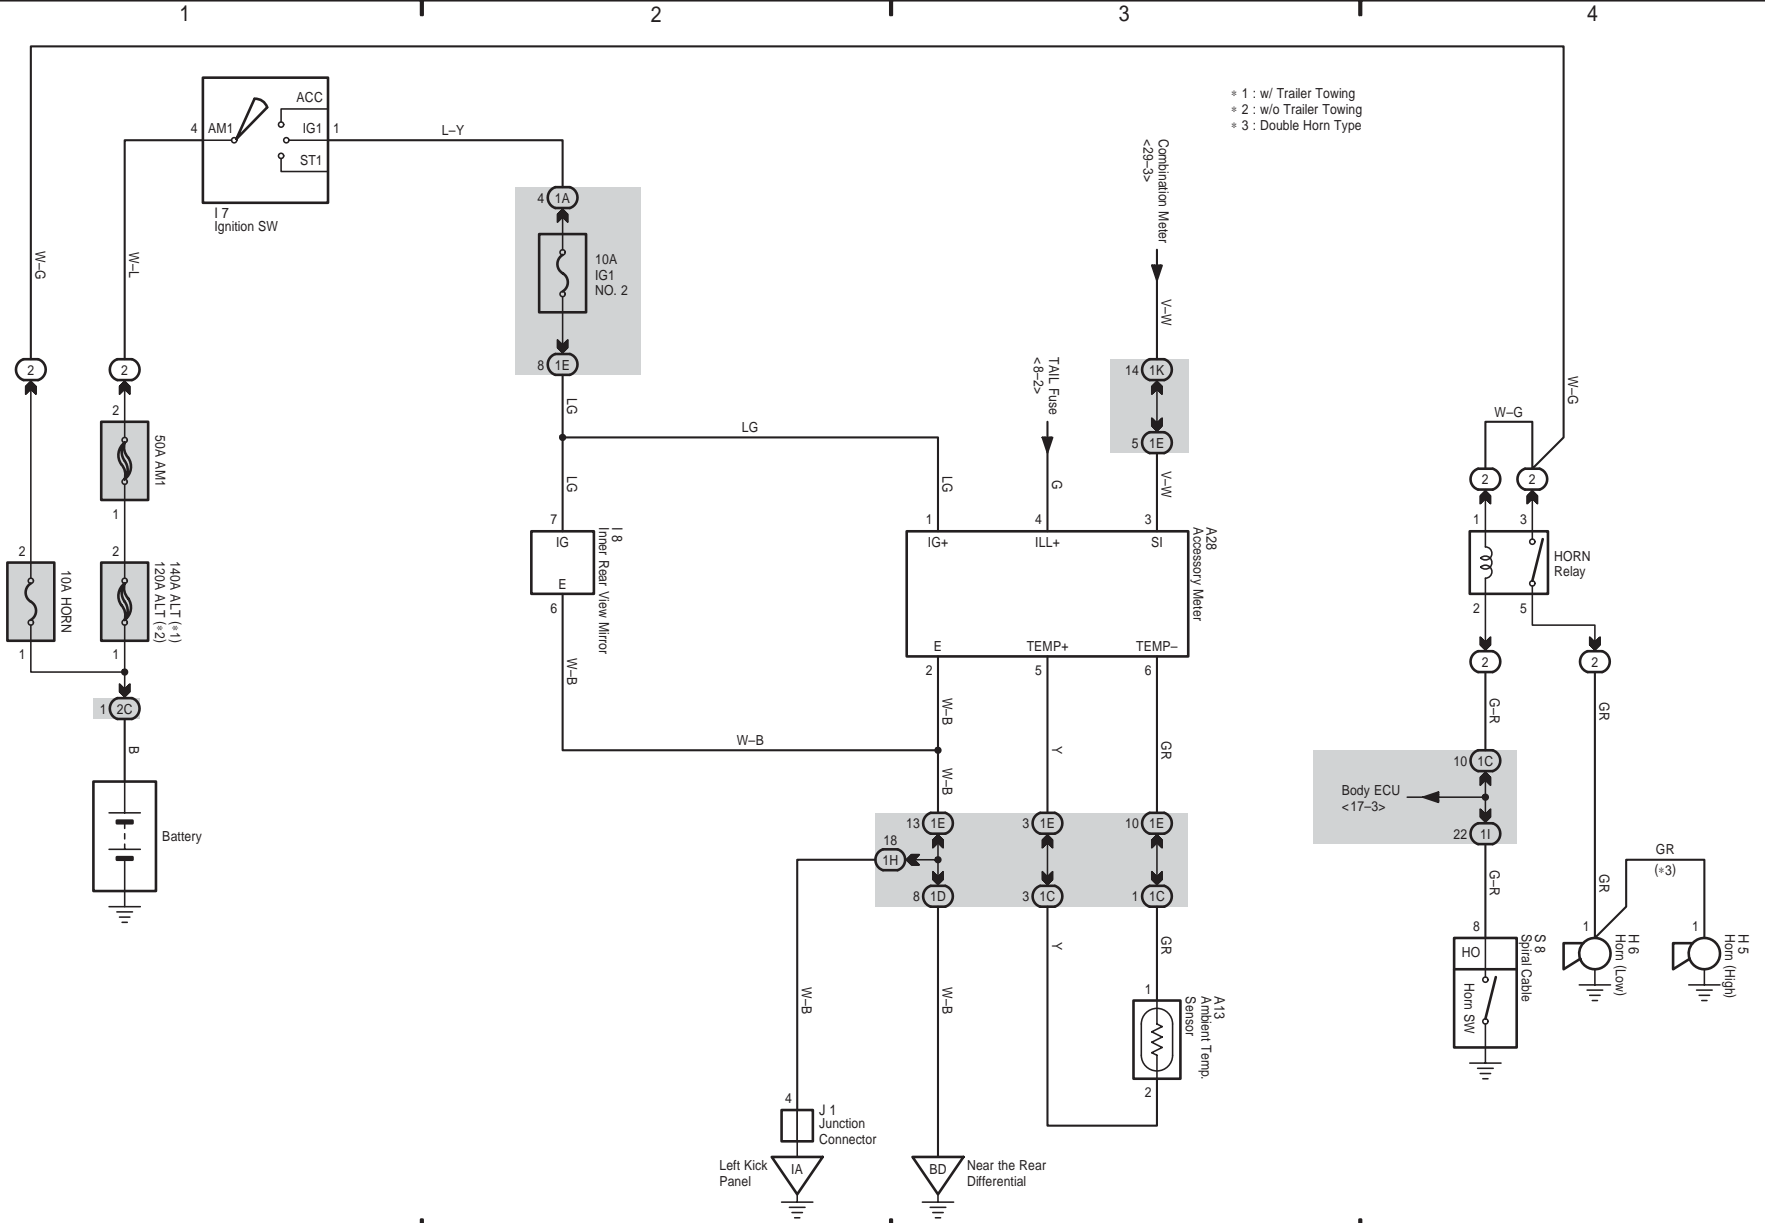

- * 1 : w/ Trailer Towing
- * 2 : w/o Trailer Towing
- * 3 : Double Horn Type

TOYOTA TACOMA (EM01D0U)




M OVERALL ELECTRICAL WIRING DIAGRAM

24 TOYOTA TACOMA


362


TOYOTA TACOMA (EM01D0U)

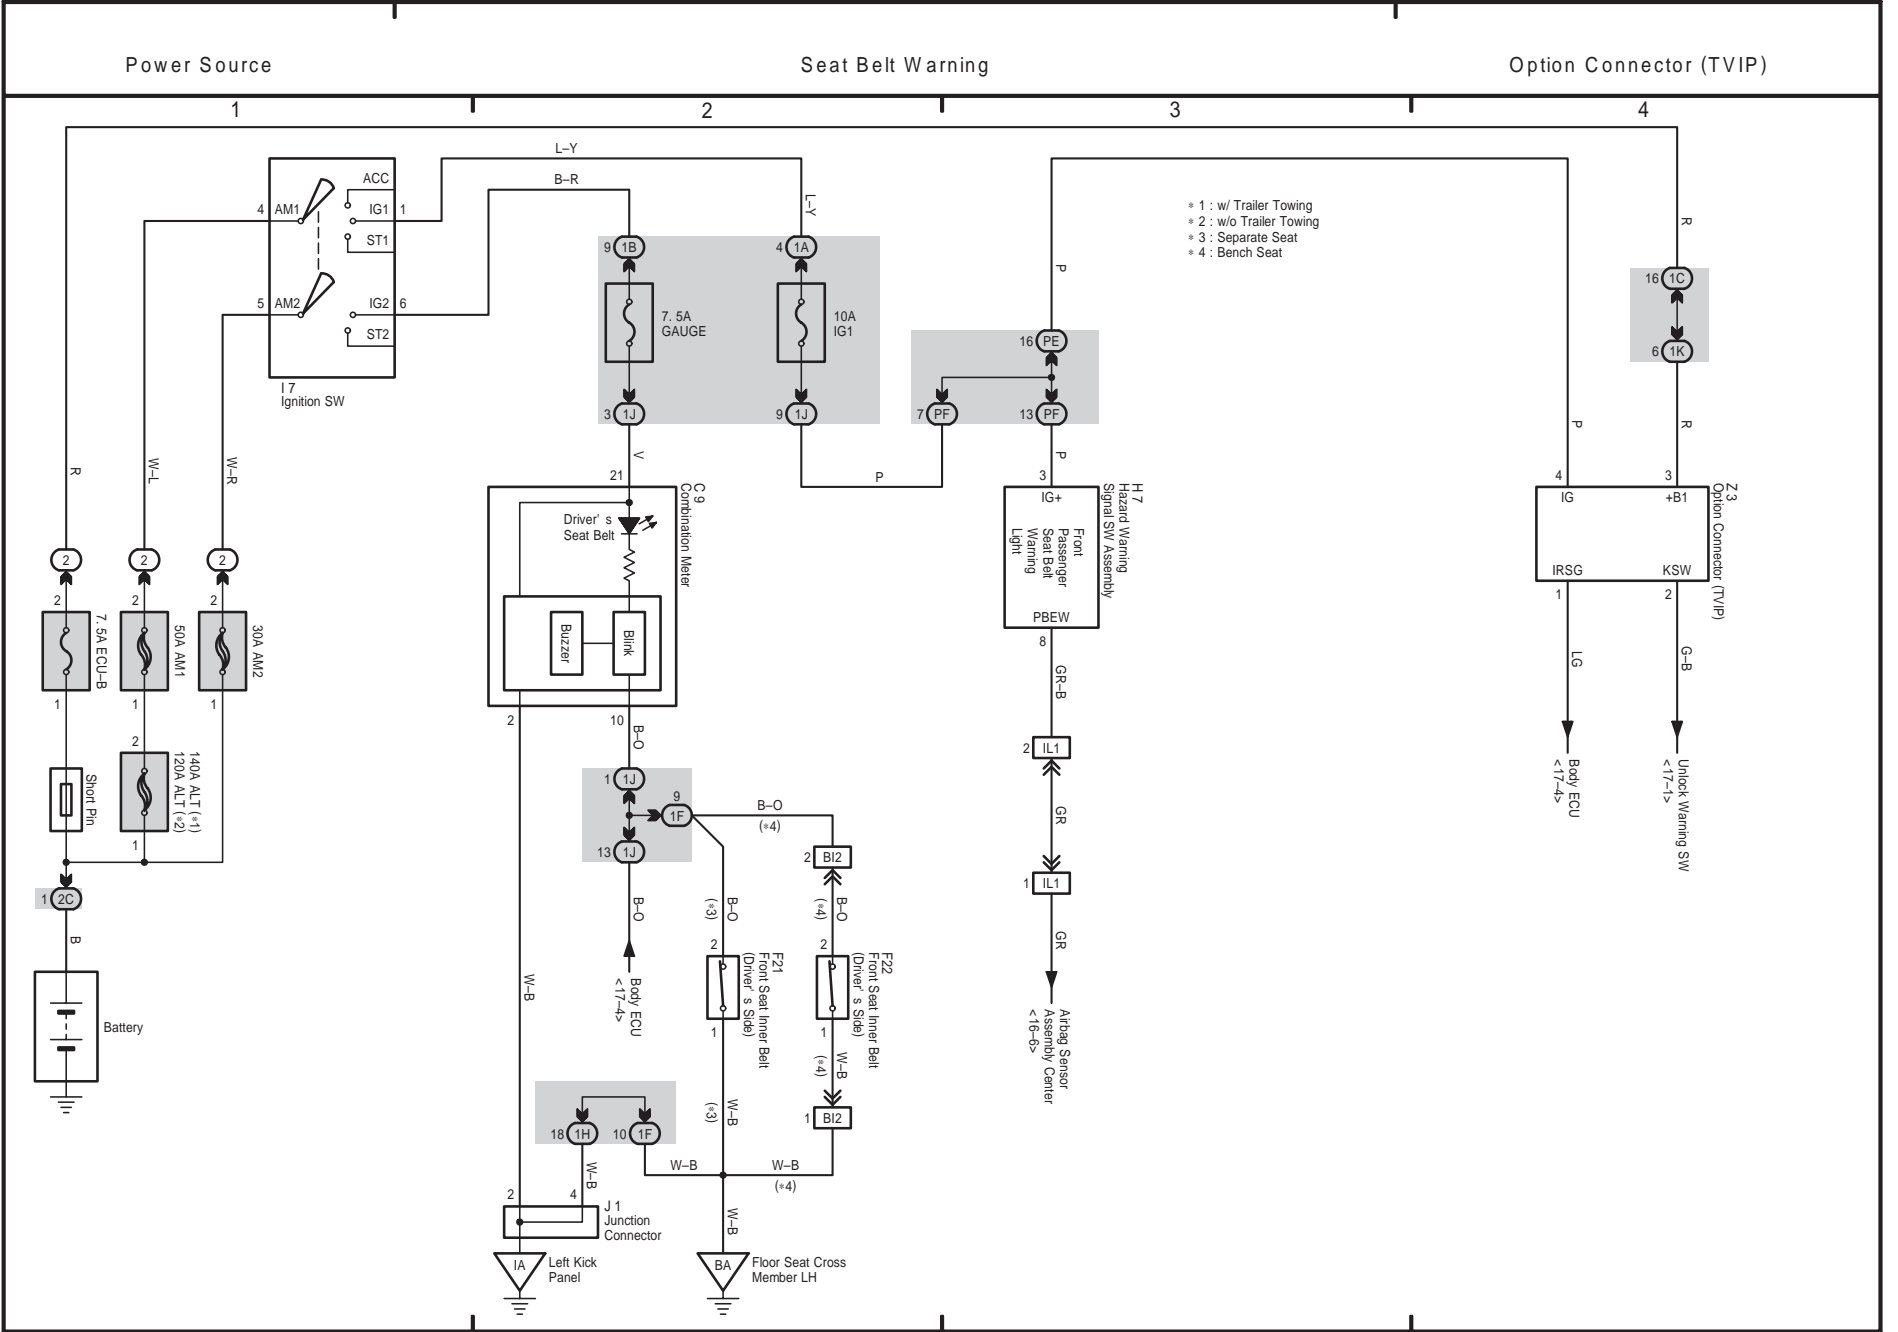

25 TOYOTA TACOMA


TOYOTA TACOMA (EM01D0U)

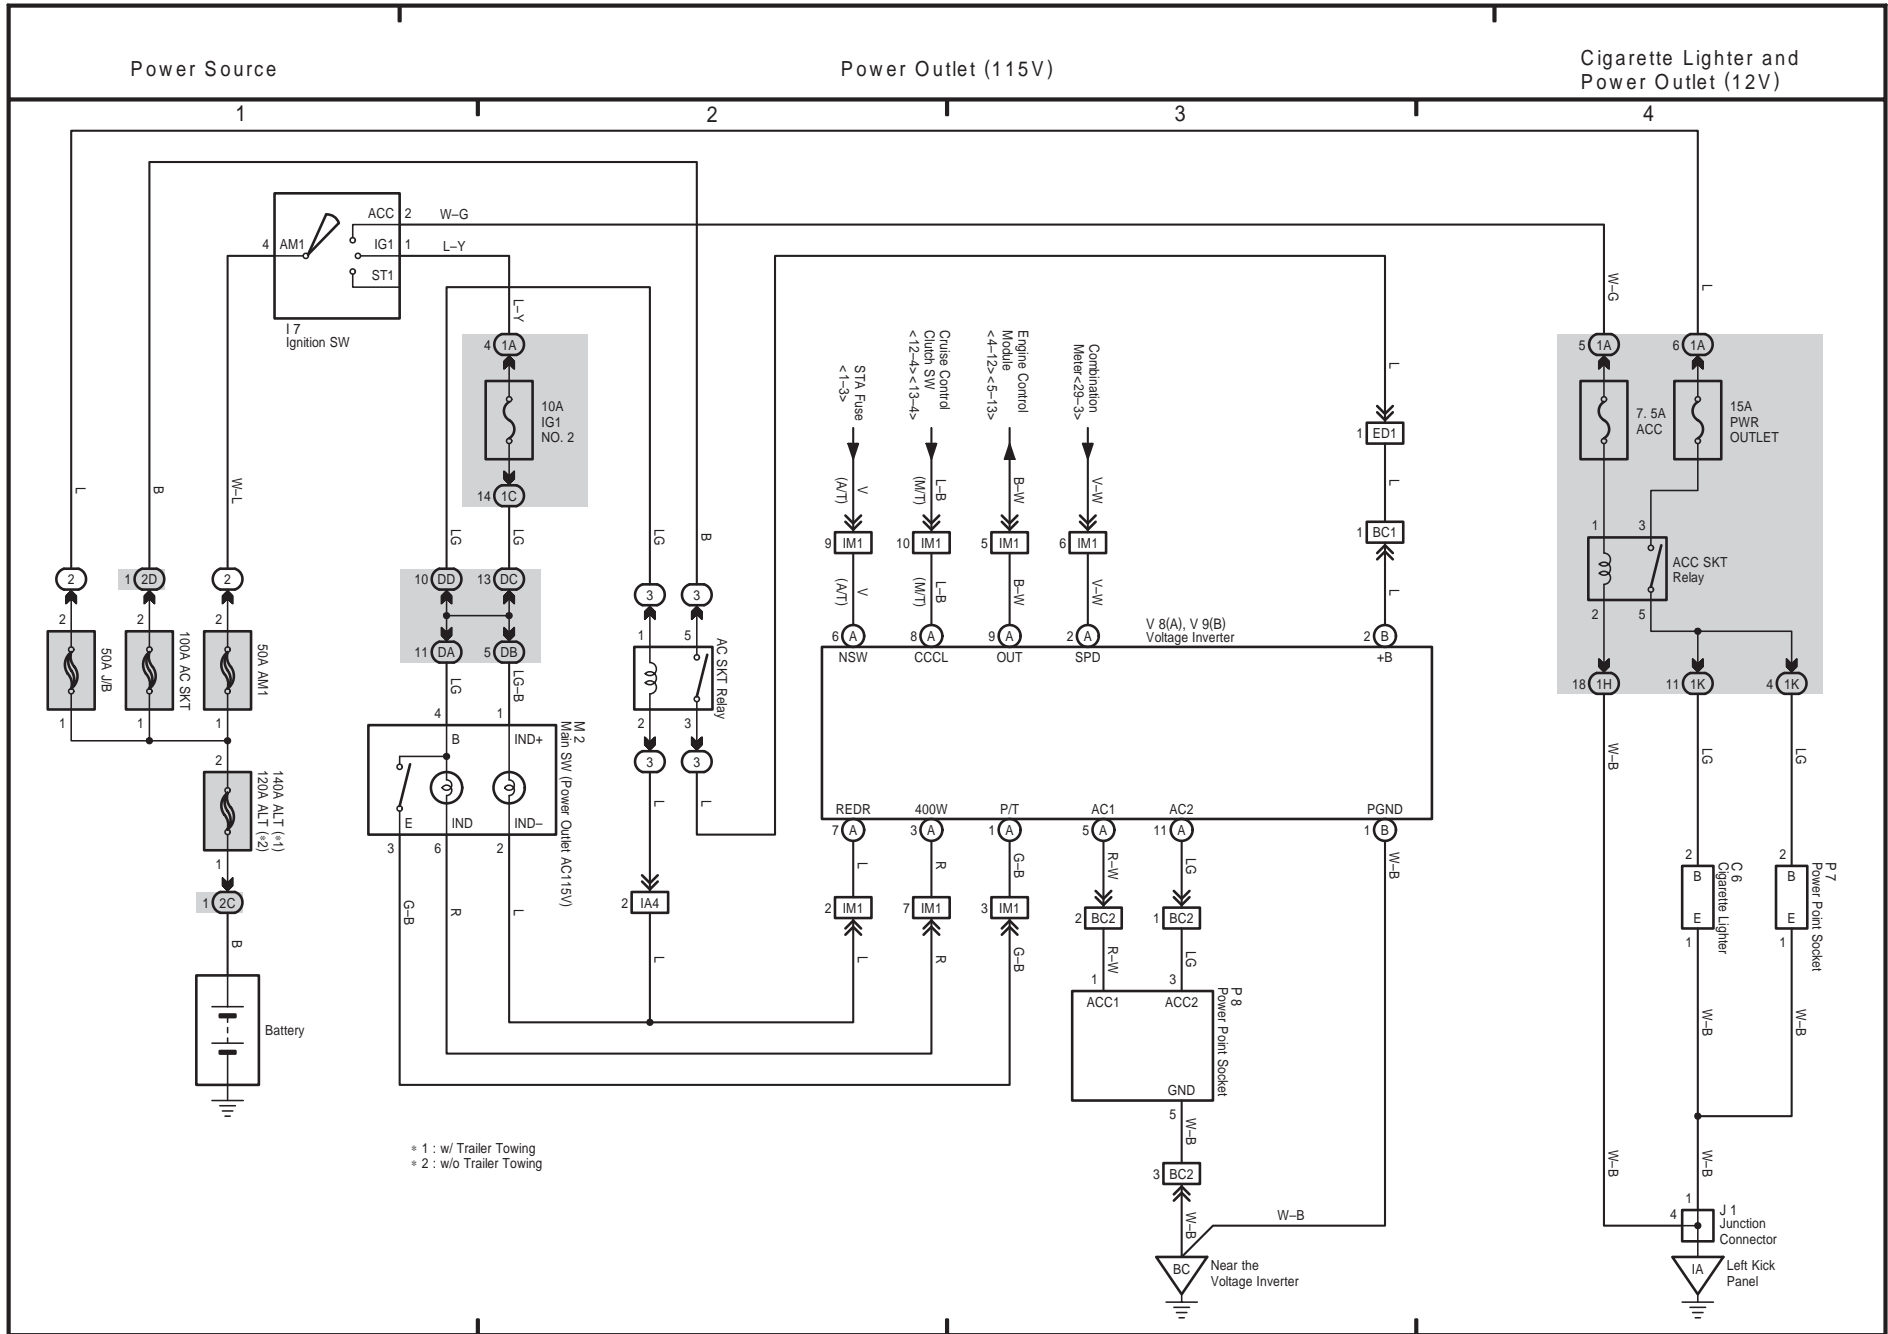


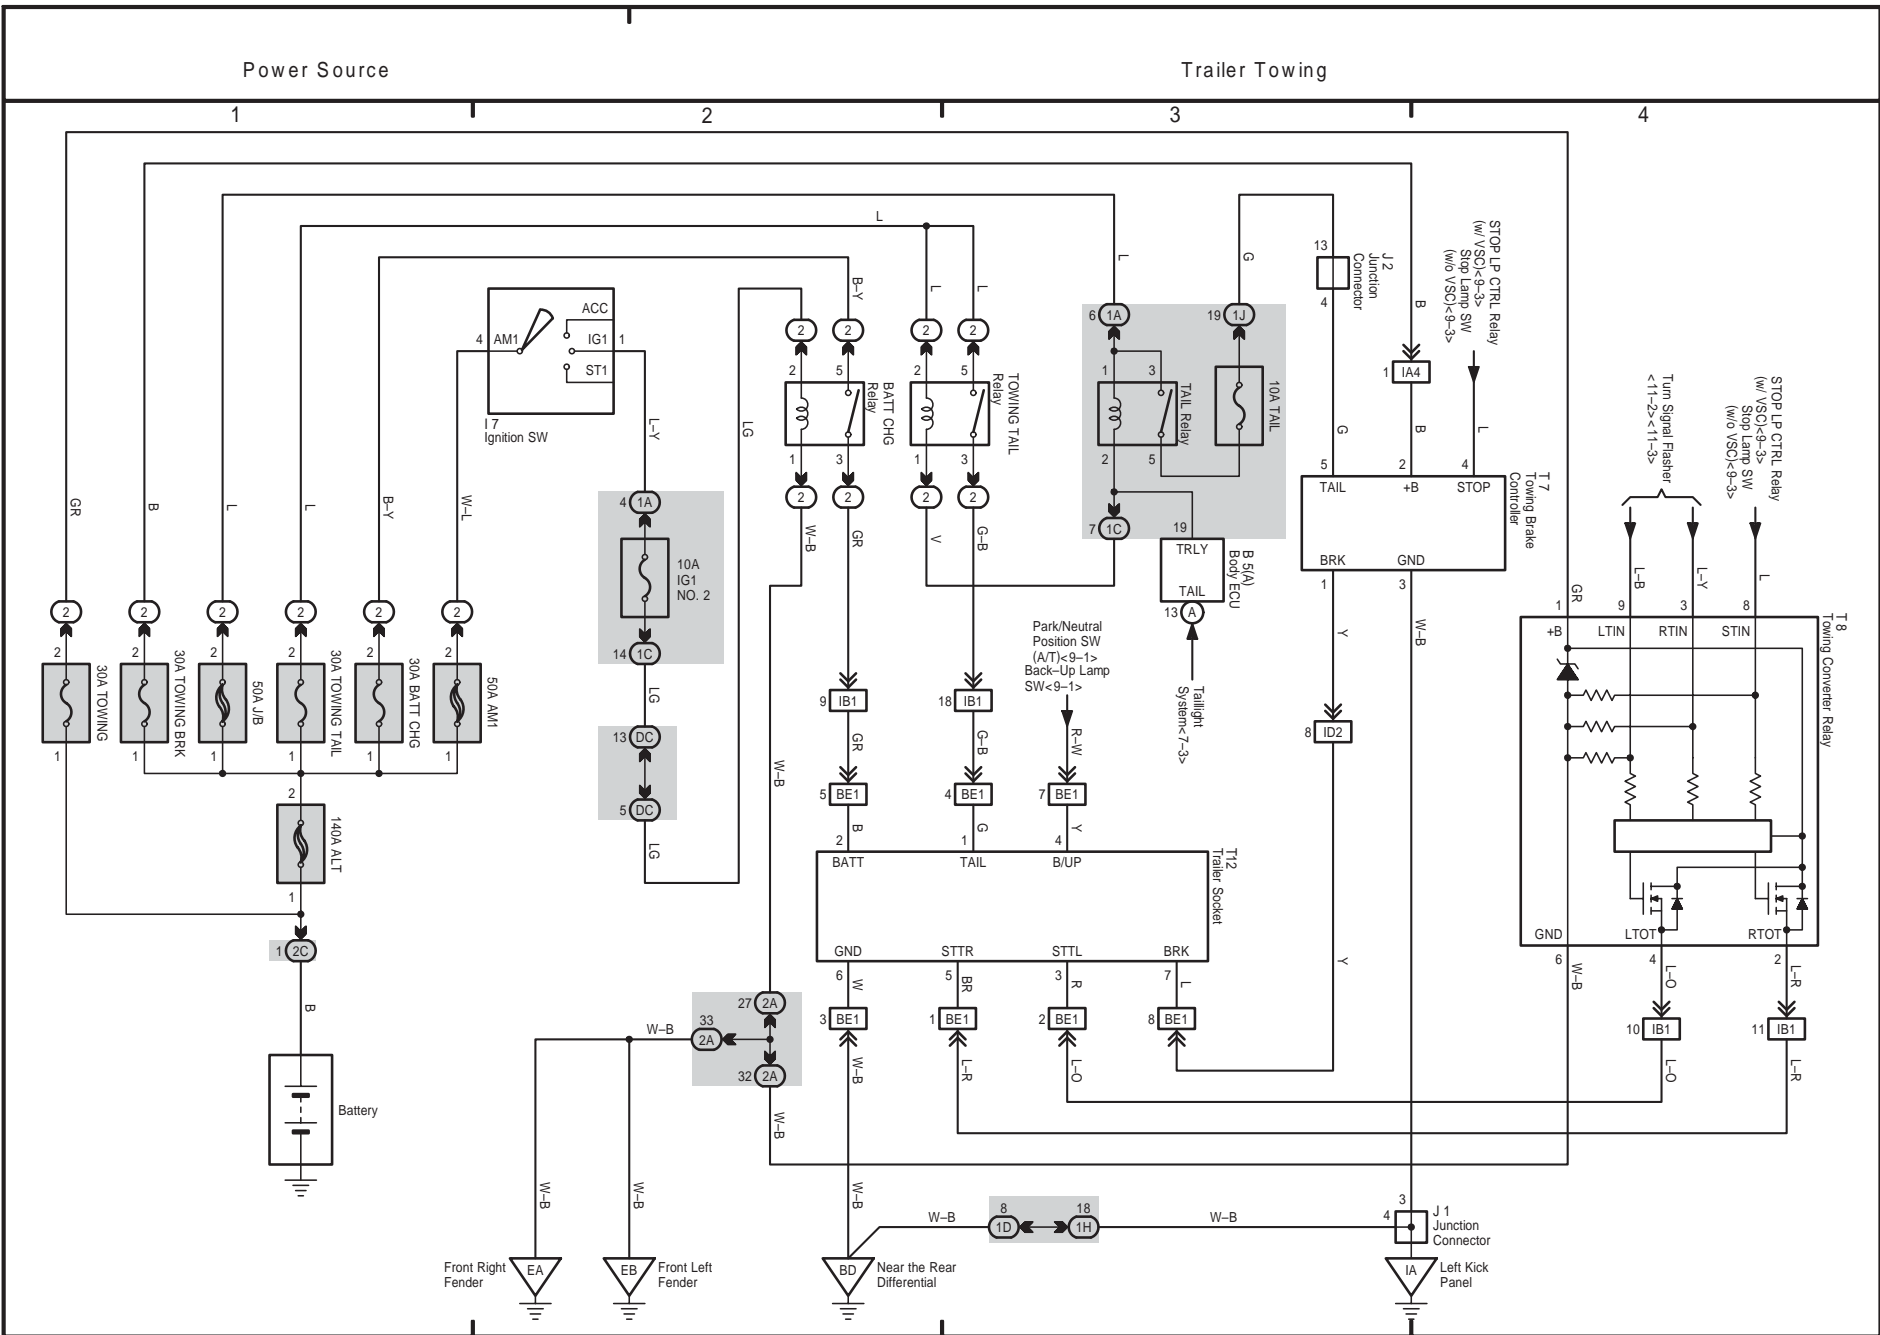


27 TOYOTA TACOMA

TOYOTA TACOMA (EM01D0U)

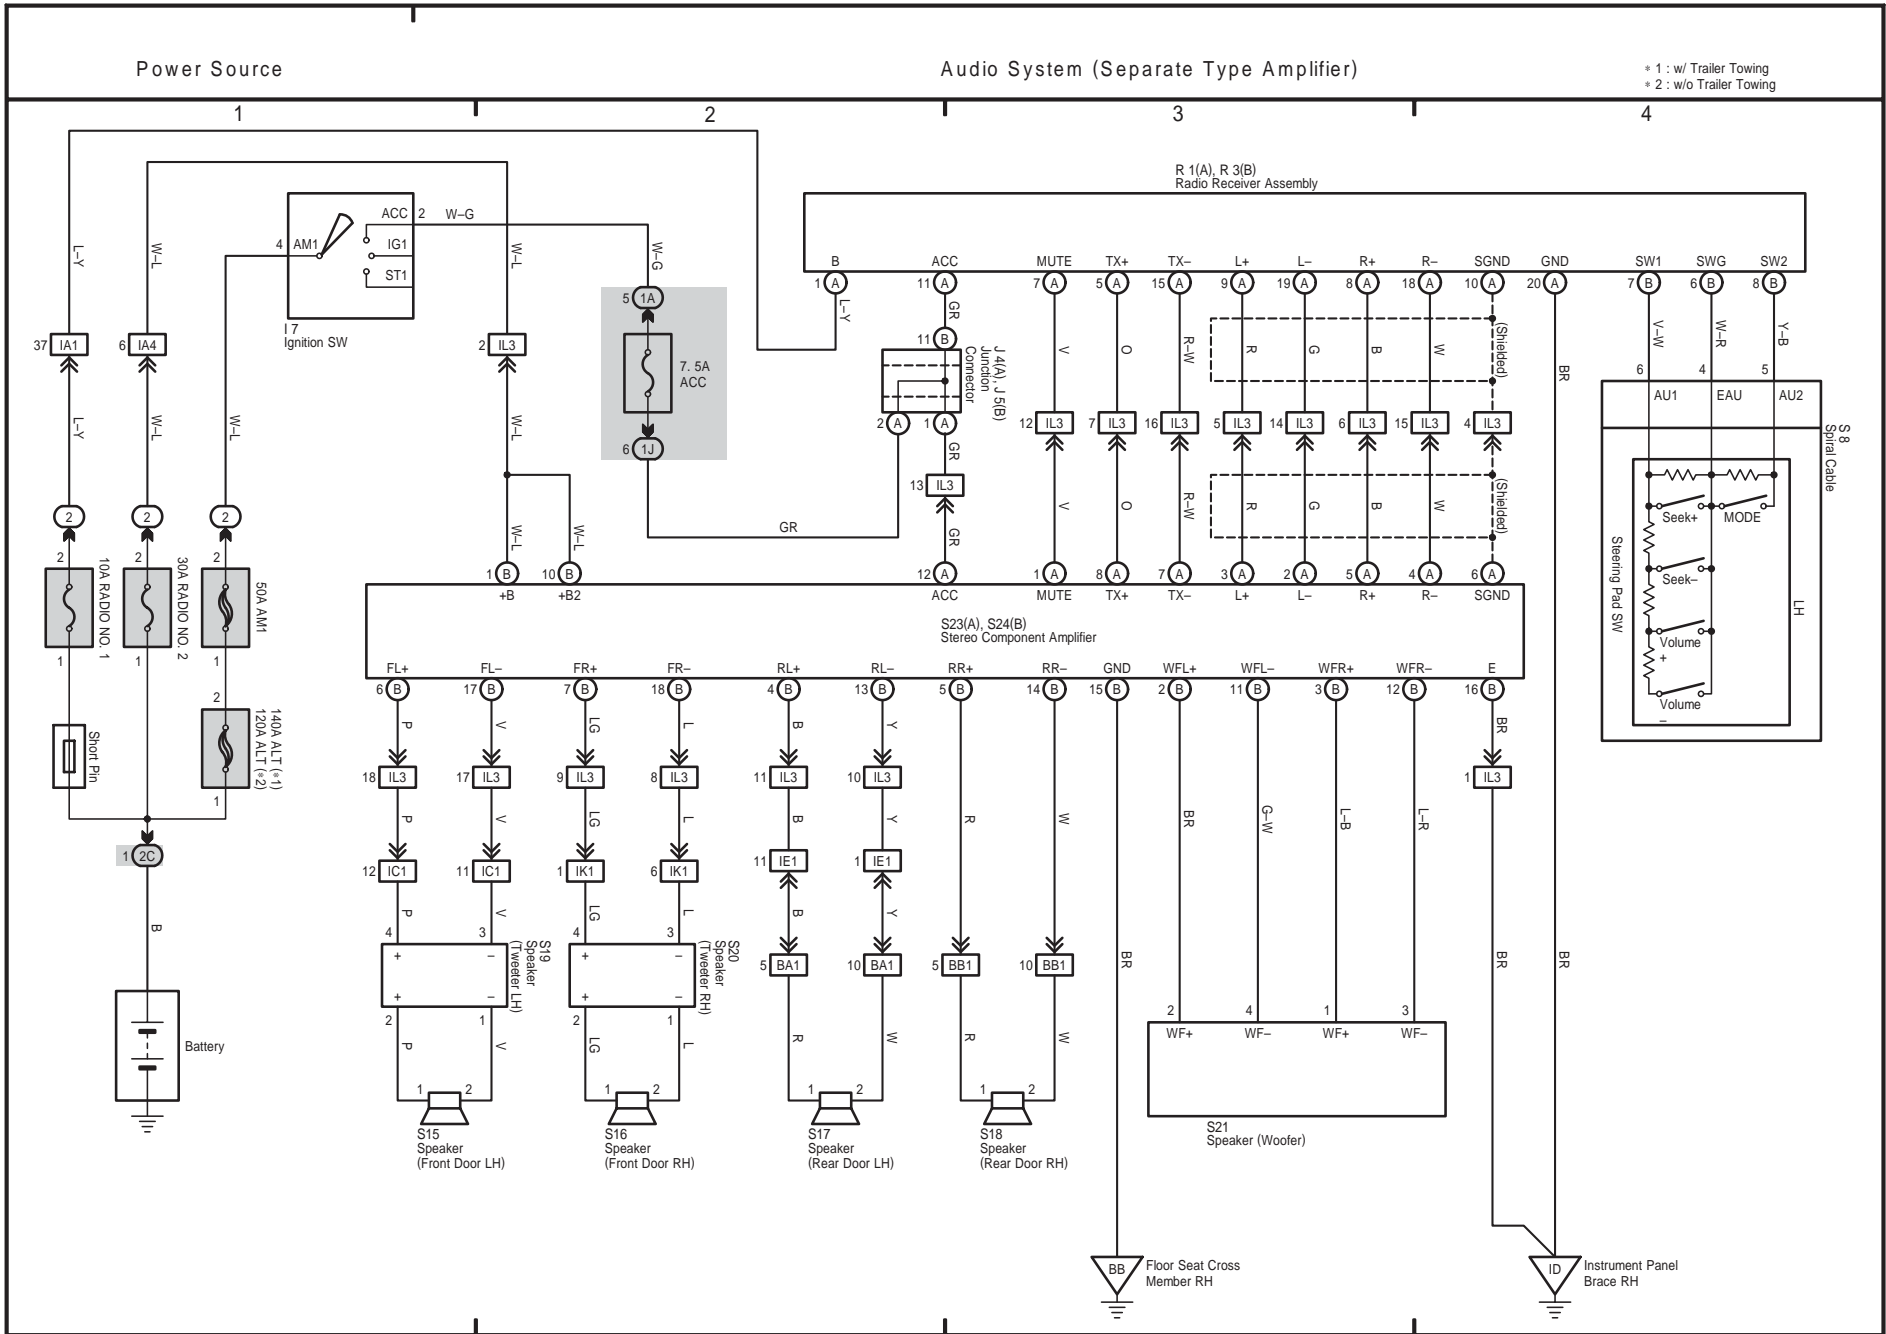


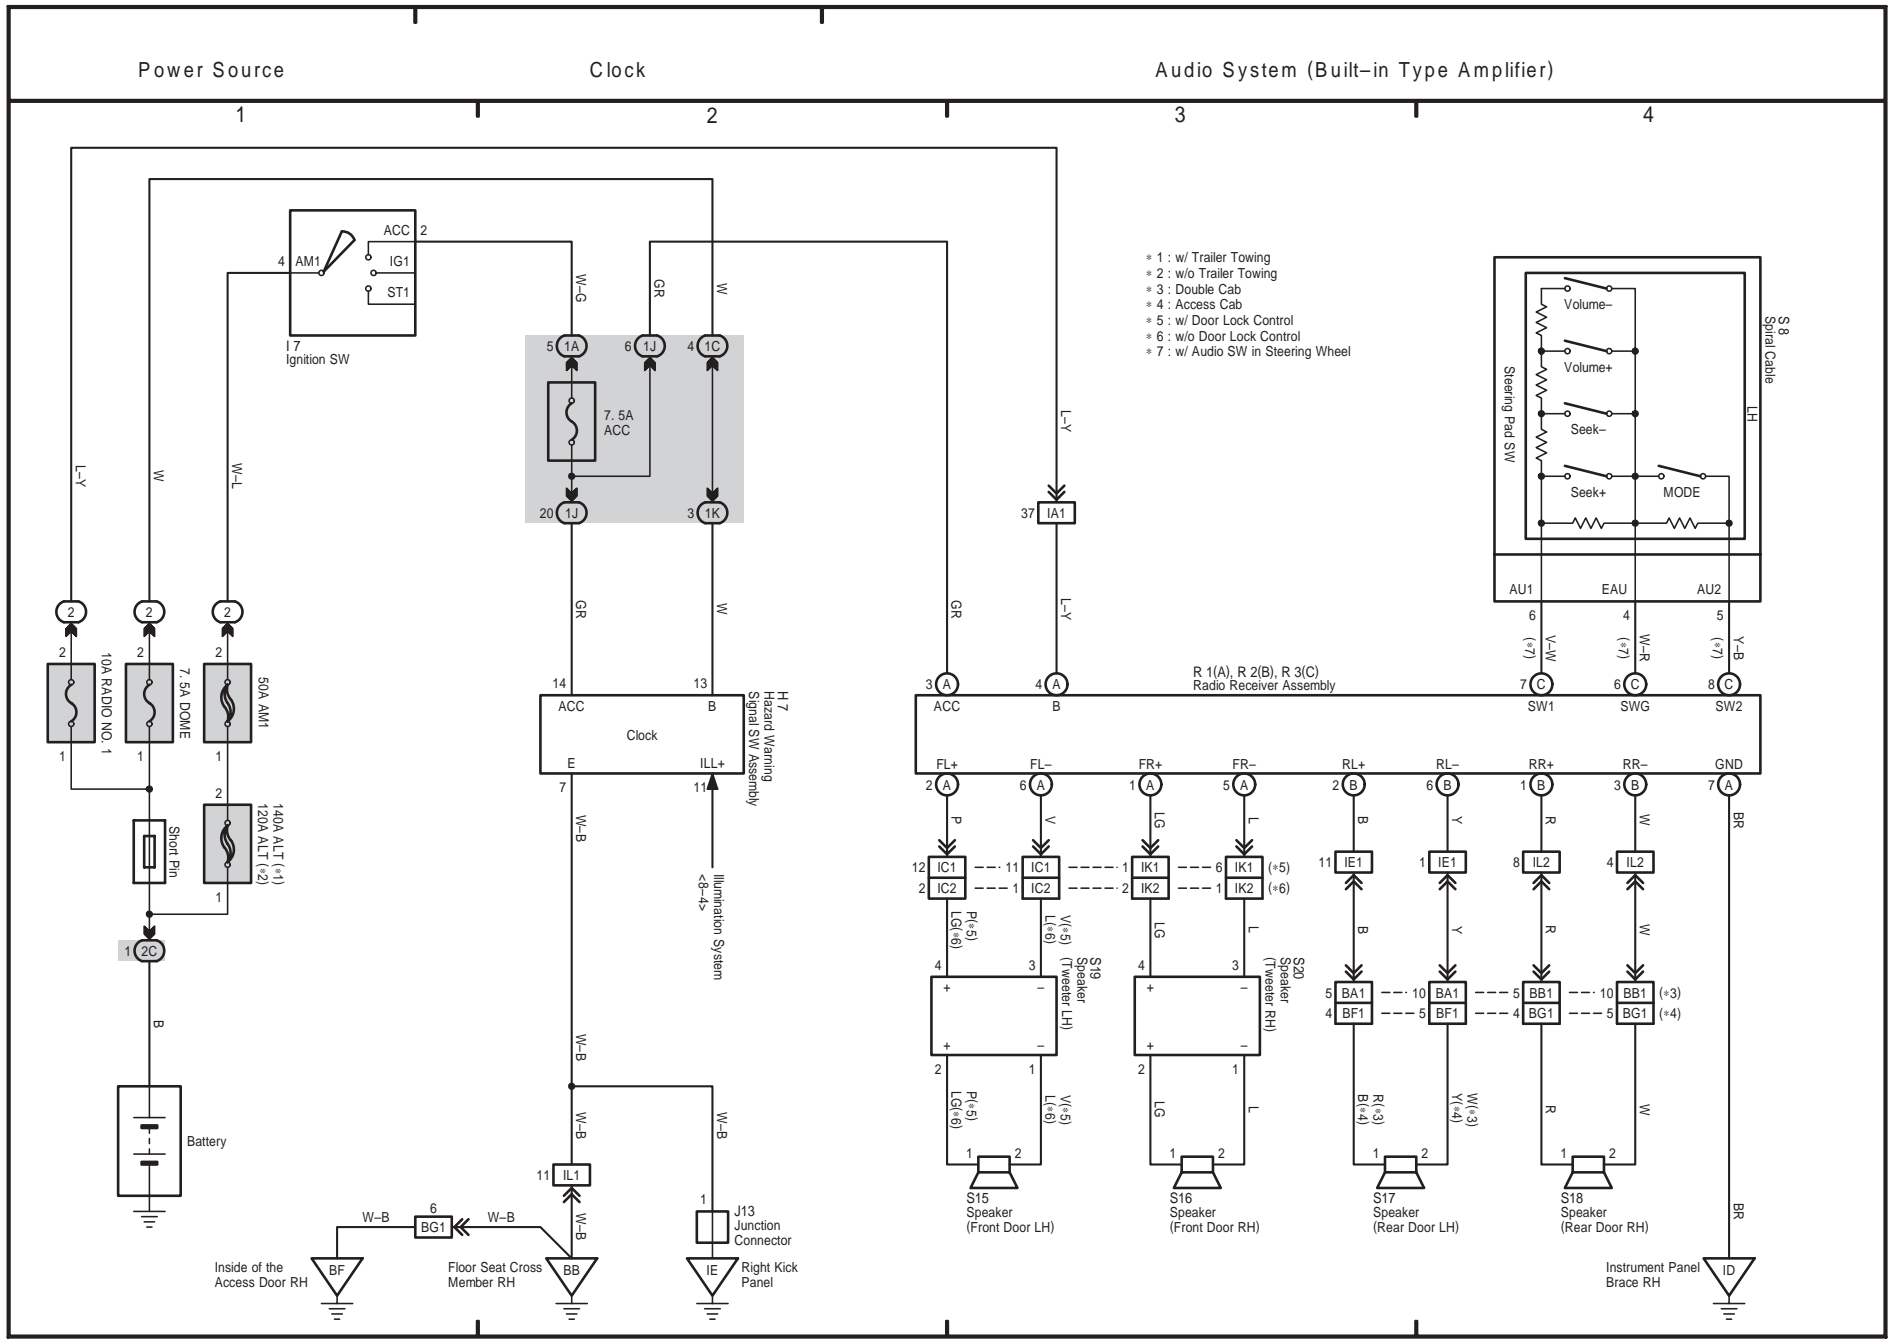


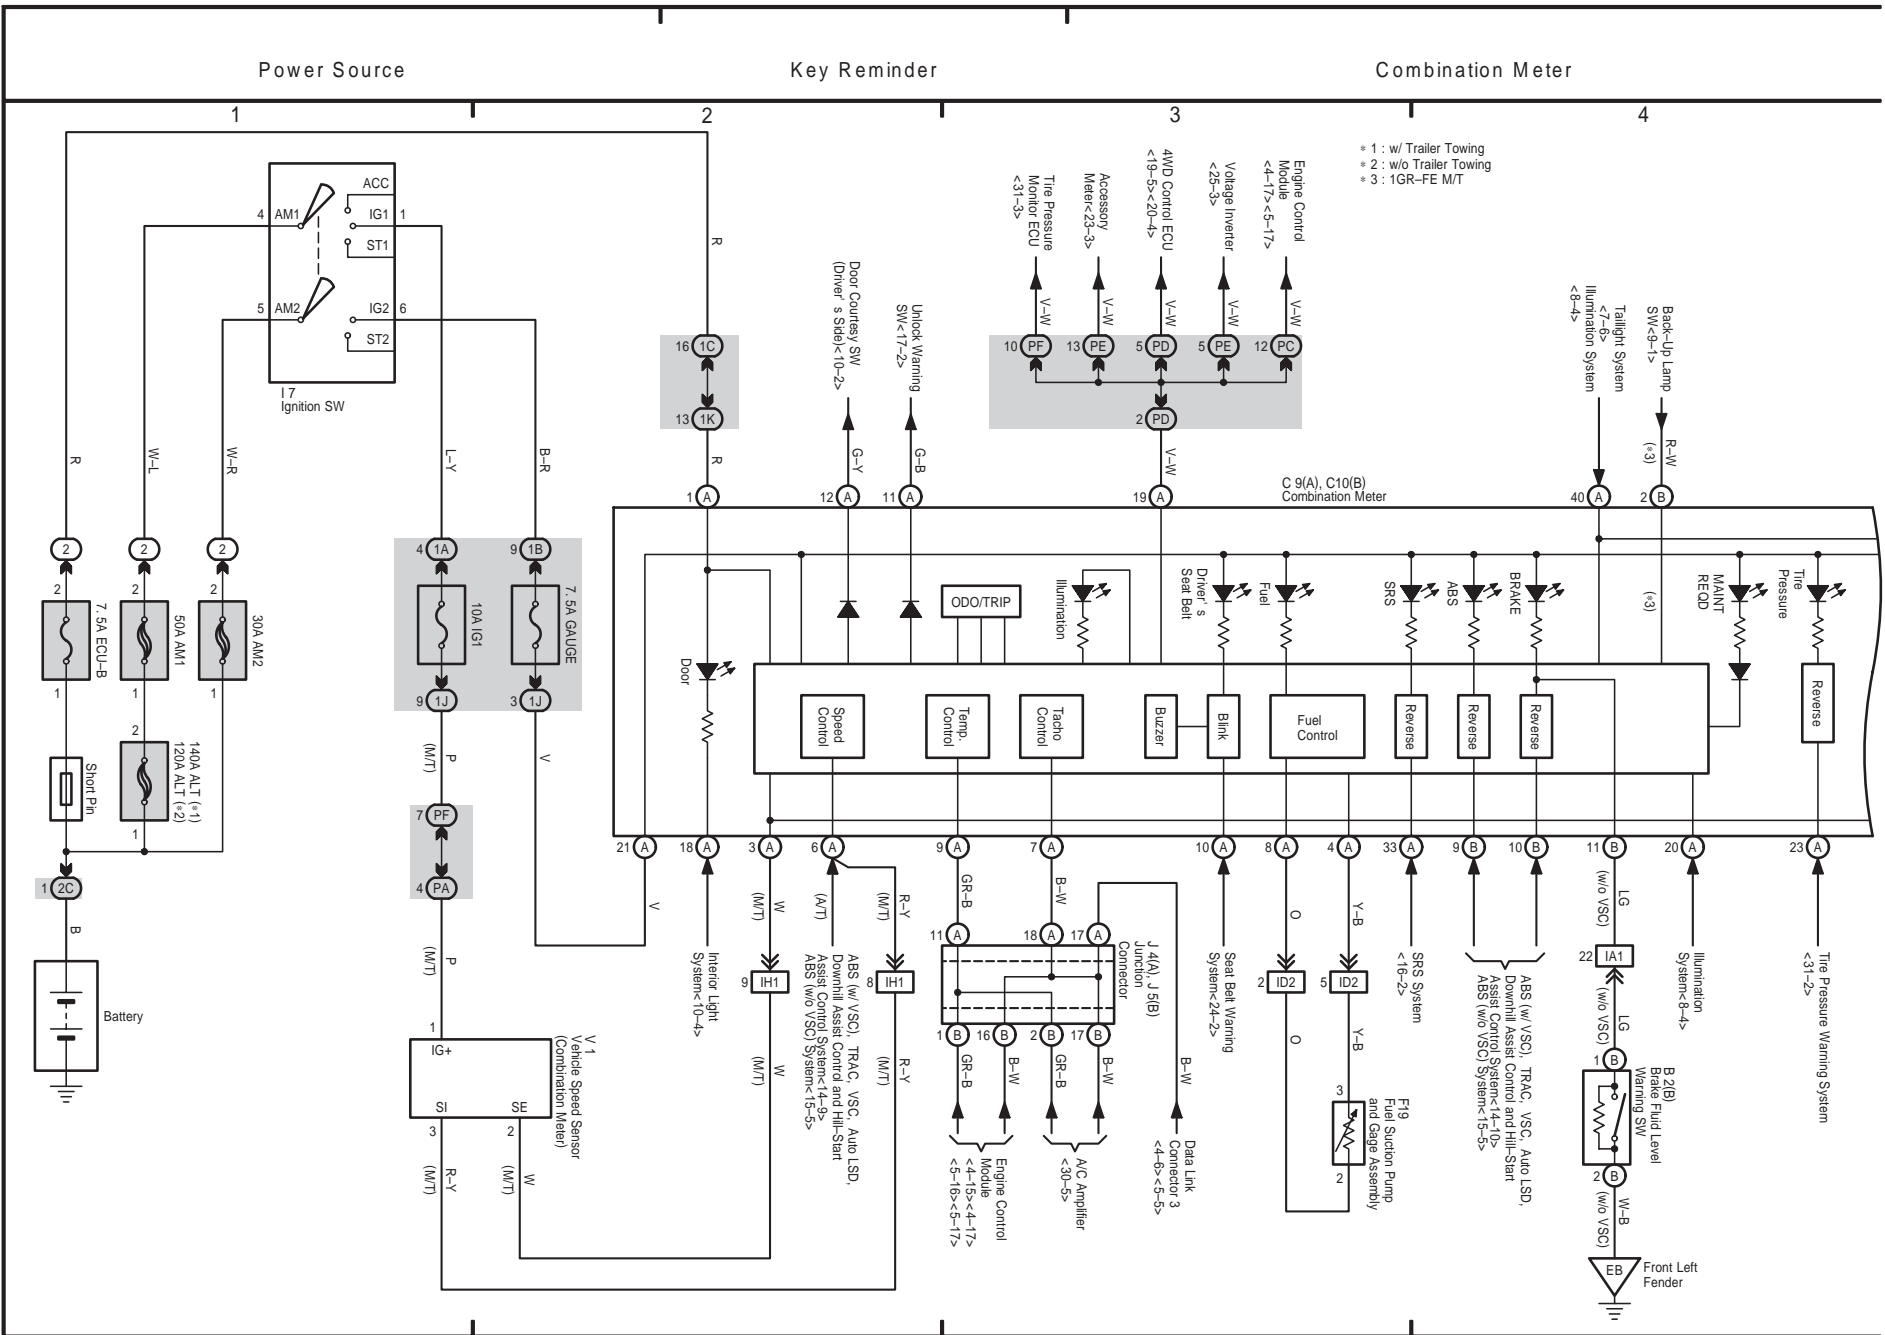

- * 4 : 1GR-FE AT
- * 5 : 2TR-FE AT
- * 6 : USA
- * 7 : Canada


Combination Meter

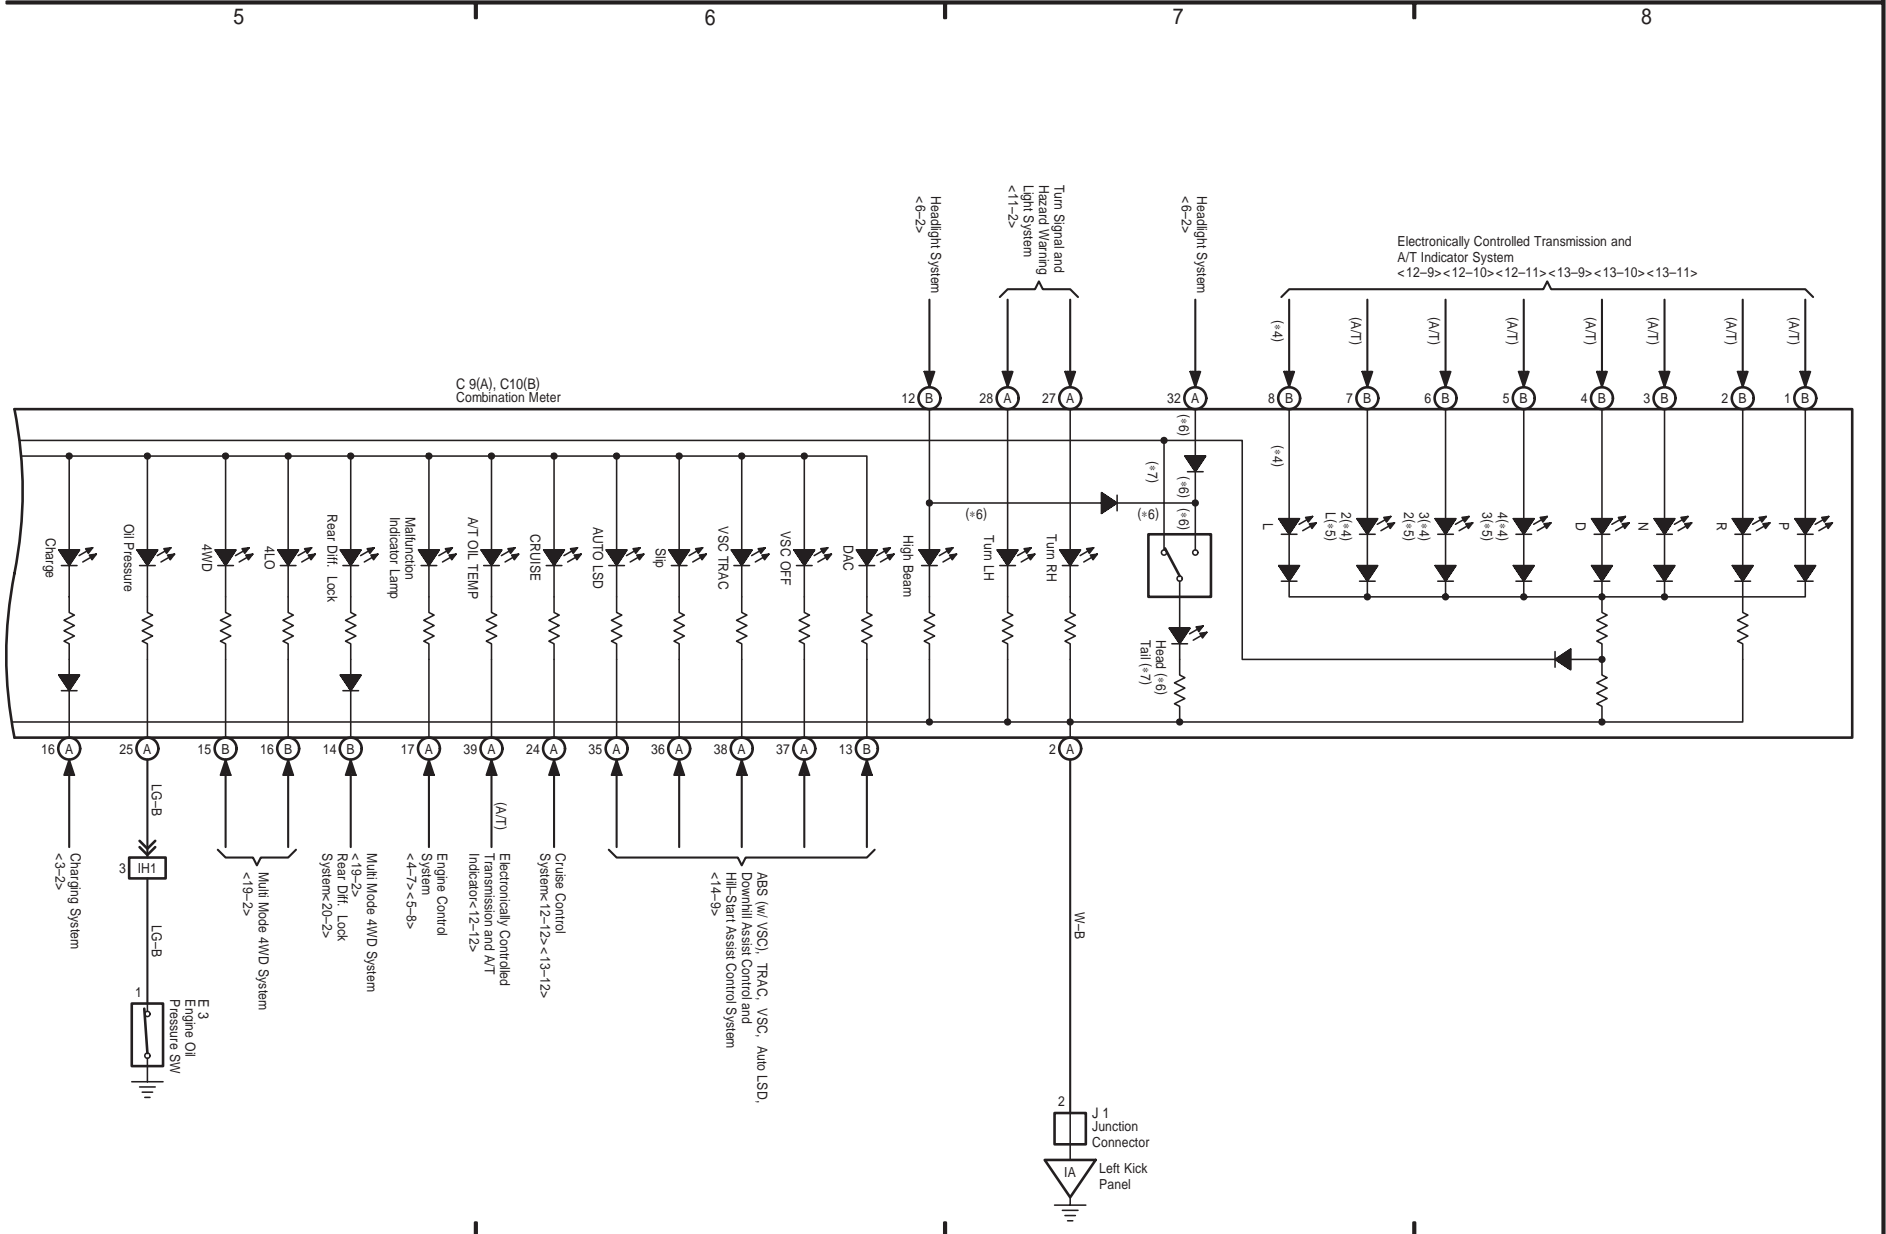

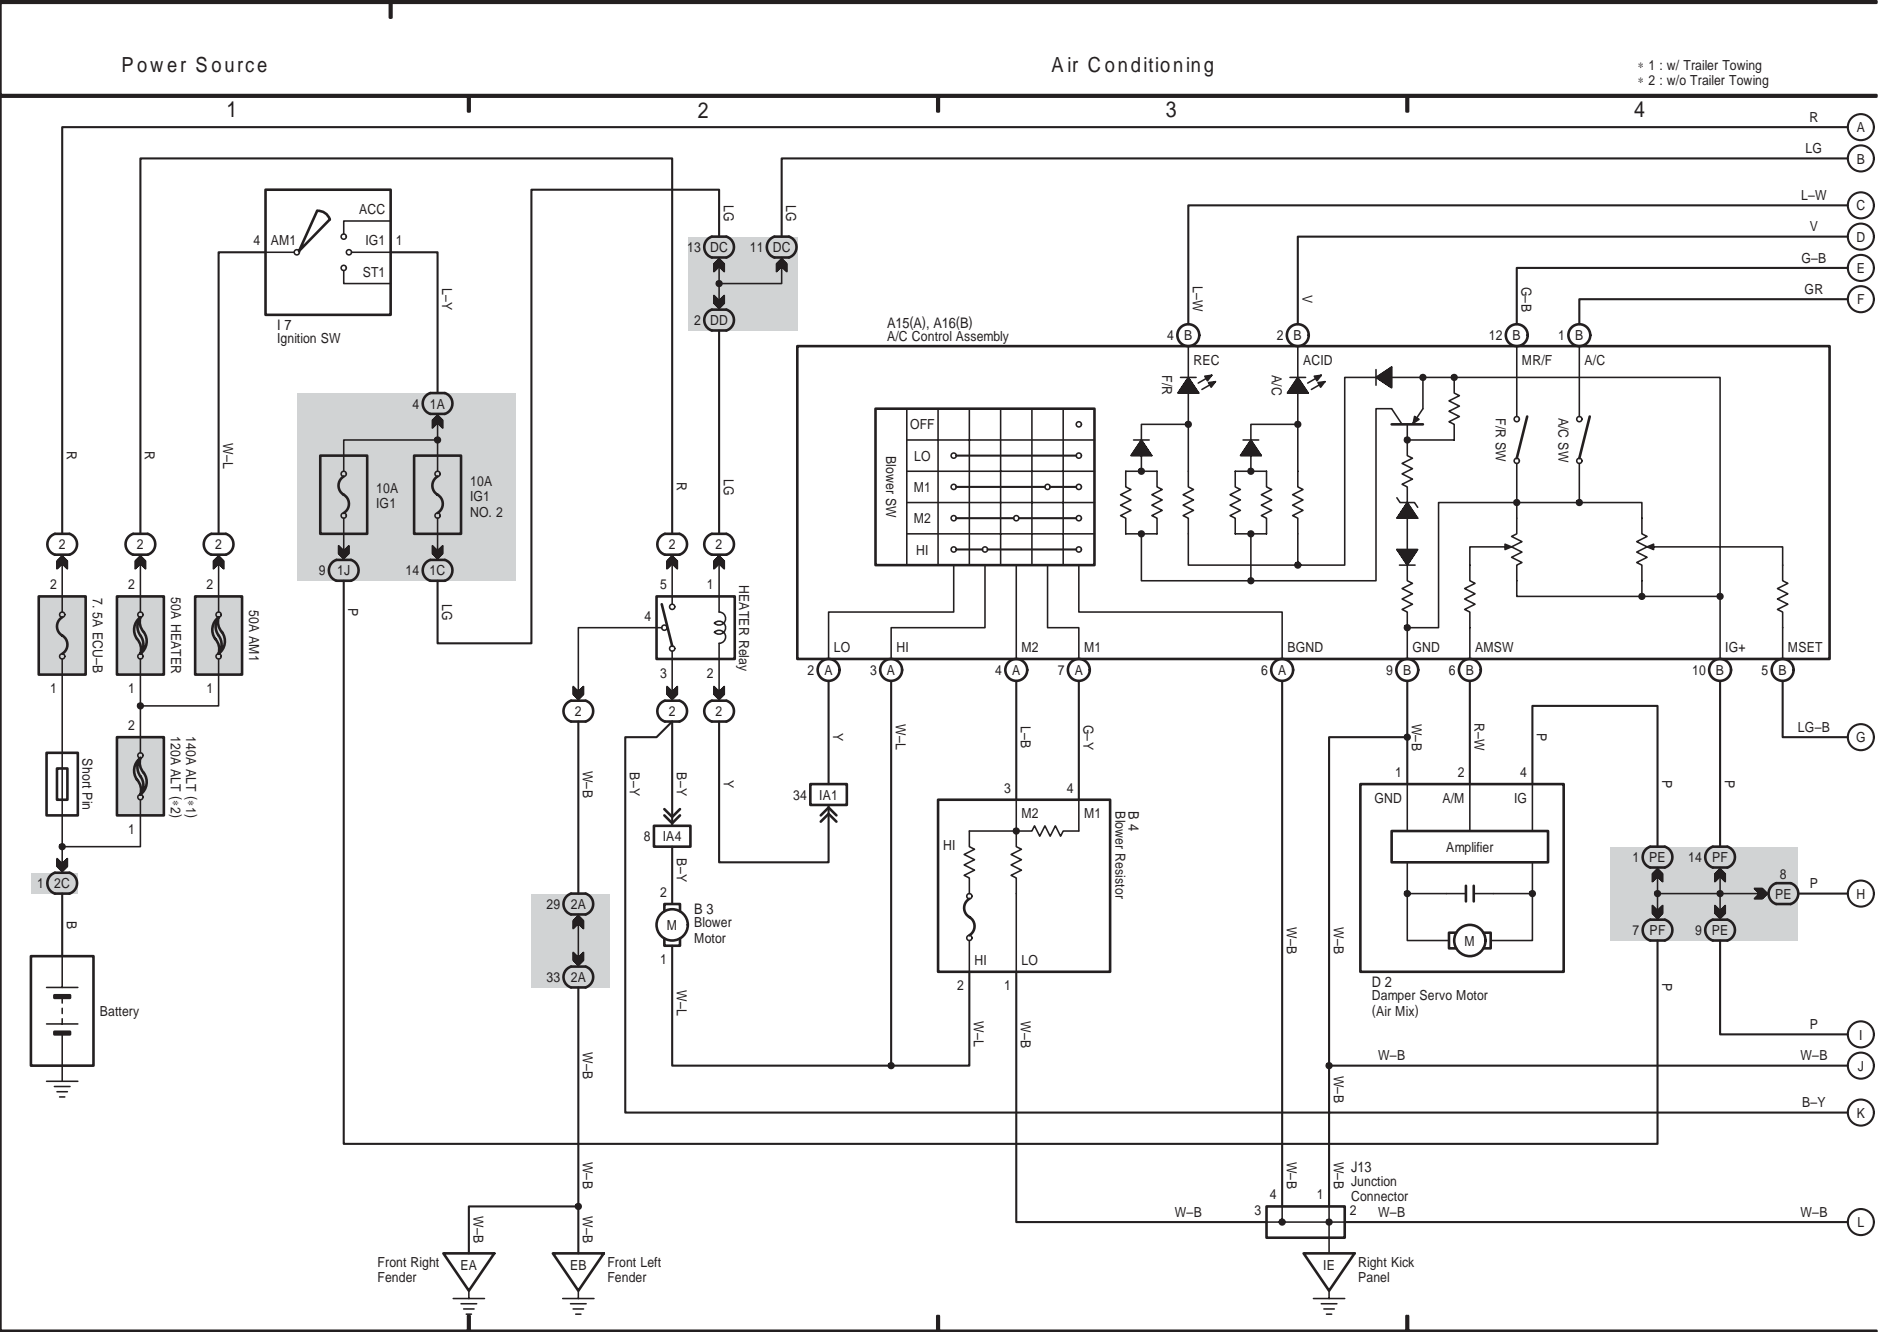

M OVERALL ELECTRICAL WIRING DIAGRAM

Air Conditioning

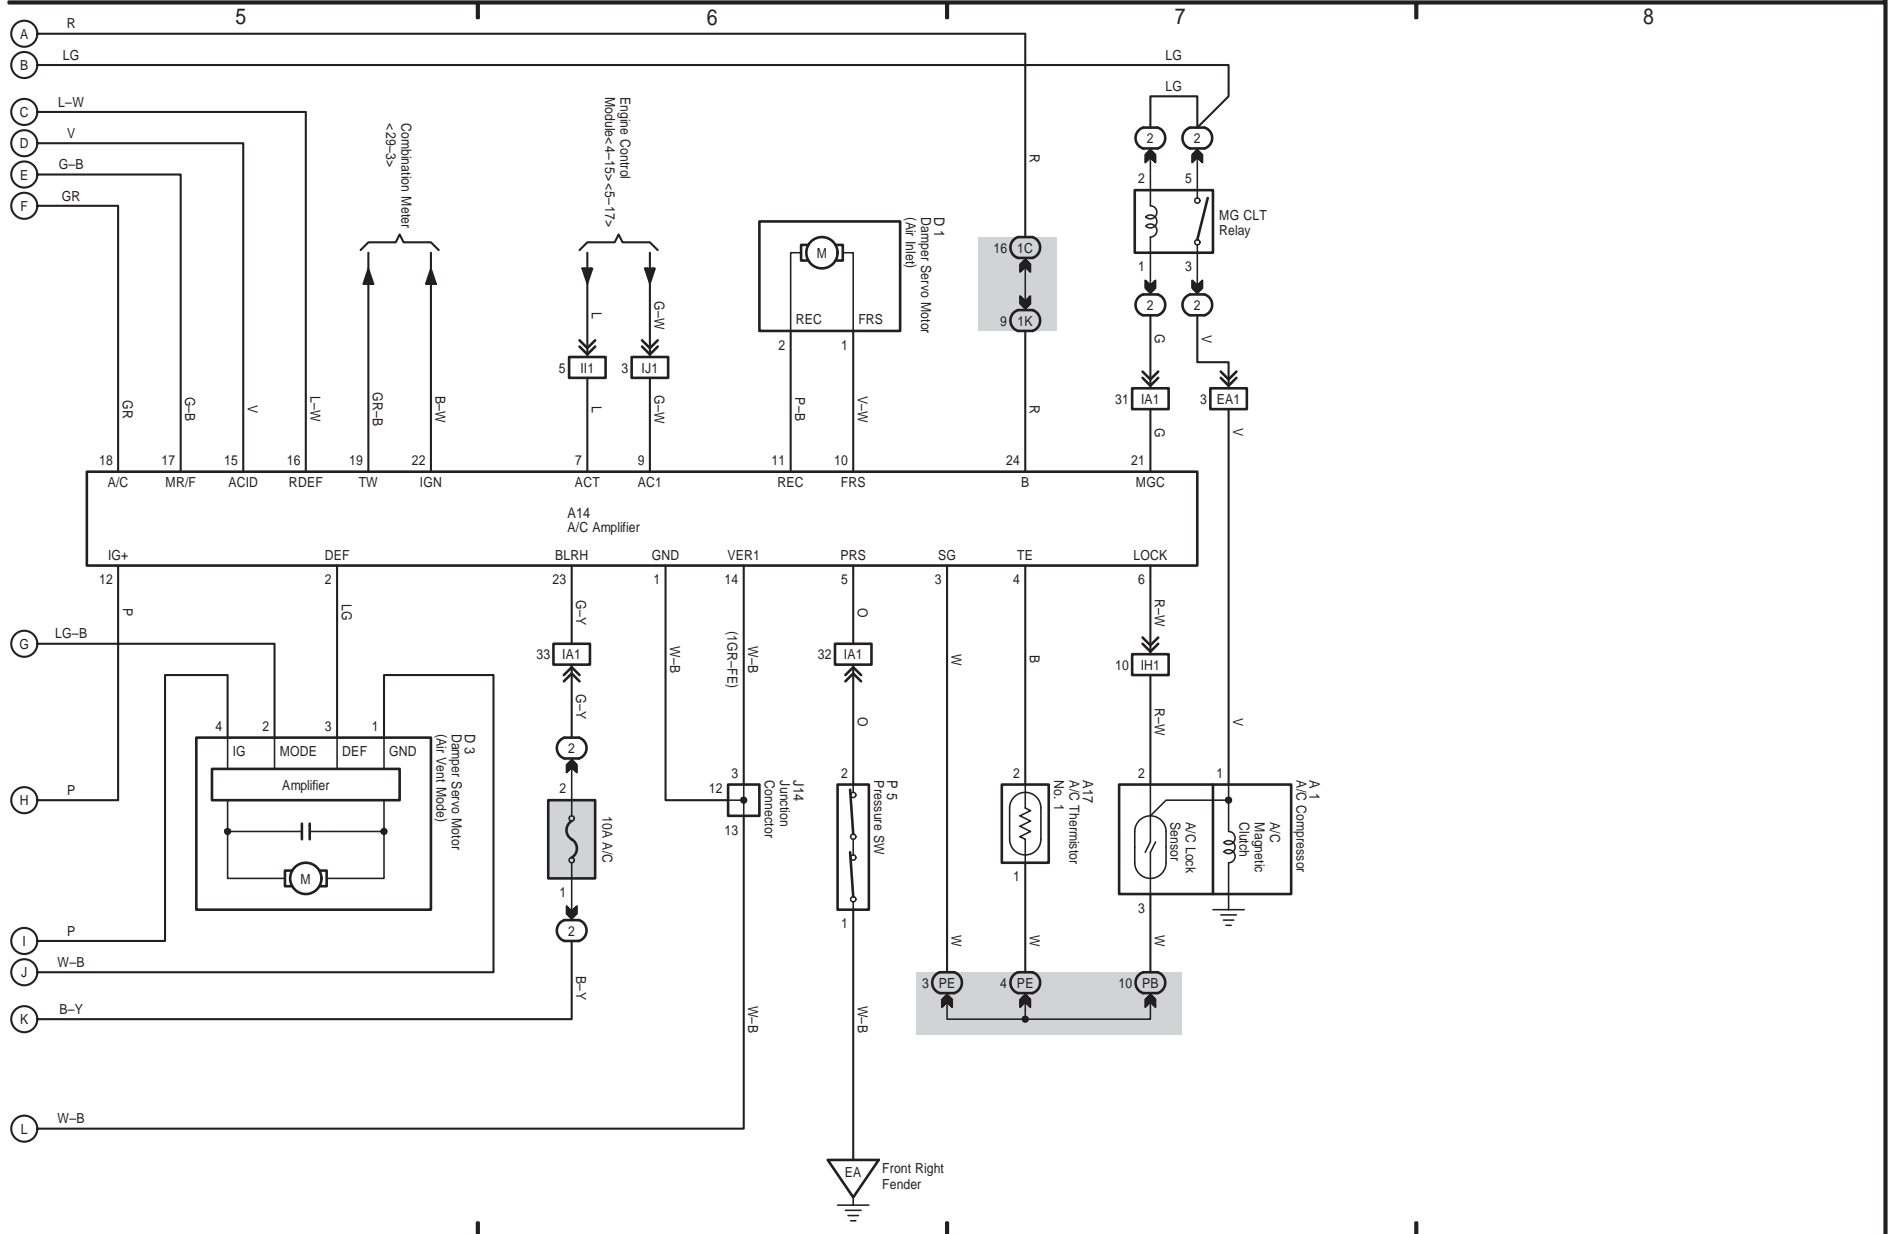

TOYOTA TACOMA (EM01D0U)

31 TOYOTA TACOMA

M OVERALL ELECTRICAL WIRING DIAGRAM

