 
 

 




 
 



 

 
 
 
 



 

 
# R155F MANUAL TRANSMISSION

 



 




 


## SST

	09223-00010	Cover & Seal Replacer	
	09308-00010	Oil Seal Puller	
	09309-35010	Transmission Rear Bearing Replacer	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	(09316-00031)	Replacer B	
	(09316-00041)	Replacer C	
	09515-10010	Rear Axle Bearing Replacer	
	09608-06041	Front Hub Inner Bearing Cone Replacer	
	09710-30050	Suspension Arm Bushing Replacer	
	09817-16011	Back-up Light Switch Tool	

PP

PP

	<p>09950-00020</p>	<p>Bearing Remover</p>	
	<p>09950-40011</p>	<p>Puller B Set</p>	
	<p>(09951-04010)</p>	<p>Hanger 150</p>	
	<p>(09952-04010)</p>	<p>Slide Arm</p>	
	<p>(09953-04020)</p>	<p>Center Bolt 150</p>	
	<p>(09954-04010)</p>	<p>Arm 25</p>	
	<p>(09955-04011)</p>	<p>Claw No.1</p>	
	<p>(09955-04051)</p>	<p>Claw No.5</p>	
	<p>(09957-04010)</p>	<p>Attachment</p>	
	<p>(09958-04011)</p>	<p>Holder</p>	
	<p>09950-50013</p>	<p>Puller C Set</p>	
	<p>(09951-05010)</p>	<p>Hanger 150</p>	

	(09952-05010)	Slide Arm	
	(09953-05020)	Center Bolt 150	
	(09954-05021)	Claw No.2	
	(09957-04010)	Attachment	
	09950-60010	Replacer Set	
	(09951-00220)	Replacer 22	
	(09951-00300)	Replacer 30	
	(09951-00520)	Replacer 52	
	(09951-00570)	Replacer 57	
	(09952-06010)	Adapter	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	