 
 
 

 


 



 

 


 





 


DIFFERENTIAL


 

 
 


 




SST


 

 
 
 



 
 

	09223-00010	Cover & Seal Replacer	
	09226-10010	Crankshaft Front & Rear Bearing Replacer	
	09308-00010	Oil Seal Puller	
	09308-10010	Oil Seal Puller	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	(09316-00021)	Replacer A	
	(09316-00041)	Replacer C	
	09330-00021	Companion Flange Holding Tool	
	09350-20015	TOYOTA Automatic Transmission Tool Set	
	(09369-20040)	Piston Spring Compressor Set	

	09502-12010	Differential Bearing Replacer	
	09504-00011	Differential Side Bearing Adjusting Nut Wrench	
	09504-22011	Differential Side Bearing Replacer	
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	
	09554-22010	Differential Oil Seal Replacer	
	09554-30011	Differential Oil Seal Replacer	
	09556-22010	Drive Pinion Front Bearing Remover	
	09564-32011	Differential Preload Adaptor	
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09612-65014	Steering Worm Bearing Puller	
	(09612-01020)	Claw B	
	(09612-01050)	Hanger Pin with Nut	

 
 










PP






PP

	<p>09628-62011</p>	<p>Ball Joint Puller</p>	
	<p>09636-20010</p>	<p>Upper Ball Joint Dust Cover Replacer</p>	
	<p>09649-17010</p>	<p>Steering Knuckle Tool</p>	
	<p>09930-00010</p>	<p>Drive Shaft Nut Chisel</p>	
	<p>09950-00020</p>	<p>Bearing Remover</p>	
	<p>(09951-00680)</p>	<p>Replacer 68</p>	
	<p>(09951-00890)</p>	<p>Replacer 89</p>	
	<p>09950-30012</p>	<p>Puller A Set</p>	
	<p>(09951-03010)</p>	<p>Upper Plate</p>	
	<p>(09953-03010)</p>	<p>Center Bolt</p>	
	<p>(09954-03010)</p>	<p>Arm</p>	
	<p>(09955-03030)</p>	<p>Lower Plate 130</p>	

	(09956-03020)	Adapter 18	
	(09956-03030)	Adaptor 20	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	
	(09951-04020)	Hanger 200	
	(09952-04010)	Slide Arm	
	(09953-04020)	Center Bolt 150	
	(09953-04030)	Center Bolt 200	
	(09954-04010)	Arm 25	
	(09955-04011)	Claw No.1	
	(09955-04061)	Claw No.6	
	(09957-04010)	Attachment	

PP

	(09958-04011)	Holder	
	09950-60010	Replacer Set	
	(09951-00360)	Replacer 36	
	(09951-00380)	Replacer 38	
	(09951-00390)	Replacer 39	
	(09951-00480)	Replacer 48	
	(09951-00560)	Replacer 56	
	(09951-00570)	Replacer 57	
	(09951-00640)	Replacer 64	
	09950-60020	Replacer Set No.2	
	(09951-00680)	Replacer 68	
	(09951-00810)	Replacer 81	

	<p>09950-70010</p>	<p>Handle Set</p>	
	<p>(09951-07150)</p>	<p>Handle 150</p>	
	<p>09960-10010</p>	<p>Variable Pin Wrench Set</p>	
	<p>(09962-01000)</p>	<p>Variable Pin Wrench Arm Assembly</p>	
	<p>(09963-00700)</p>	<p>Pin 7</p>	

PP