

DTC**P0630****VIN not Programmed or Mismatch - ECM / PCM****DESCRIPTION**

DTC P0630 is set when the Vehicle Identification Number (VIN) is not stored in the Engine Control Module (ECM) or the input VIN is not accurate. Input the VIN with an intelligent tester.

DTC No.	DTC Detection Conditions	Trouble Areas
P0630	<ul style="list-style-type: none"> VIN not stored in ECM Input VIN in ECM not accurate 	<ul style="list-style-type: none"> ECM

MONITOR STRATEGY

Related DTCs	P0630: VIN not programmed
Required Sensors/Components (Main)	ECM
Required Sensors/Components (Related)	-
Frequency of Operation	Continuous
Duration	0.5 seconds
MIL Operation	Immediate
Sequence of Operation	None

TYPICAL ENABLING CONDITIONS

Battery voltage	8 V or more
Ignition switch	ON
Starter	OFF

TYPICAL MALFUNCTION THRESHOLDS

VIN code	Not programmed
----------	----------------

COMPONENT OPERATING RANGE

VIN code	Programmed
----------	------------

1**READ CURRENT DTC**

- Connect an intelligent tester to the DLC3.
- Turn the ignition switch ON and turn the tester ON.
- Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- Read DTCs.

Result

Display (DTC Output)	Proceed To
P0630	A
P0630 and other DTCs	B

If any DTCs other than P0630 are output, troubleshoot those DTCs first.

NOTICE:

If P0630 is set, the VIN must be input to the ECM using an intelligent tester. However, all DTCs are cleared automatically by the tester when inputting the VIN. If DTCs other than P0630 are set, check them first.

B  **GO TO DTC CHART**

A

2 **INPUT VIN WITH INTELLIGENT TESTER**

NEXT

END

ES