

## INSTALLATION

- 1. INSTALL KNOCK SENSOR
  - (a) Install the 2 knock sensors with the 2 bolts as shown in the illustration.

Torque: 20 N\*m (204 kgf\*cm, 15 ft.\*lbf)

- (b) Connect the 2 knock sensor connectors.
- 2. INSTALL WATER OUTLET PIPE NO.1
  - (a) Install the water outlet pipe with the 3 bolts.

    Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)
  - (b) Install the 4 wire harness clamps.
- 3. CONNECT HEATER WATER INLET HOSE
- 4. INSPECT CYLINDER HEAD SET BOLT (See page EM95)



- 6. INSTALL CAMSHAFT BEARING NO.2
- 7. INSTALL CAMSHAFTS (See page EM-97)
- 8. INSTALL CHAIN TENSIONER ASSEMBLY NO.2 (See page EM-98)
- 9. INSTALL CAMSHAFT TIMING GEARS AND NO.2 CHAIN (RH BANK) (See page EM-99)
- INSTALL CHAIN VIBRATION DAMPER NO.1 (See page EM-142)
- 11. INSTALL WATER BY-PASS JOINT RR (See page EM-99)
- 12. INSTALL INTAKE MANIFOLD (See page EM-99)
- 13. INSTALL EXHAUST MANIFOLD SUB-ASSEMBLY RH (See page EM-99)
- 14. INSTALL MANIFOLD STAY (See page EM-100)
- 15. INSTALL EXHAUST PIPE ASSEMBLY FRONT (See page EX-3)
- 16. INSTALL EXHAUST FRONT PIPE ASSEMBLY NO.2 (See page EX-3)
- 17. INSTALL COOL AIR INLET NO.1
  - (a) Install the cool air inlet with the 2 bolts.

    Torque: 12 N\*m (122 kgf\*cm, 9.0 ft.\*lbf)
- 18. INSTALL CHAIN TENSIONER SLIPPER
- 19. INSTALL CHAIN TENSIONER ASSEMBLY NO.1 (See page EM-48)
- 20. INSTALL CHAIN SUB-ASSEMBLY (See page EM-27)
- 21. INSTALL TIMING CHAIN OR BELT COVER SUB-ASSEMBLY (See page LU-20)



- 22. INSTALL ENGINE ASSEMBLY (See page EM-190)
- 23. INSTALL BATTERY
- 24. ADD ENGINE COOLANT (See page CO-3)
- 25. ADD ENGINE OIL (See page LU-5)
- 26. CHECK FOR ENGINE COOLANT LEAKAGE (See page CO-4)
- 27. CHECK FOR ENGINE OIL LEAKAGE
- 28. CHECK FOR FUEL LEAKAGE
- 29. CHECK FOR EXHAUST GAS LEAKAGE
- 30. INSPECT IGNITION TIMING (See page EM-1)
- 31. INSPECT ENGINE IDLING SPEED (See page EM-2)
- 32. INSPECT CO/HC (See page EM-3)

