



## EFI RELAY

### INSPECTION

#### 1. INSPECT EFI RELAY

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

#### Standard

Tester Connection	Specified Condition
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the E.F.I. relay.

**ES**