


# TIMING CHAIN

## COMPONENTS

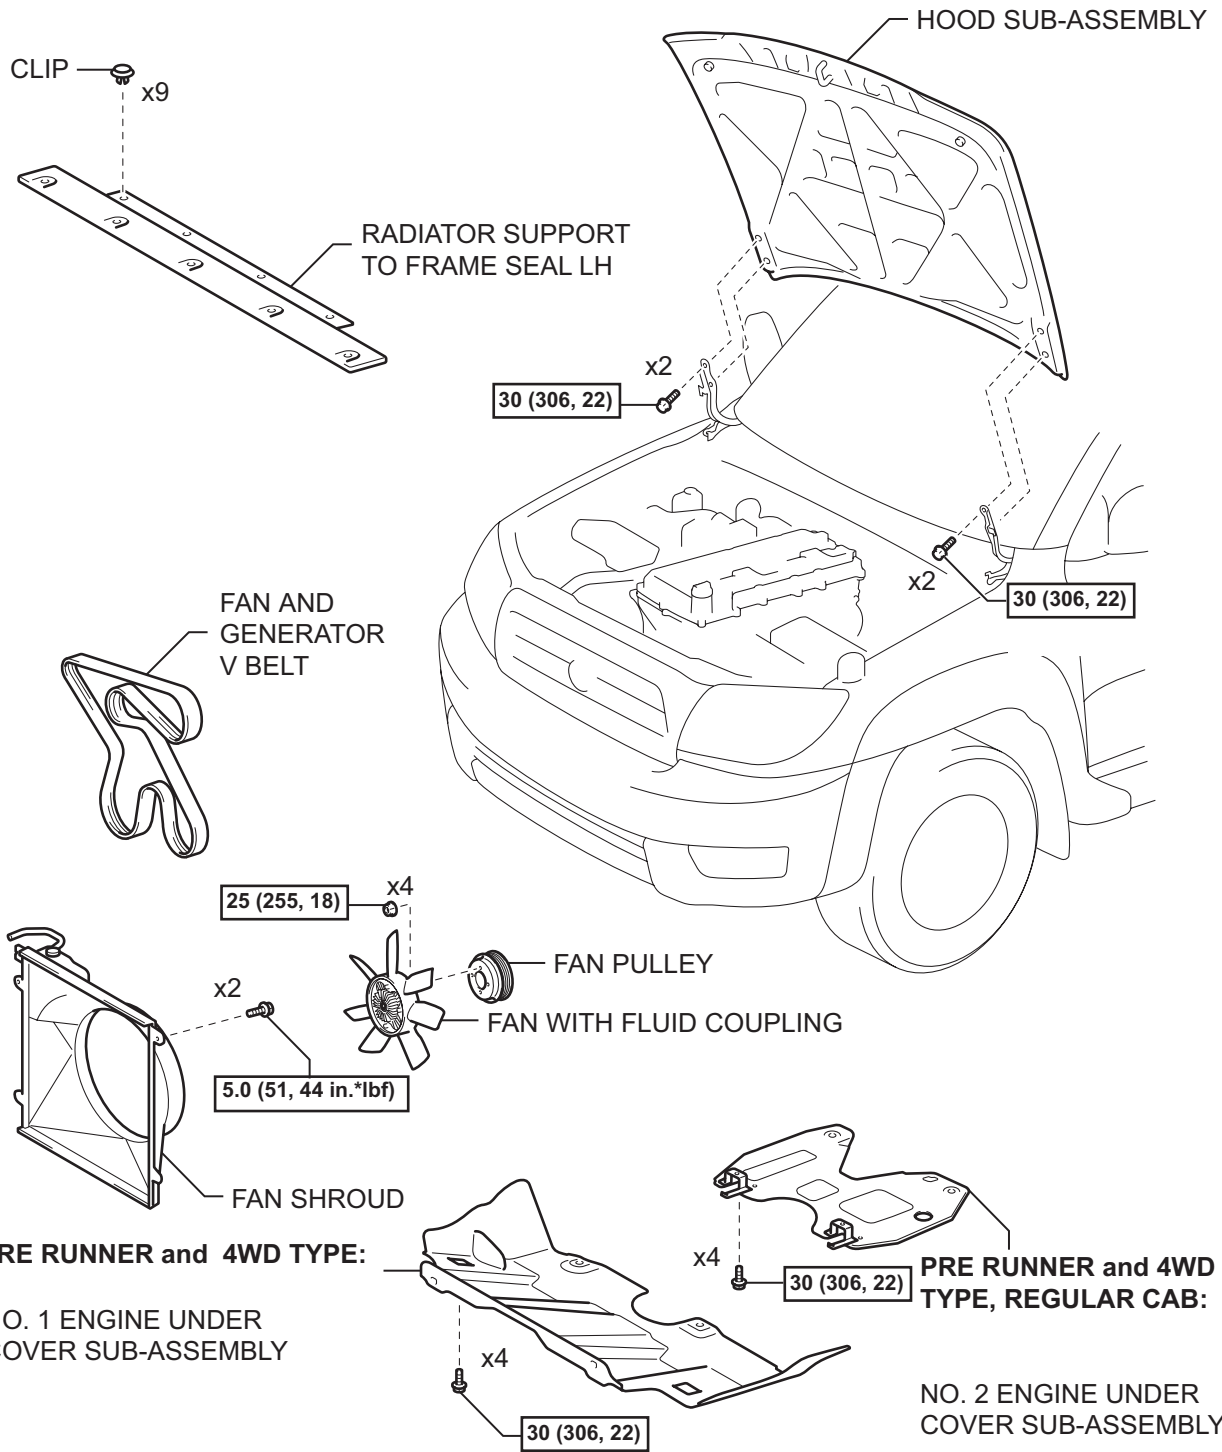


EM

N\*m (kgf\*cm, ft\*lbf) : Specified torque



EM


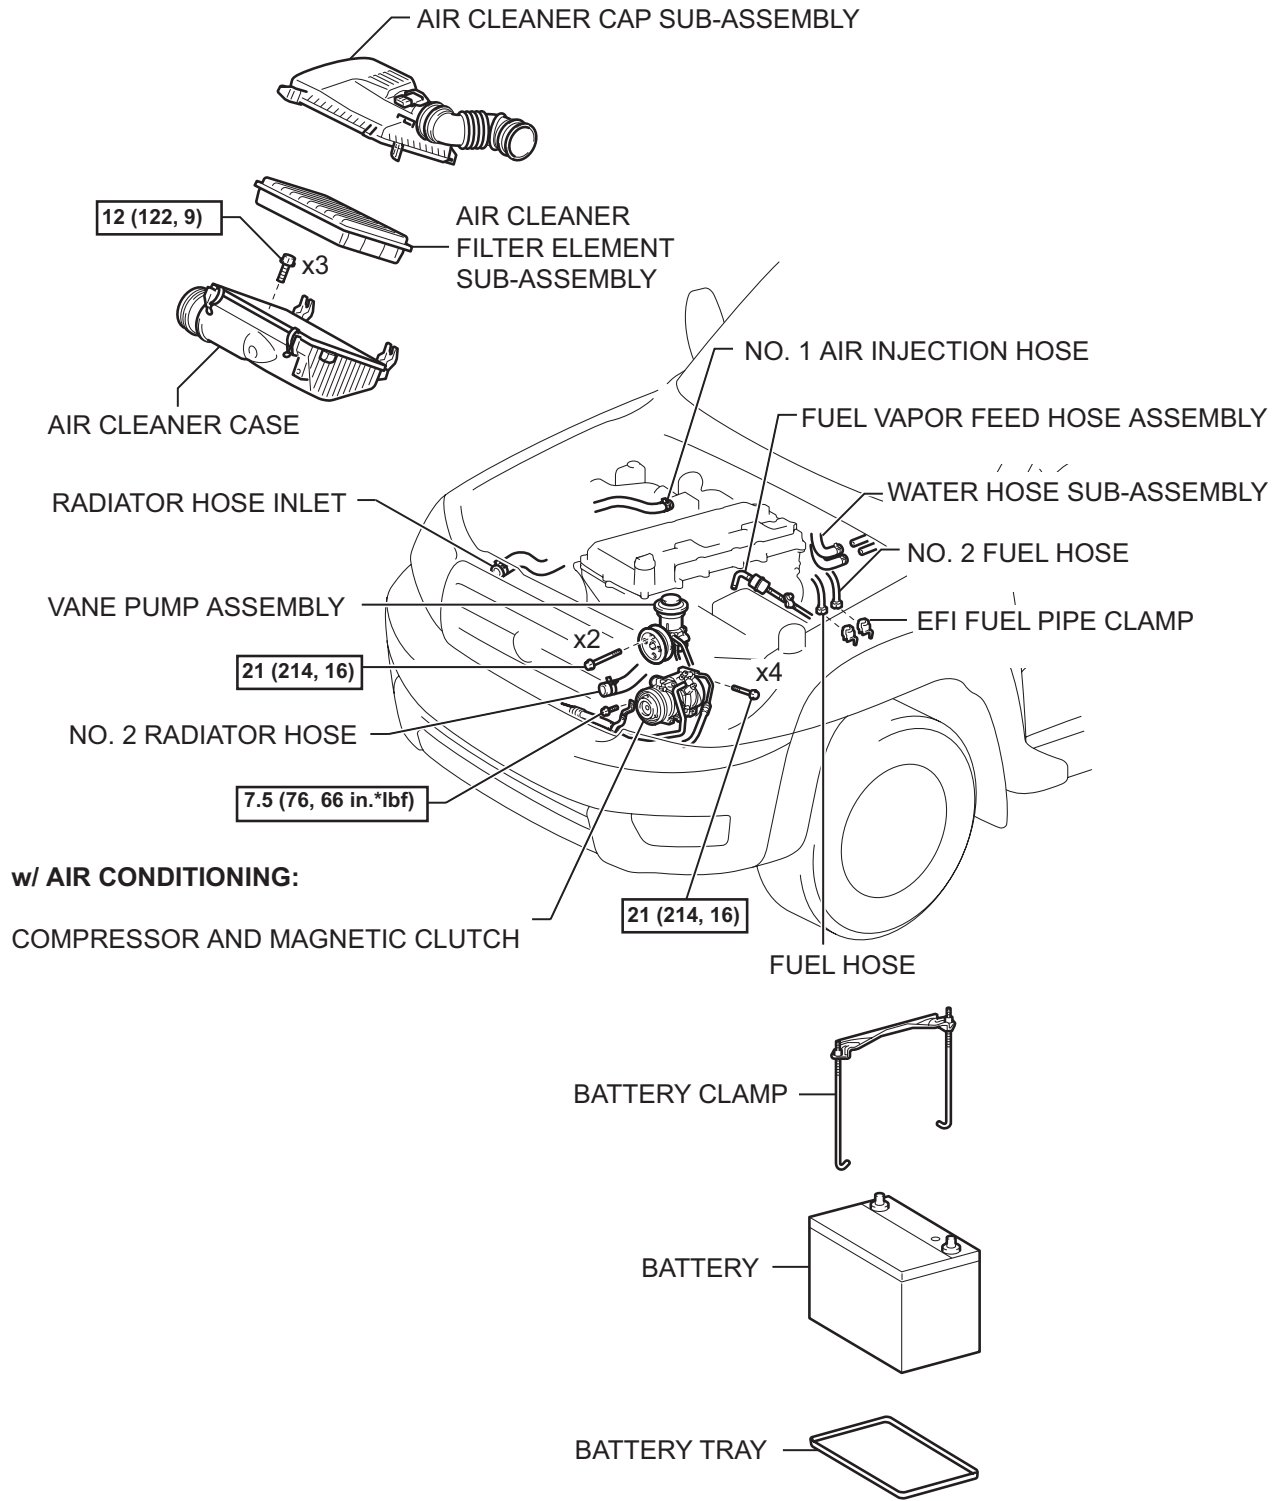


w/ AIR CONDITIONING:

COMPRESSOR AND MAGNETIC CLUTCH

N\*m (kgf\*cm, ft\*lbf) : Specified torque



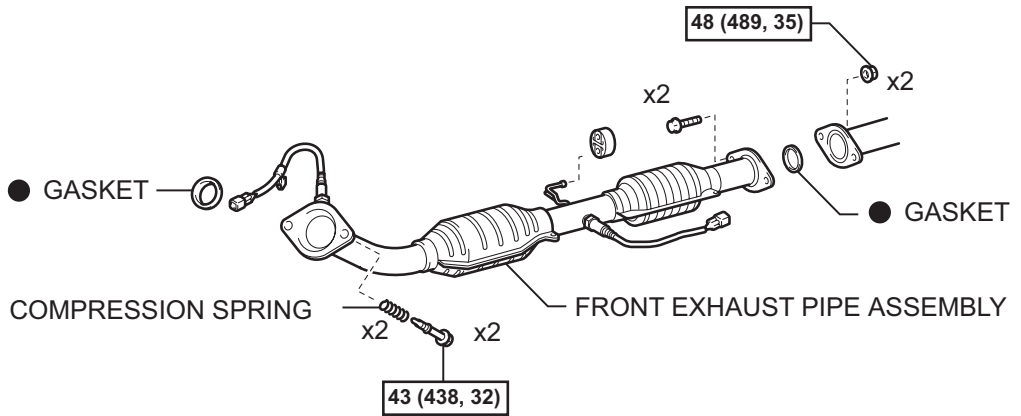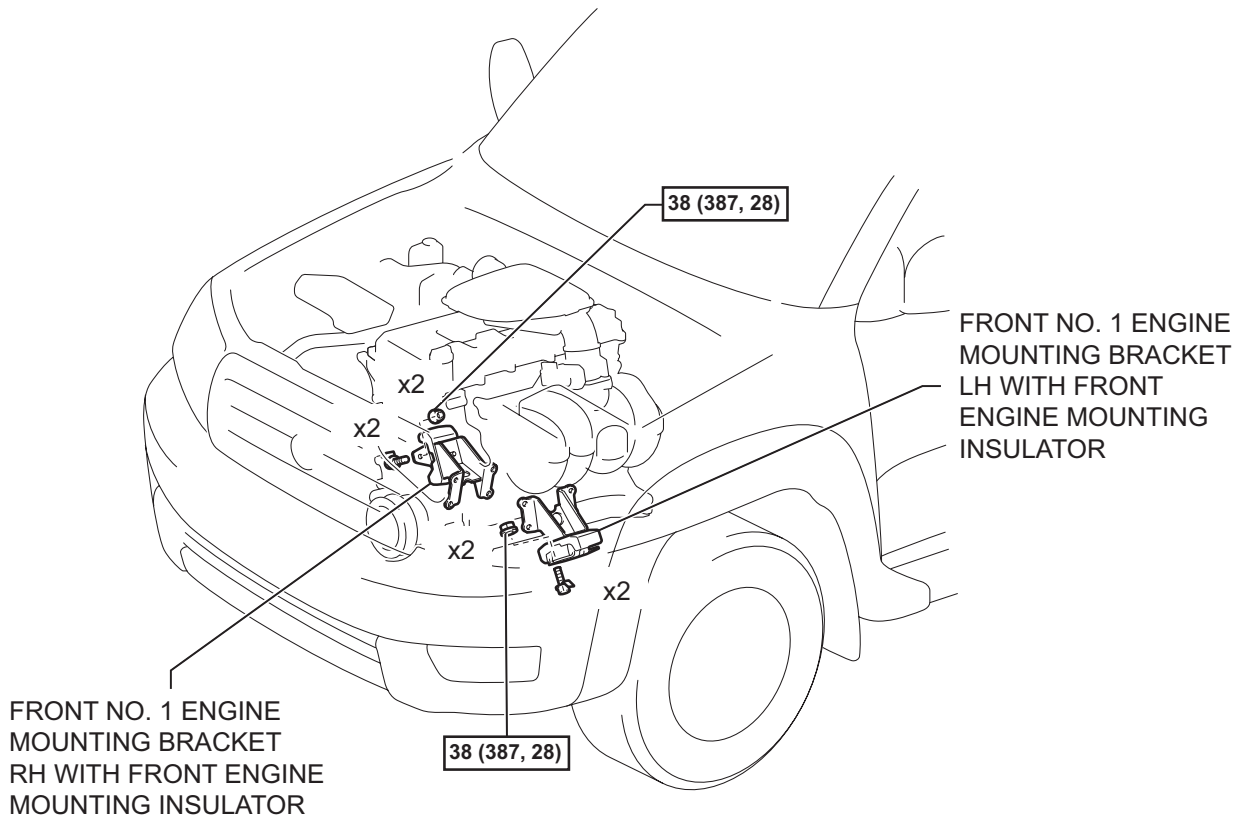

**N\*m (kgf\*cm, ft\*lbf)** : Specified torque

● Non-reusable part



MANUAL TRANSMISSION, 2WD:

REGULAR CAB:

PROPELLER SHAFT ASSEMBLY

FLOOR SHIFT SHIFT LEVER ASSEMBLY

CLIP

SHIFT LEVER BOOT ASSEMBLY

MANIFOLD STAY

44 (449, 33)

72 (730, 53)


30 (306, 22)

37 (379, 27)

MANUAL TRANSMISSION UNIT ASSEMBLY

STARTER ASSEMBLY


CLUTCH RELEASE CYLINDER ASSEMBLY

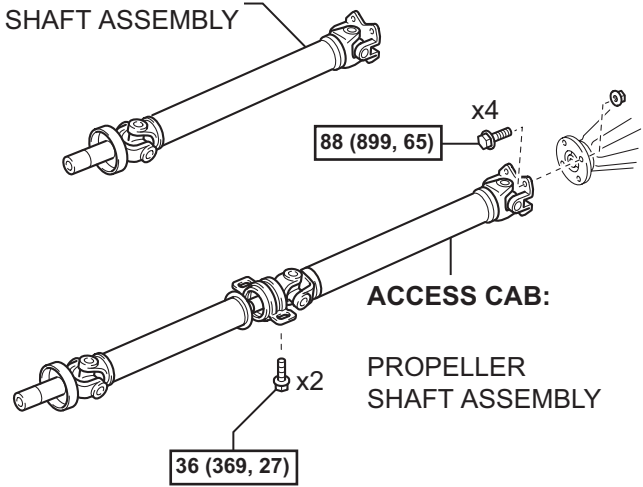

ACCESS CAB:


PROPELLER SHAFT ASSEMBLY

EM

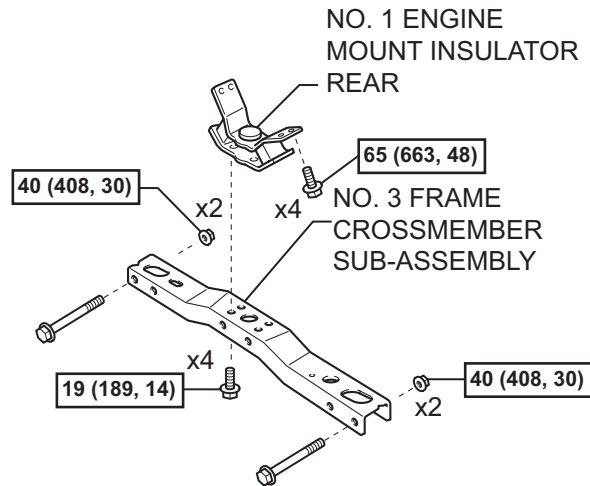

N\*m (kgf\*cm, ft\*lbf) : Specified torque

● Non-reusable part

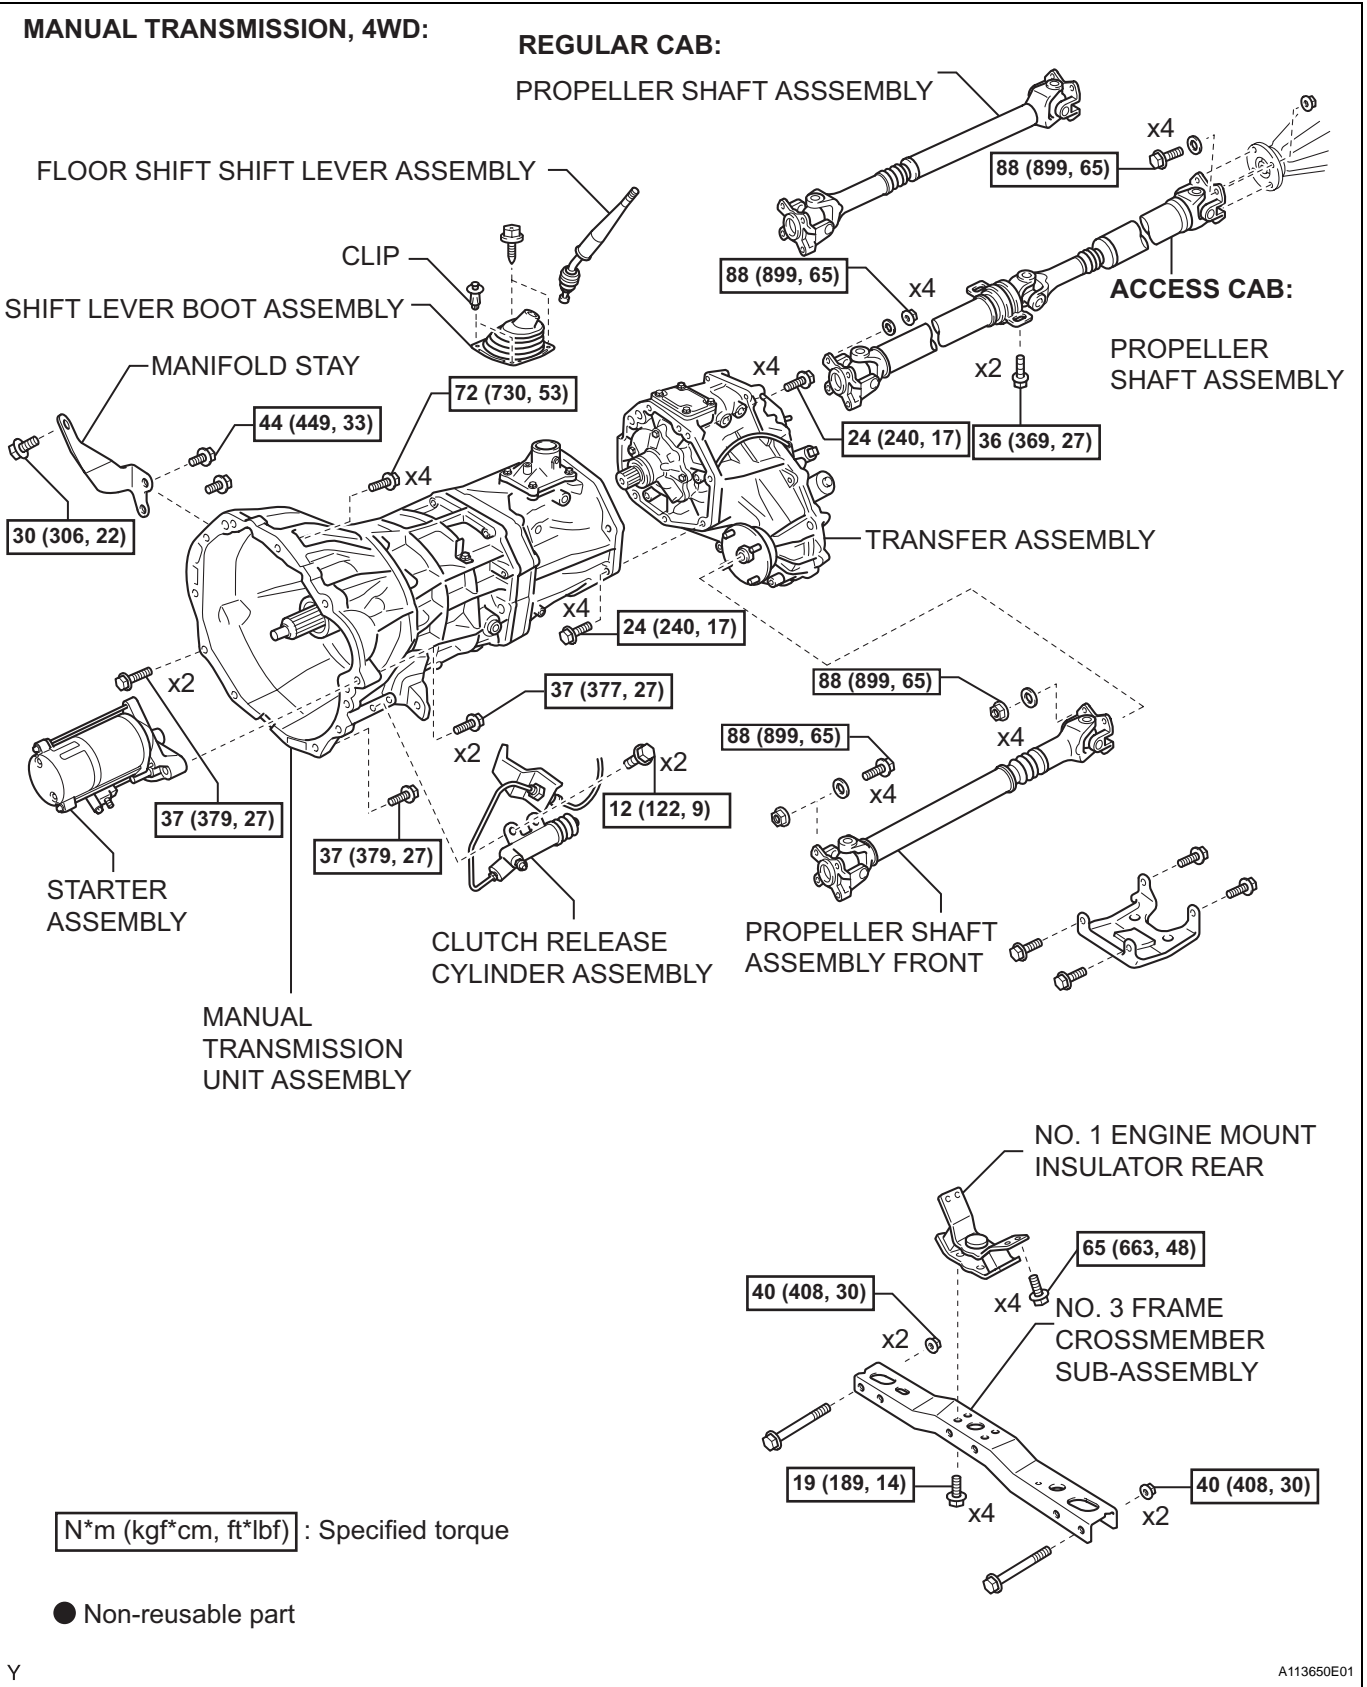


Y

A113650E01

EM

MANUAL TRANSMISSION:

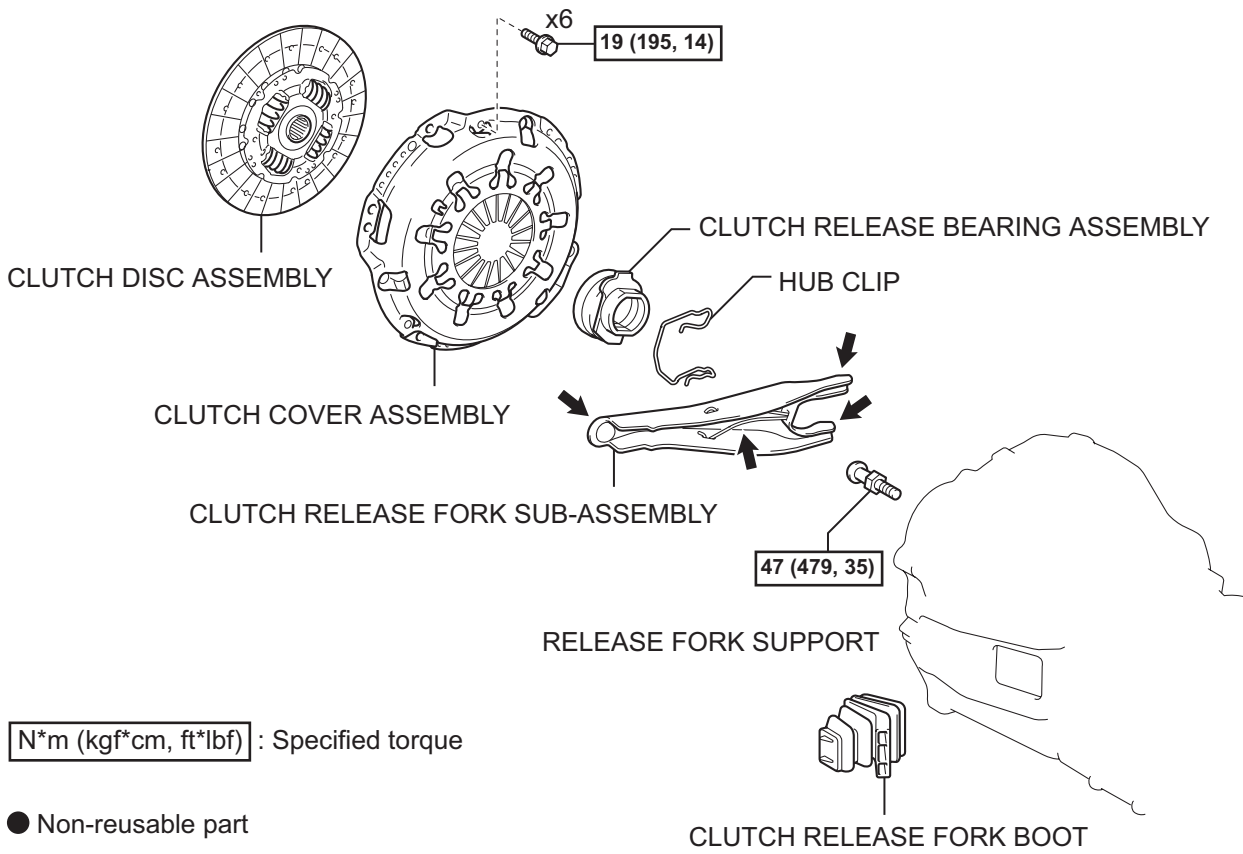

N\*m (kgf\*cm, ft\*lbf) : Specified torque


● Non-reusable part

← Release hub grease

EM


Y

**AUTOMATIC TRANSMISSION:**

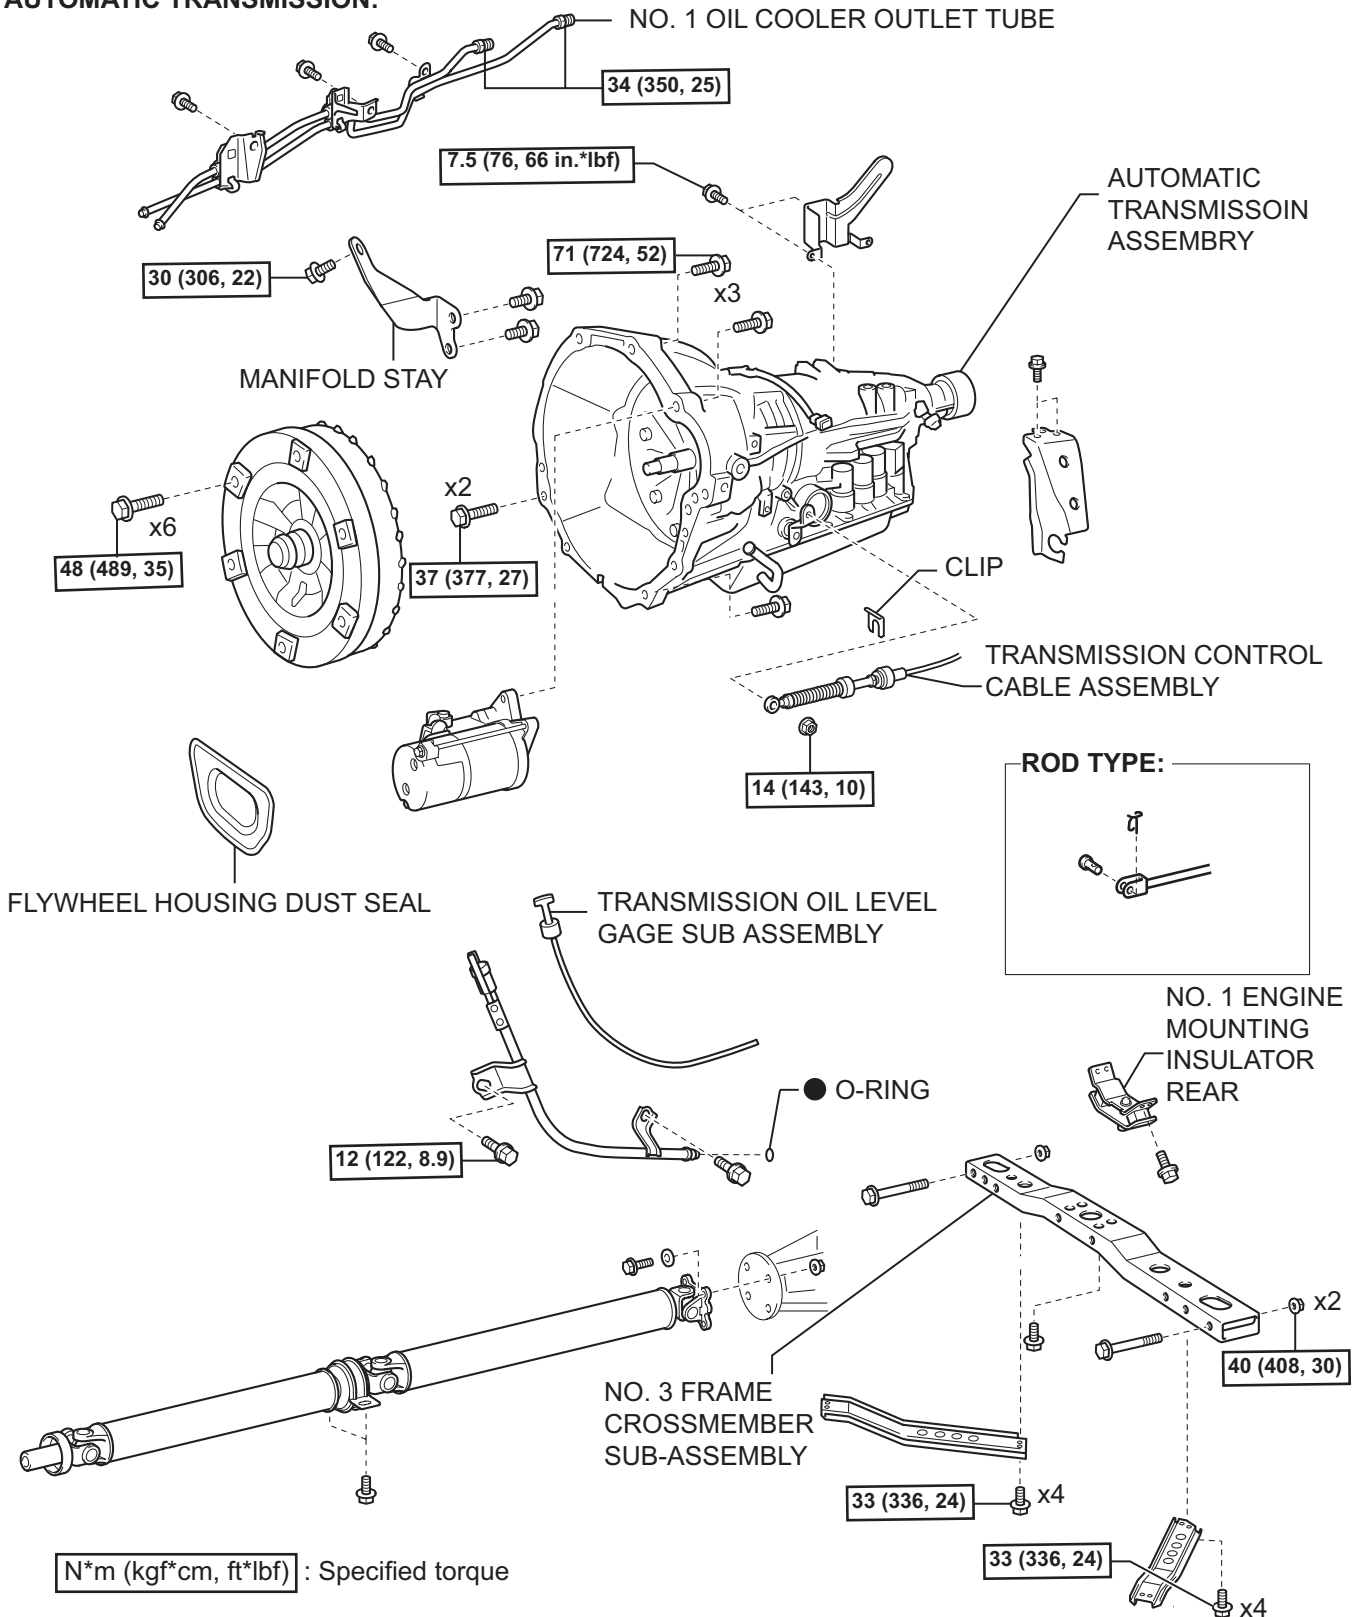

EM



**AUTOMATIC TRANSMISSION:**

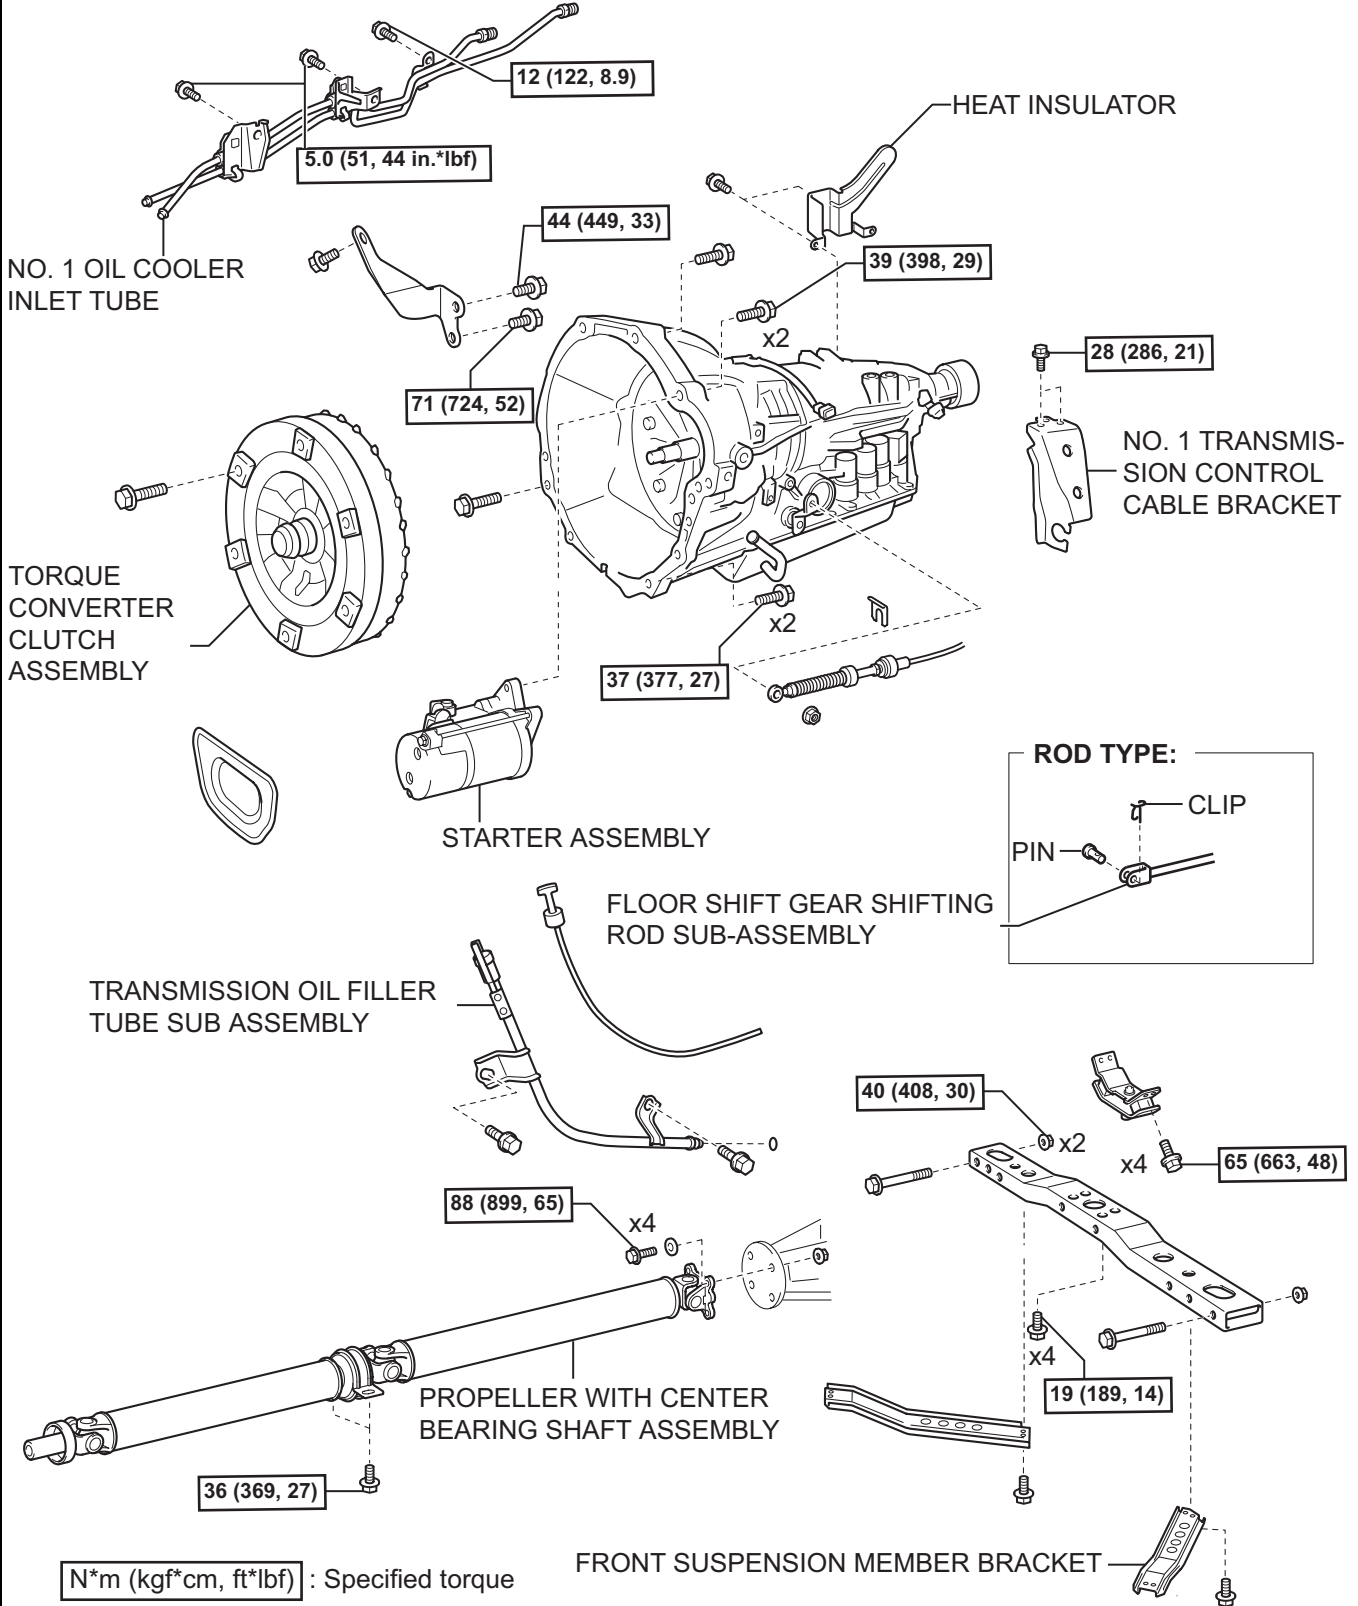

N\*m (kgf\*cm, ft\*lbf) : Specified torque

EM




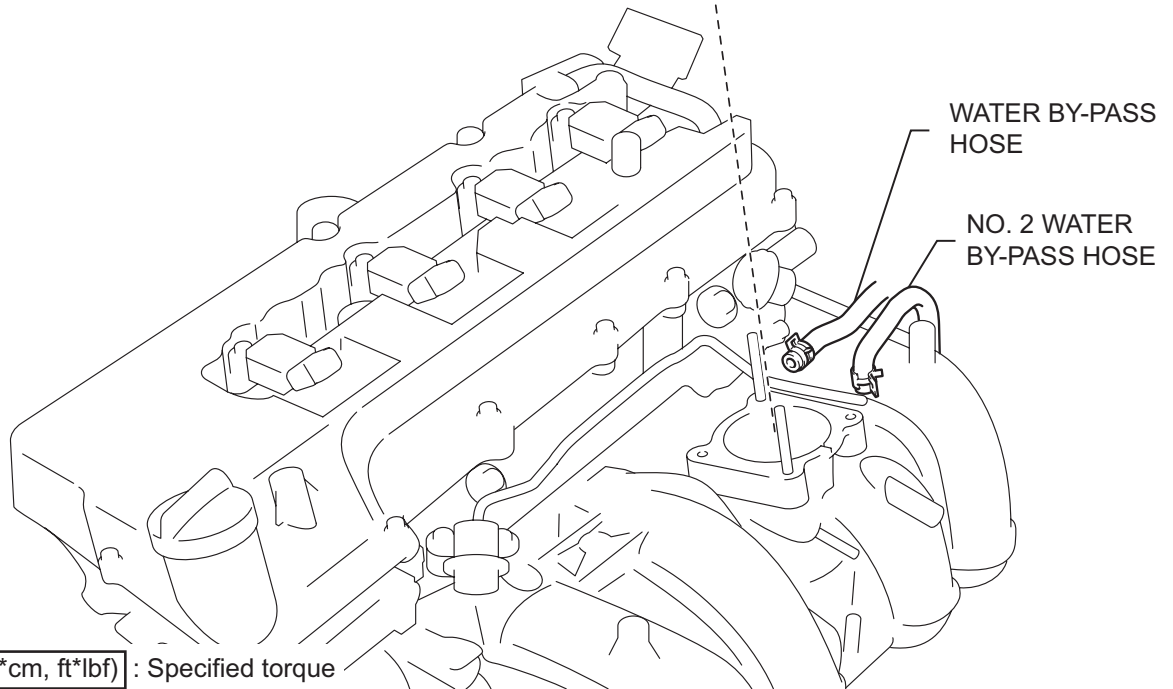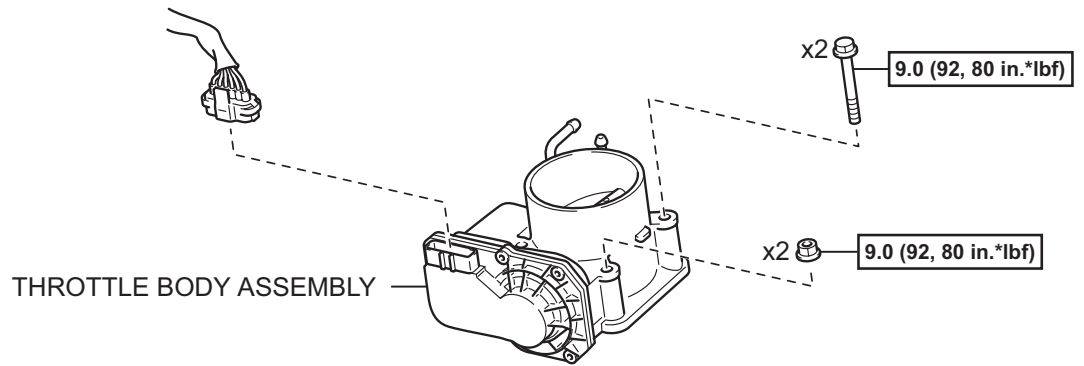

● Non-reusable part

EM


EM





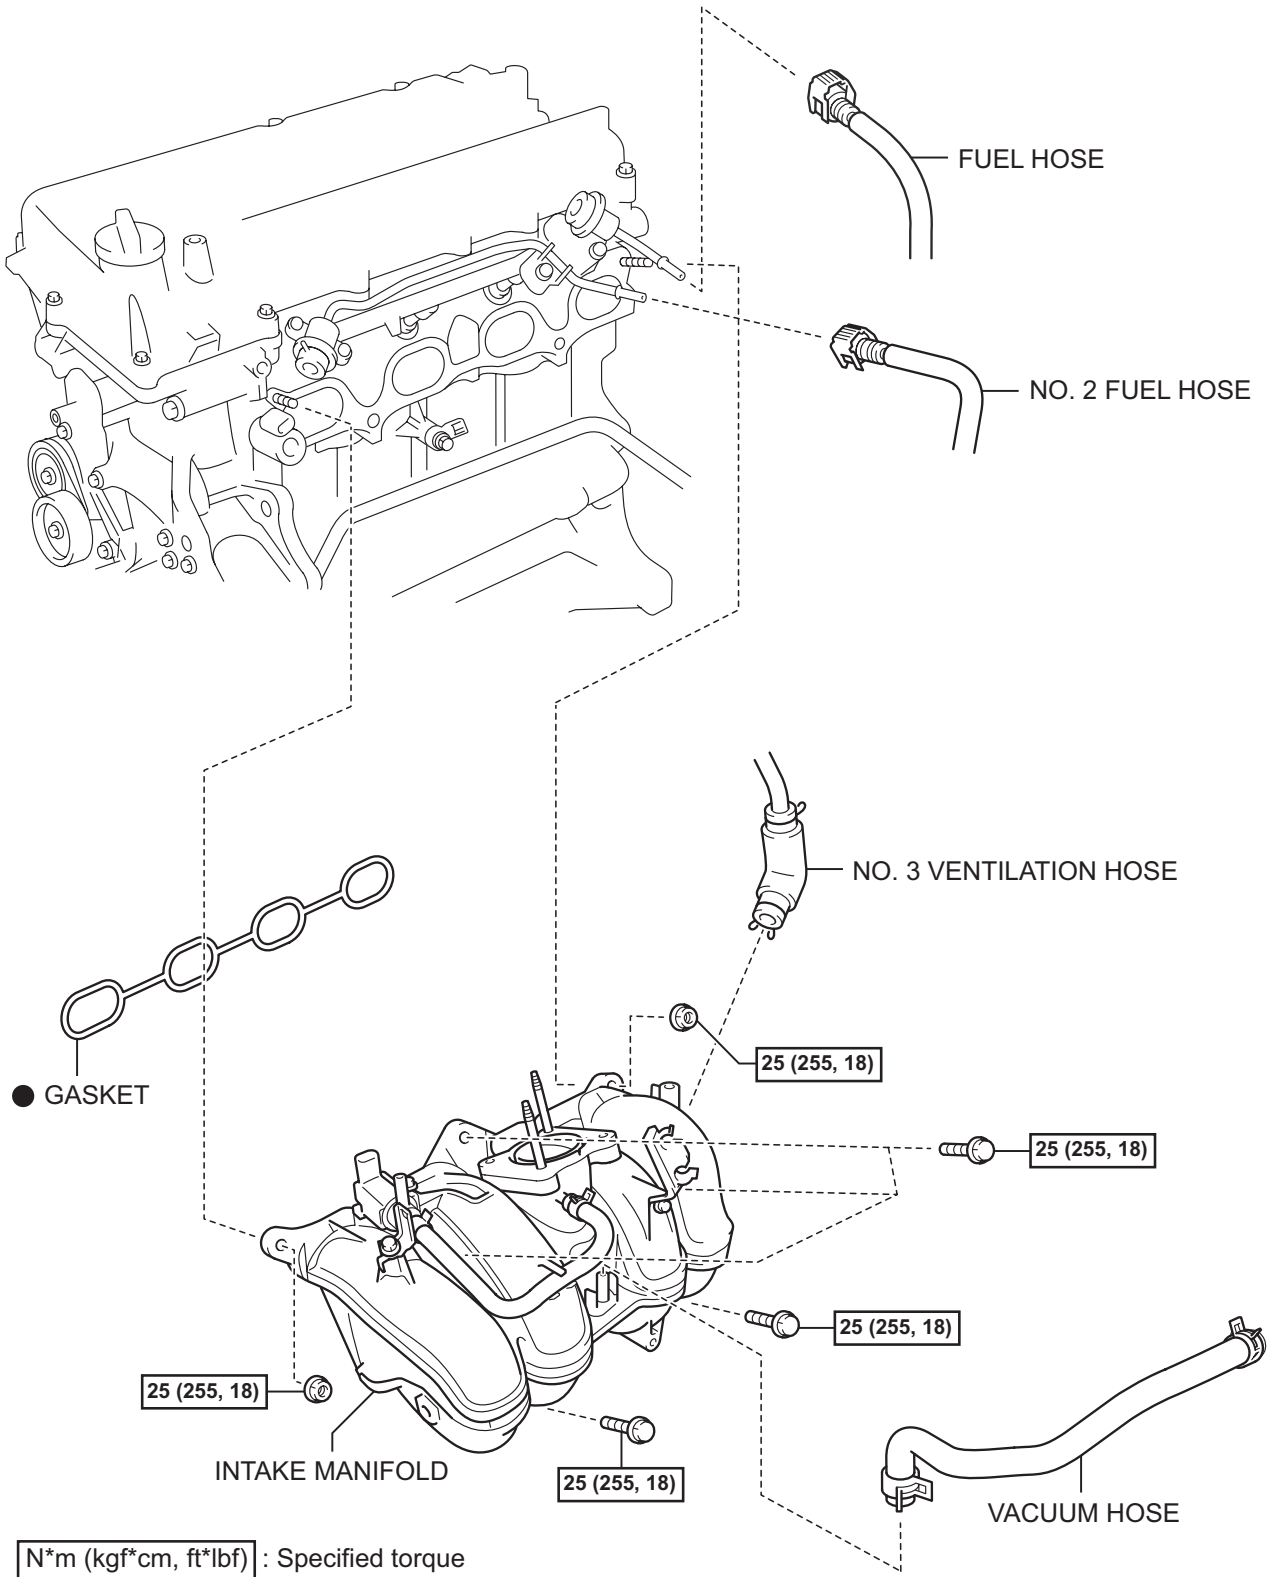


**N\*m (kgf\*cm, ft\*lb)** : Specified torque

● Non-reusable part


EM

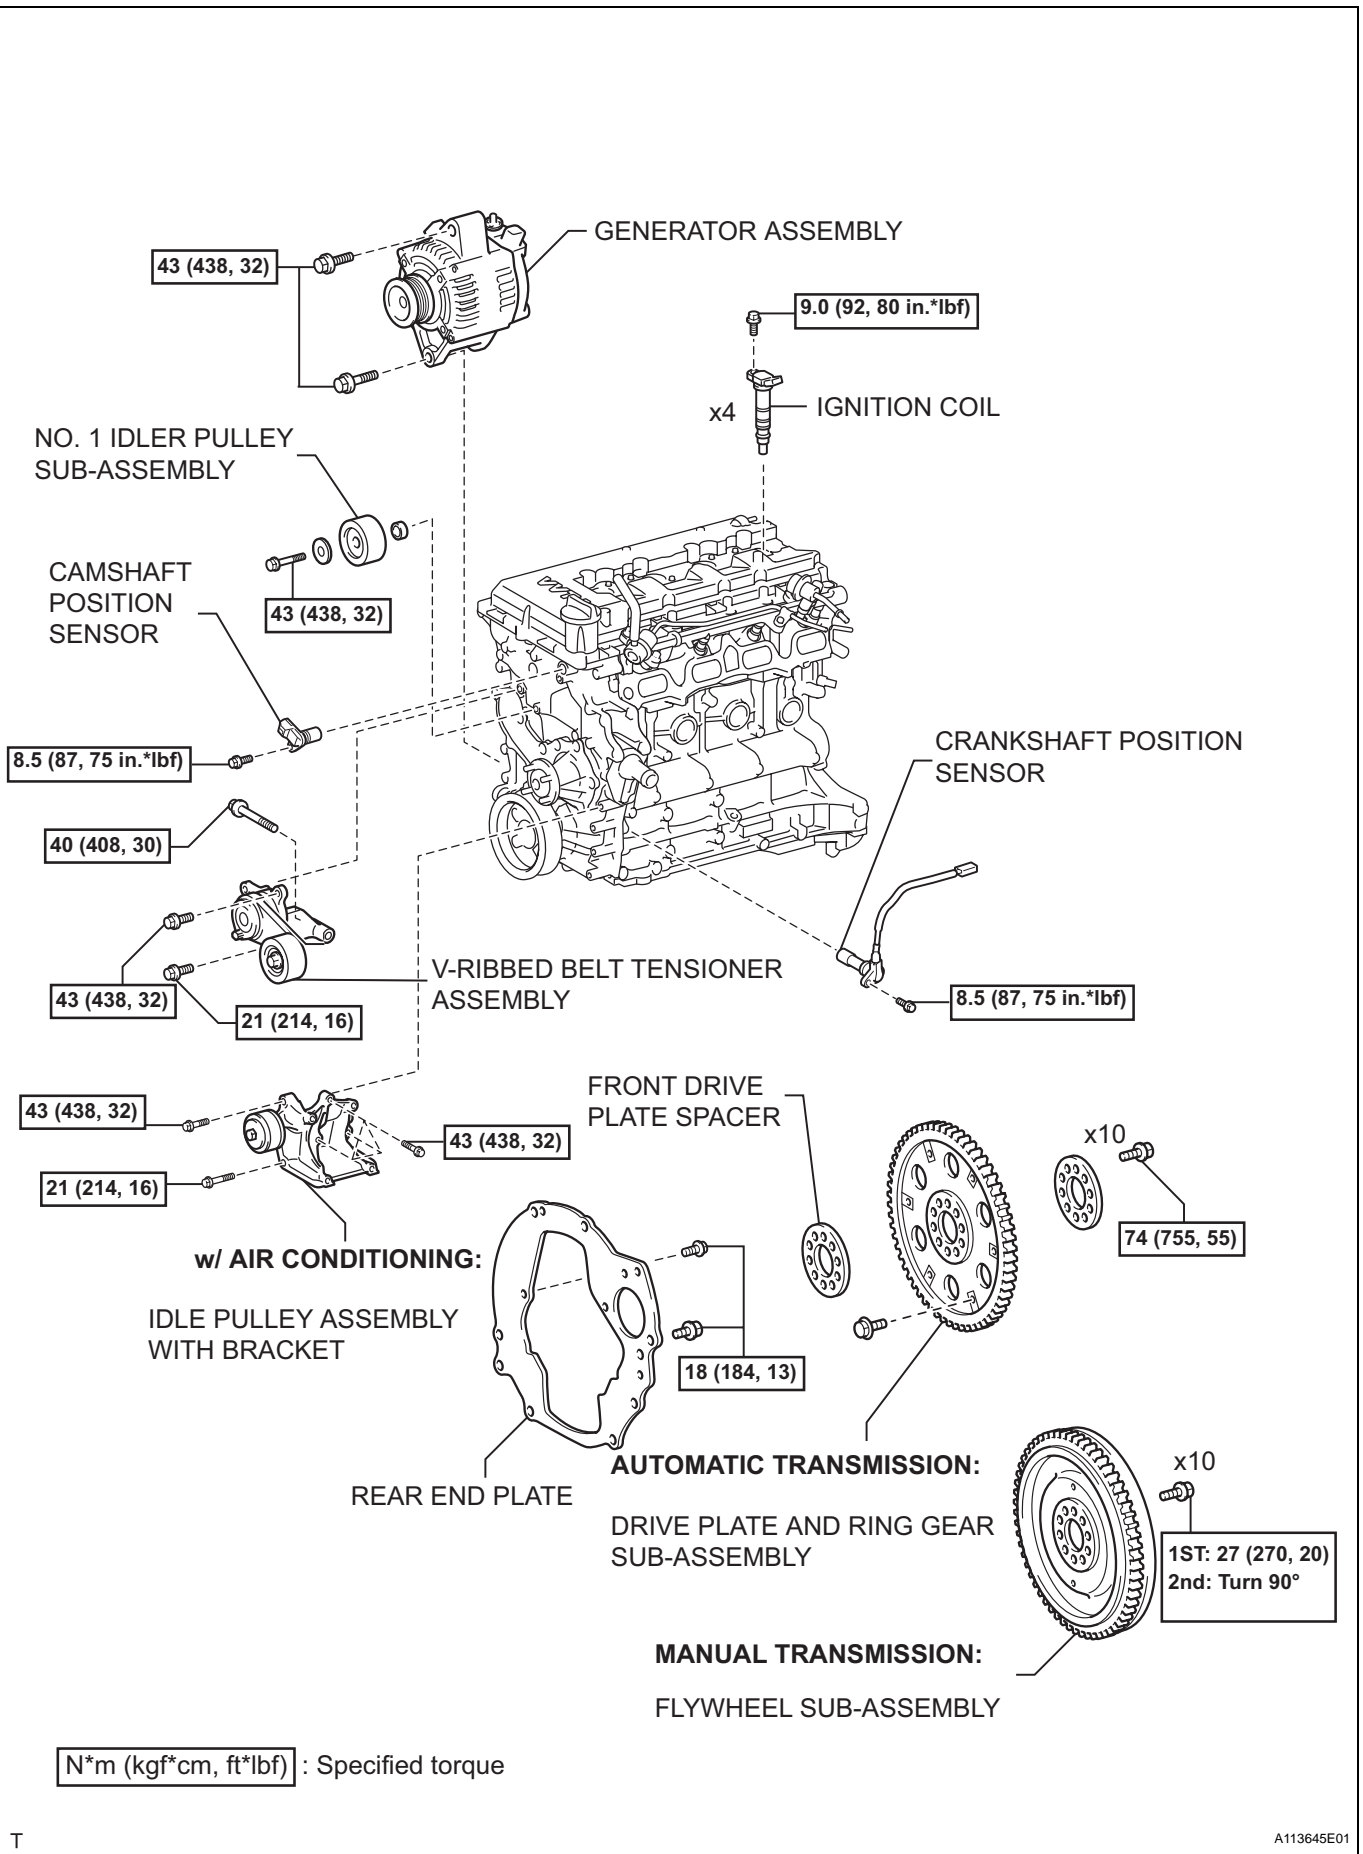

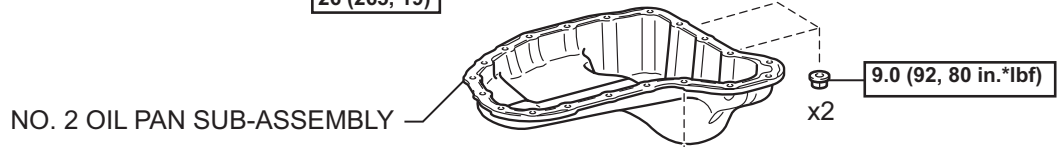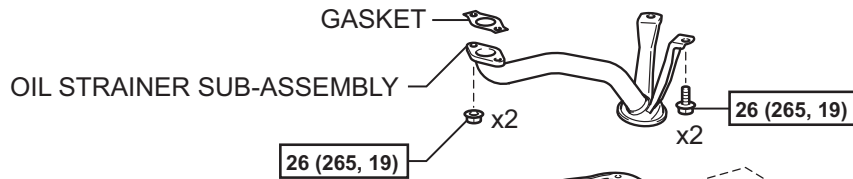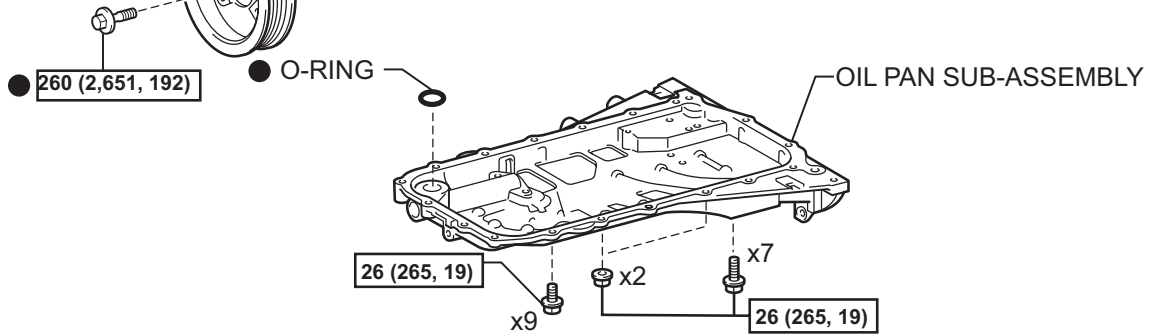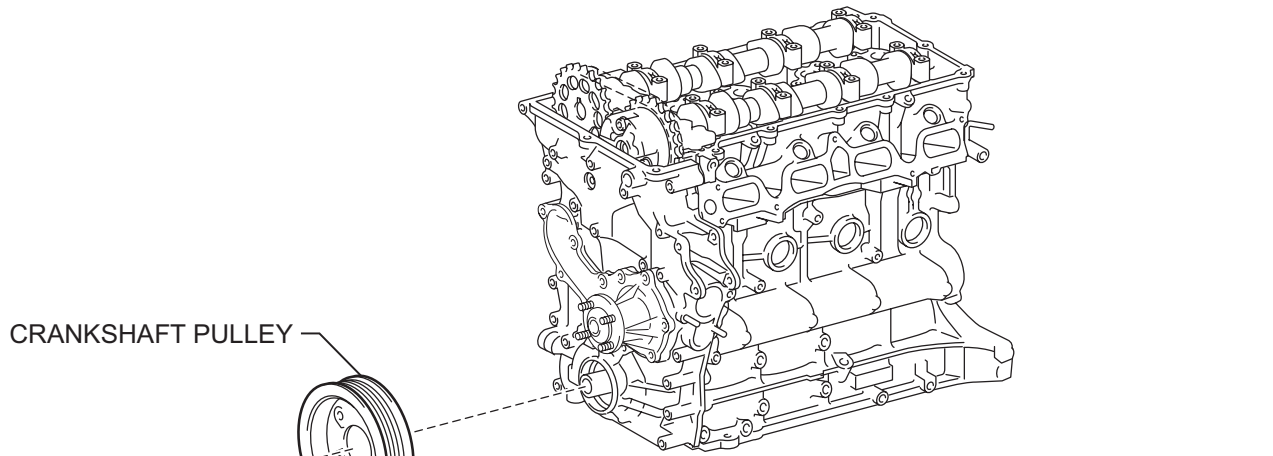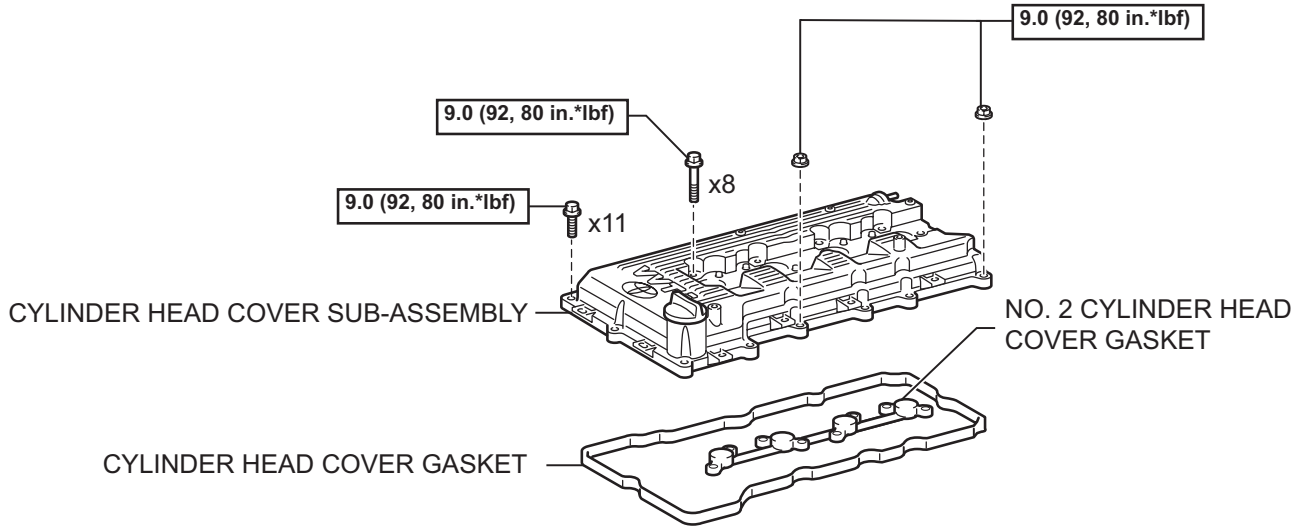


**N\*m (kgf\*cm, ft\*lbf)** : Specified torque

 ● Non-reusable part




EM

NO. 1 CHAIN TENSIONER ASSEMBLY

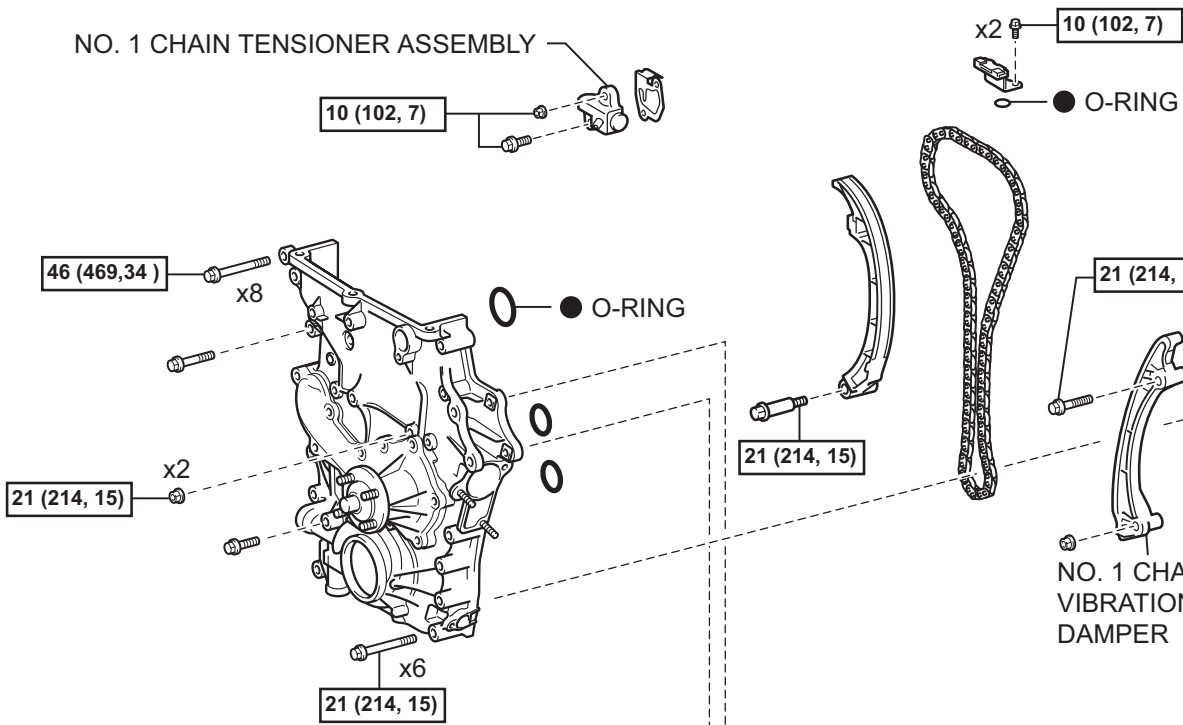



BALANCE SHAFT DRIVE GEAR SHAFT

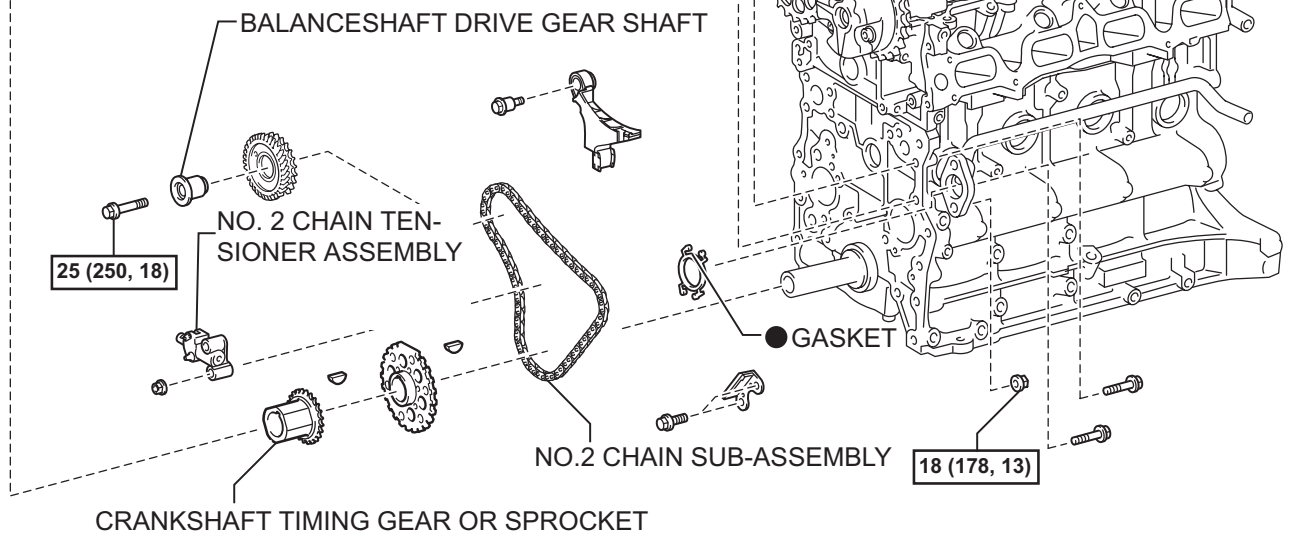

N\*m (kgf\*cm, ft\*lbf) : Specified torque ● Non-reusable part

EM

EM

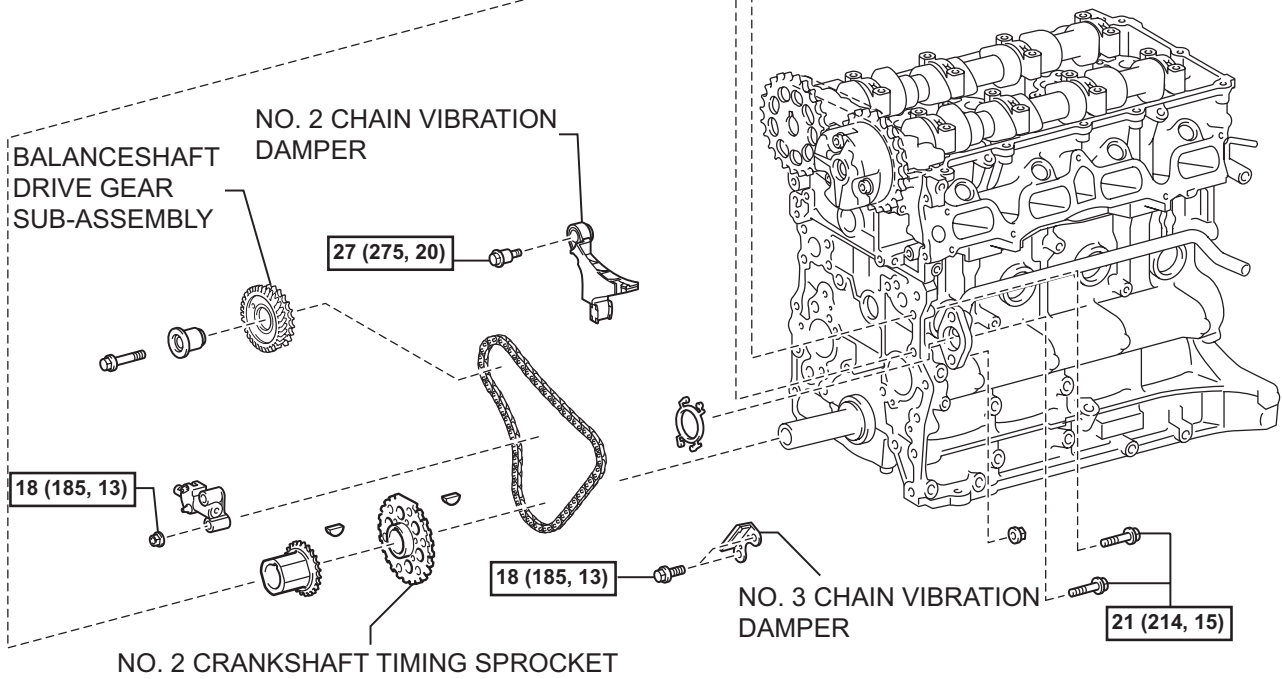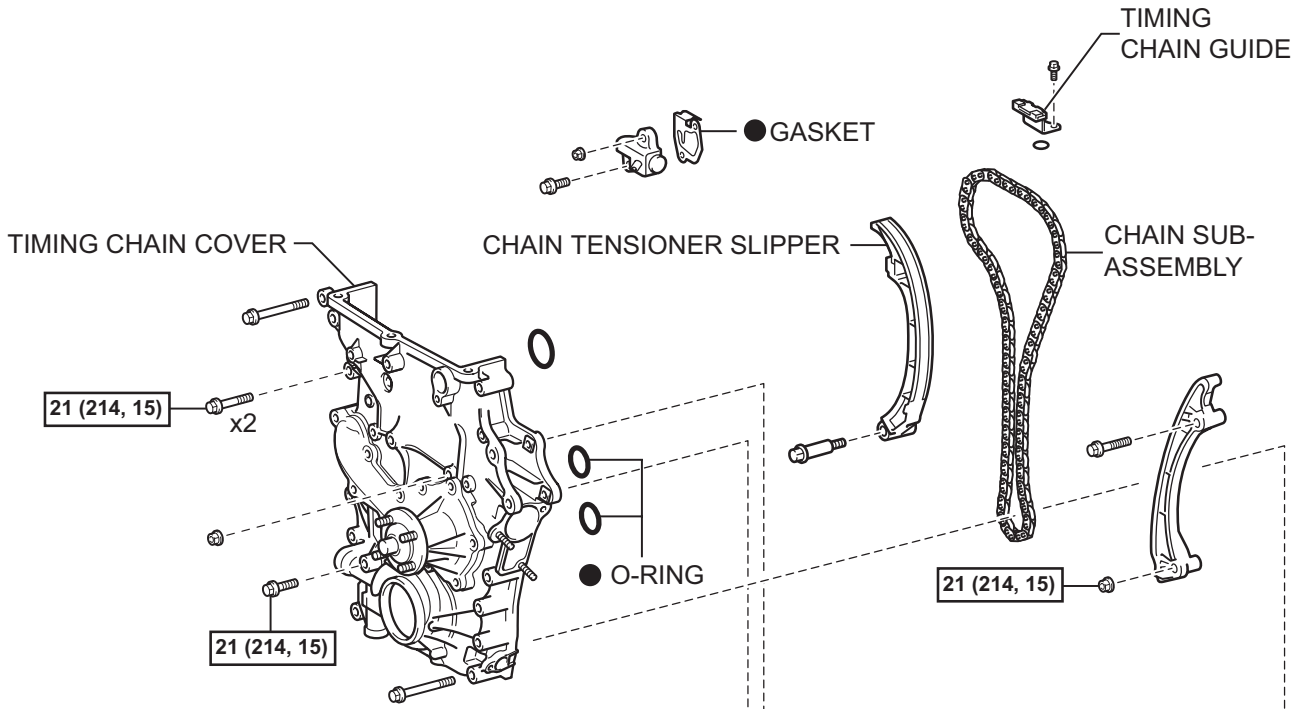

N\*m (kgf\*cm, ft\*lbf) : Specified torque ● Non-reusable part