



PARTS LOCATION

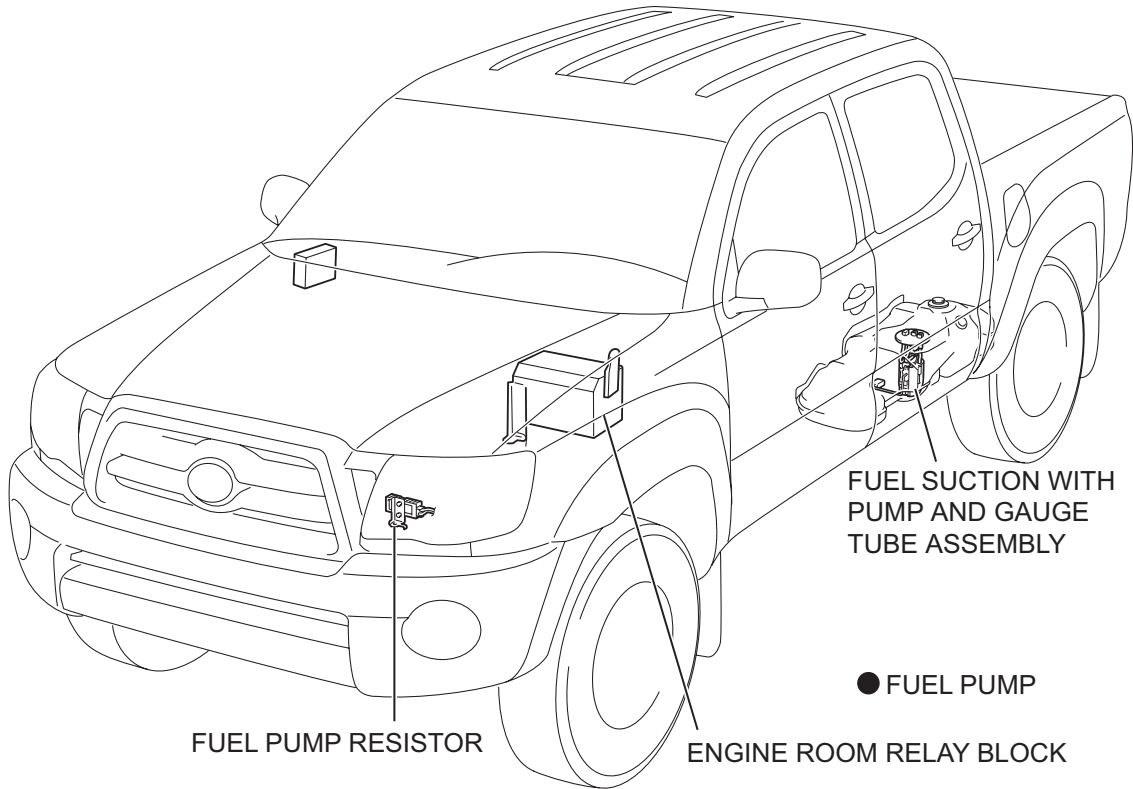


● FUEL PUMP

● FUEL PUMP RELAY

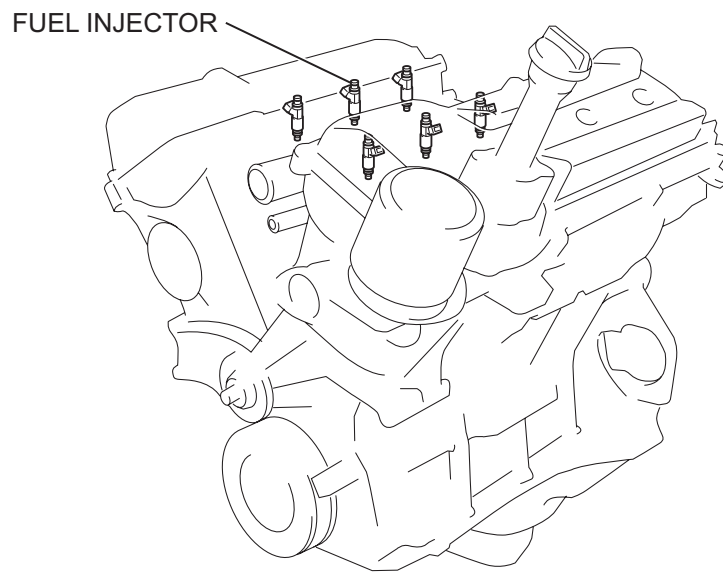

FU

SYSTEM DIAGRAM

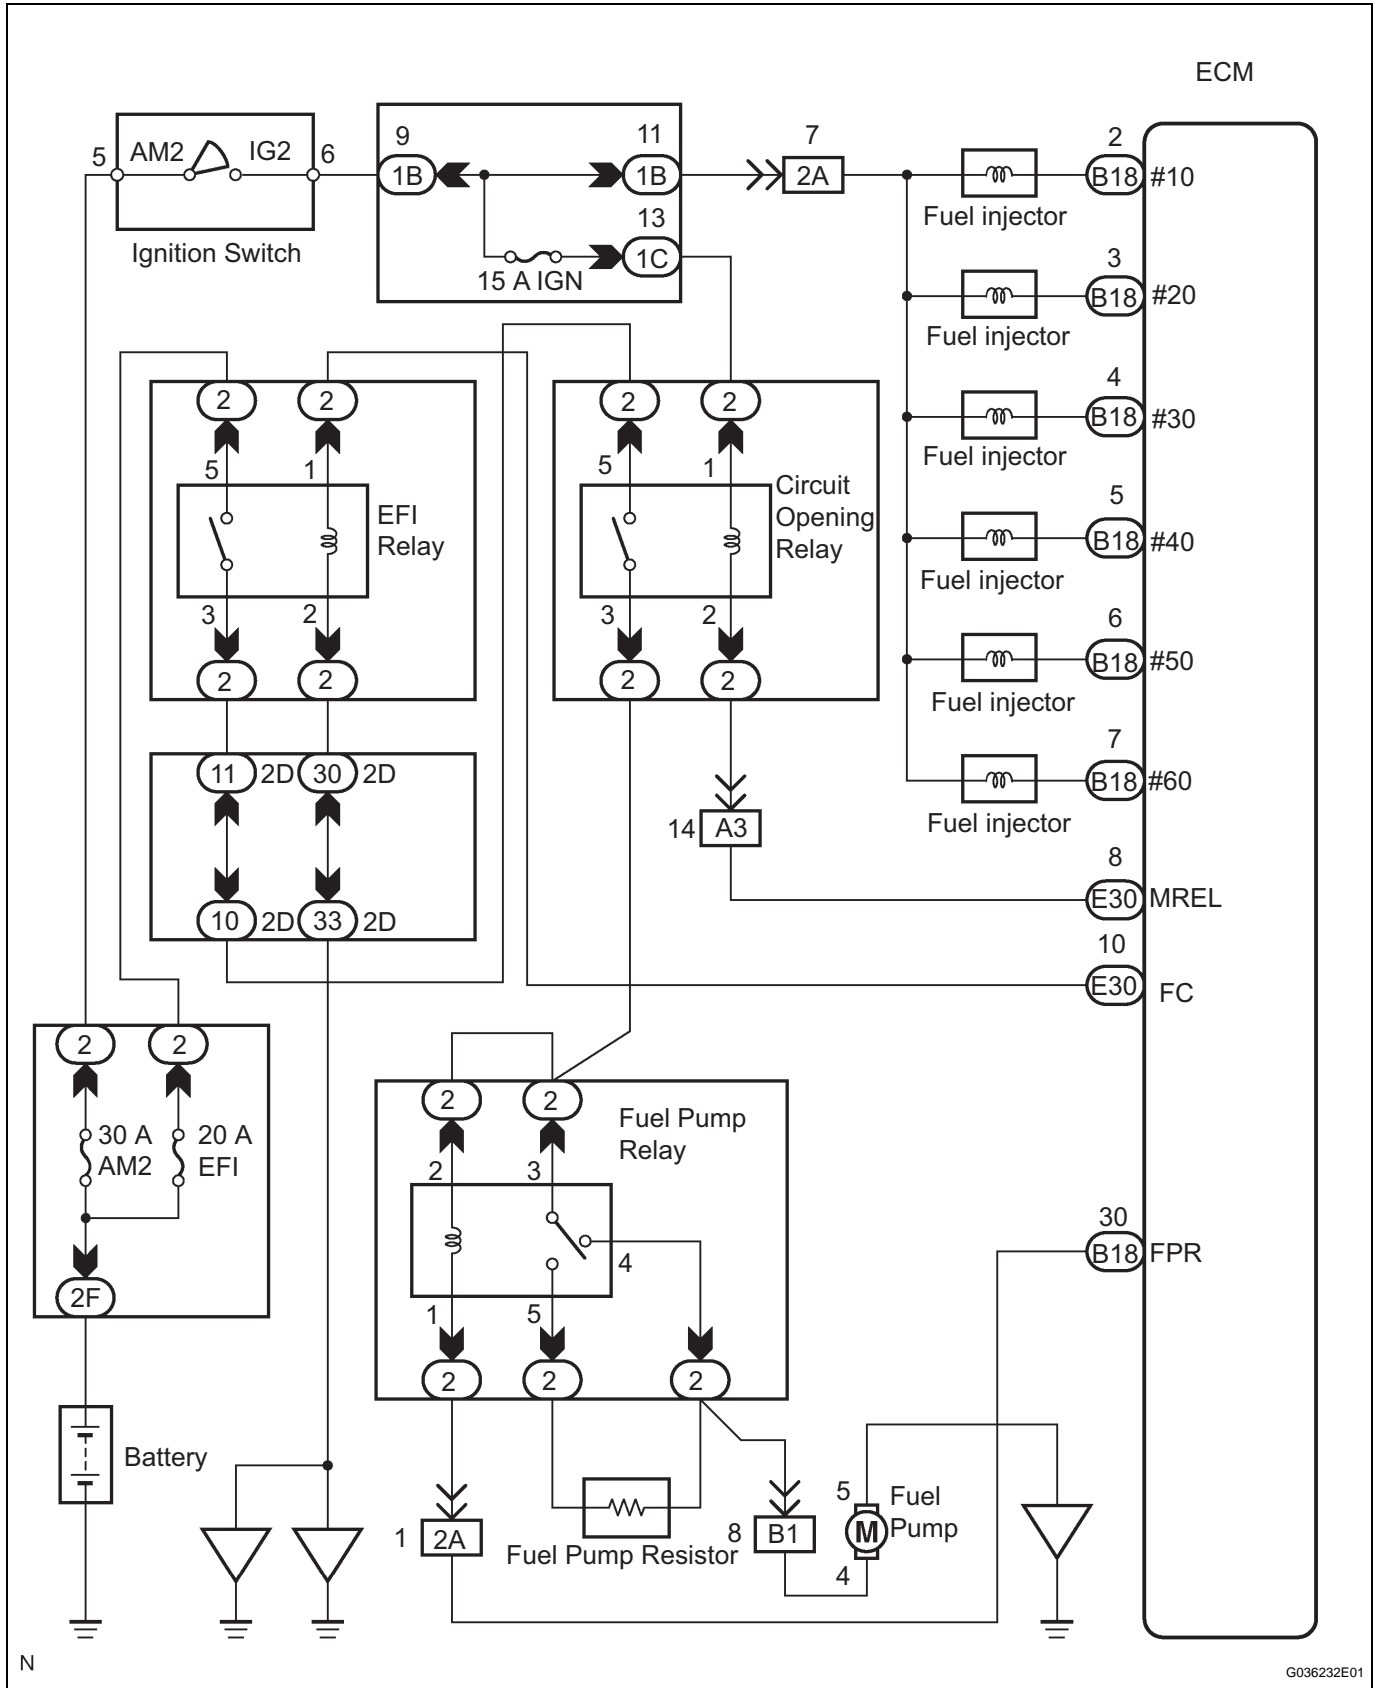

FU