



FUEL PUMP RESISTOR

INSPECTION

1. INSPECT FUEL PUMP RESISTER

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Resistance:

0.71 to 0.75 Ω

If the result is not as specified, replace the fuel pump resistor.