
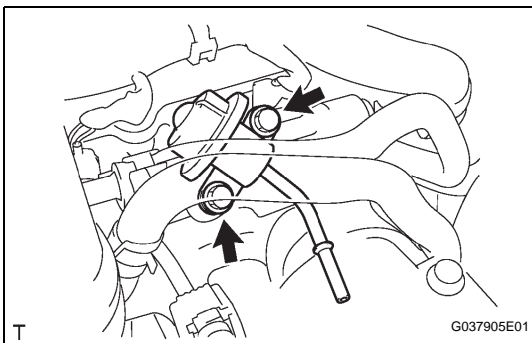
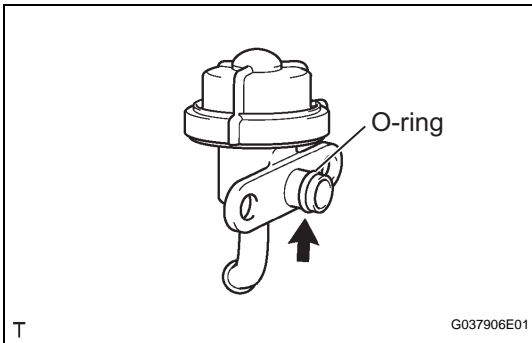


# FUEL PRESSURE PULSATION DAMPER

## REMOVAL

1. **DISCHARGE FUEL SYSTEM PRESSURE**  
(See page [FU-1](#))
2. **DISCONNECT FUEL HOSE (See page [FU-11](#))**
3. **REMOVE FUEL PRESSURE PULSATION DAMPER ASSEMBLY**
  - (a) Remove the 2 bolts, then remove the fuel pressure pulsation damper.

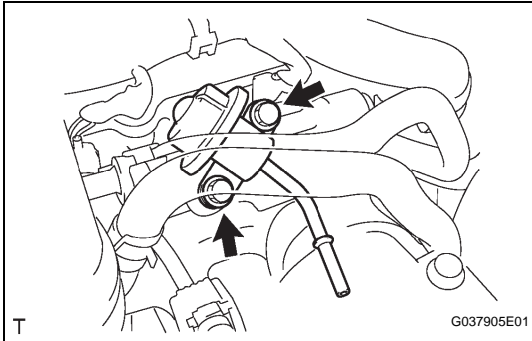

## INSTALLATION

1. **INSTALL FUEL PRESSURE PULSATION DAMPER ASSEMBLY**
  - (a) Apply a light coat of gasoline or spindle oil to the O-ring.
  - (b) Install the fuel pressure pulsation damper with the 2 bolts.  
**Torque: 8.5 N\*m (87 kgf\*cm, 75 in.\*lbf)**
2. **CONNECT FUEL HOSE (See page [FU-17](#))**
3. **CHECK FOR FUEL LEAKAGE (See page [FU-7](#))**

**FU**