

INSTALLATION

1. INSTALL CHARCOAL CANISTER ASSEMBLY

- (a) Connect the fuel tank vent hose.
 - (1) Align the fuel tank vent hose connector with the pipe, then push in the fuel tank vent connector until the retainer makes a "click" sound to connect the fuel tank vent hose to the charcoal canister.

NOTICE:

- Check that there are no scratches or foreign objects on the disconnected parts of the fuel tank vent connector and pipe before performing the work.
- After connecting the fuel tank vent hose, check that the fuel tank vent hose is securely connected by pulling the quick connector.

- (b) Install the charcoal canister with the bolt and 2 nuts.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
- (c) Connect the EVAP tube.
- (d) Connect the connector.

2. INSTALL CHARCOAL CANISTER FILTER NO.2

- (a) Install the charcoal canister filter No. 2 with the nut.
Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
- (b) Connect the breather hose to the charcoal canister.
- (c) Engage the clamp.
- (d) Connect the breather hose to the pipe.
- (e) Connect the EVAP pipe to the clamp.
- (f) Install the ABS wire harness clamp with the bolt.
Torque: 14 N*m (142 kgf*cm, 10 ft.*lbf)

3. INSTALL FUEL TANK ASSEMBLY (See page [FU-35](#))

4. CONNECT FUEL TANK MAIN TUBE AND FUEL TANK RETURN TUBE (See page [FU-36](#))

5. INSTALL FUEL TANK PROTECTOR SUB-ASSEMBLY NO.1 (for Off Road Package) (See page [FU-36](#))

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

7. CHECK FOR FUEL LEAKAGE