


VENTILATION VALVE


REMOVAL

1. REMOVE VENTILATION VALVE SUB-ASSEMBLY

(a) Disconnect the ventilation hose.

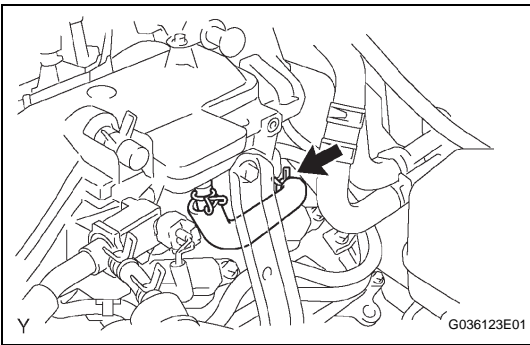

(b) Remove the ventilation valve.

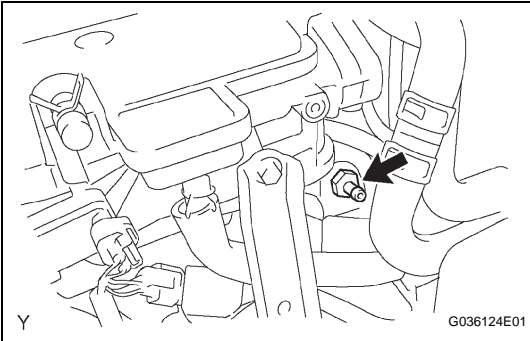

INSPECTION

1. INSPECT VENTILATION VALVE SUB-ASSEMBLY

(a) Check the operation.


- (1) Install a clean hose as shown in the illustration.
- (2) Blow air into the cylinder head side and check that the air passes through freely.

CAUTION:


Do not suck air through the ventilation valve. Petroleum substances inside the ventilation valve are harmful.

- (3) Blow air into the intake manifold side and check that the air does not pass through freely. If the operation is not as specified, replace the ventilation valve.

Cylinder Head Side

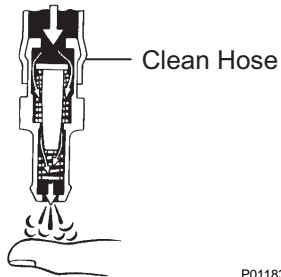

Intake Manifold Side

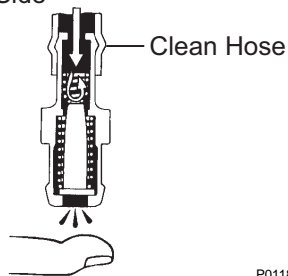

INSTALLATION

1. INSTALL VENTILATION VALVE SUB-ASSEMBLY

- (a) Install the ventilation valve.
Torque: 27 N*m (275 kgf*cm, 20 ft.*lbf)
- (b) Connect the ventilation hose.