

VENTILATION VALVE



INSPECTION

1. INSPECT VENTILATION VALVE SUB-ASSY

- (a) Check the operation.
 - (1) Install a clean hose as shown in the illustration.
 - (2) Blow air into the cylinder head side and check that the air passes through freely.

CAUTION:

Do not suck air through the ventilation valve. Petroleum substances inside the ventilation valve are harmful.

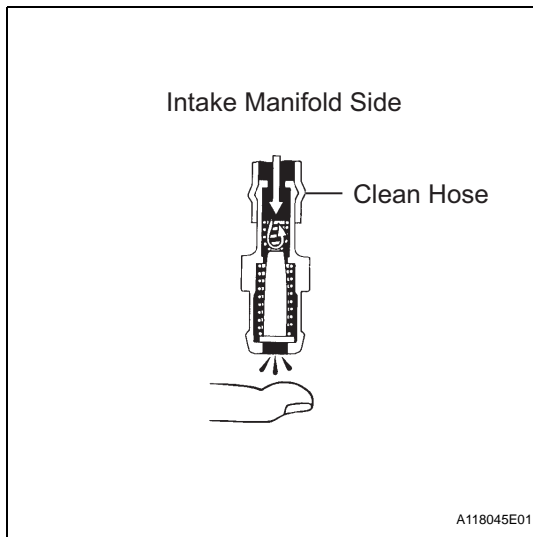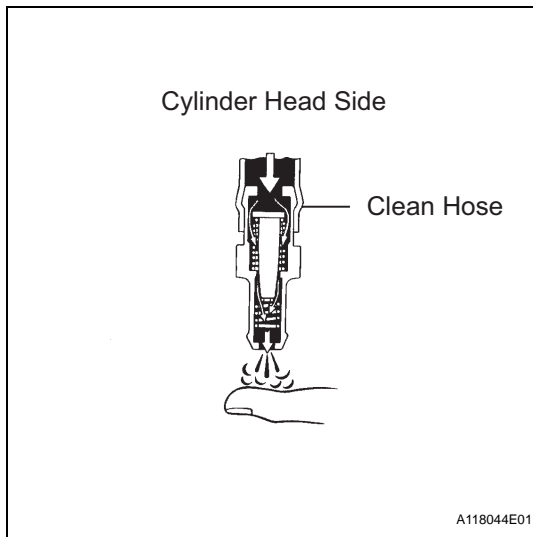

- (3) Blow air into the intake manifold side and check that the air does not pass through freely. If the operation is not as specified, replace the ventilation valve.