

## FUEL TANK CAP

## INSPECTION

- 1. INSPECT FUEL TANK CAP ASSEMBLY
  - (a) Check the appearance.
    - (1) Visually check whether the fuel tank cap and gasket are deformed or damaged.
      If necessary, repair or replace the cap and/or gasket.

