

INSTALLATION

1. INSTALL WATER INLET

- (a) Install a new gasket onto the water inlet with thermostat.
- (b) Install the water inlet with thermostat with the 3 nuts.
Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

2. CONNECT NO.2 RADIATOR HOSE

3. CONNECT BATTERY NEGATIVE TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

4. ADD ENGINE COOLANT (See page [CO-3](#))

5. CHECK FOR ENGINE COOLANT LEAKAGE (See page [CO-4](#))

6. INSTALL V-BANK COVER

- (a) Install the V-bank cover with the 2 nuts.
Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)