



OIL PUMP (for 2WD)

COMPONENTS

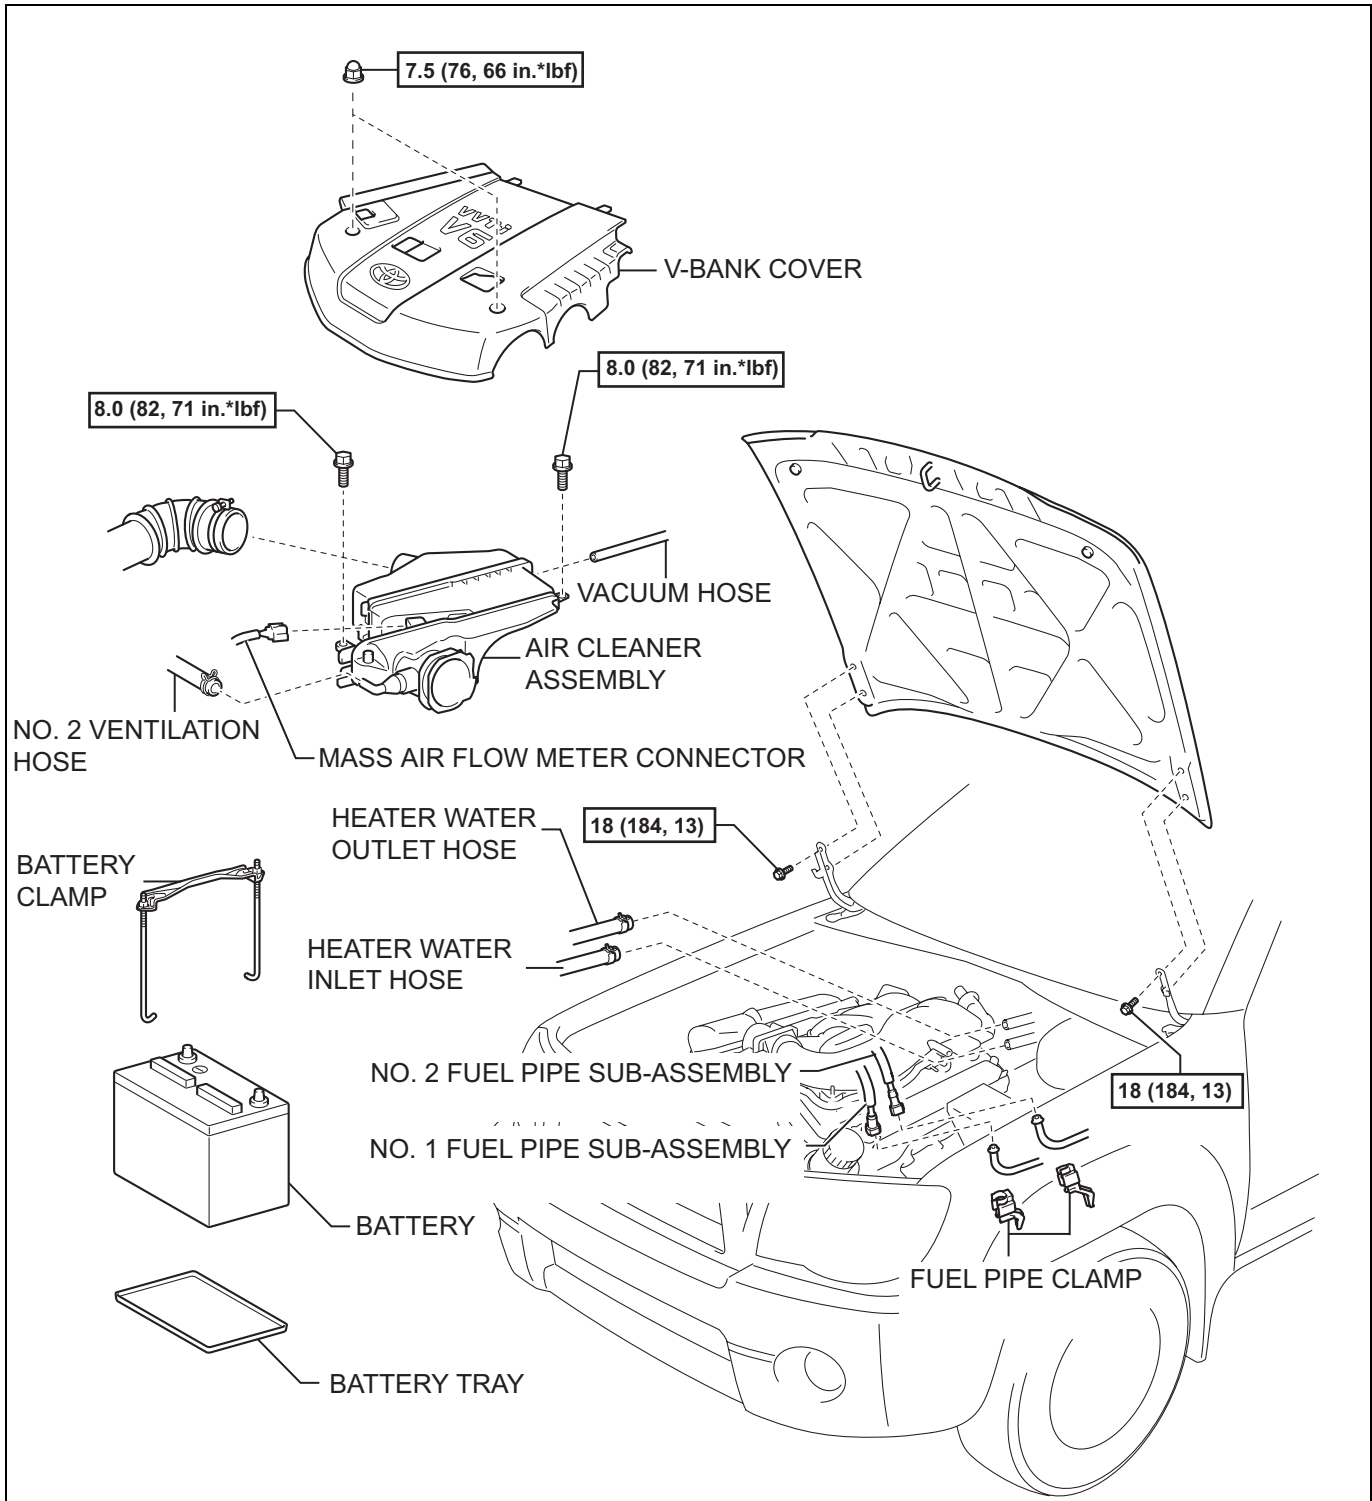


N*m (kgf*cm, ft*lbf) : Specified torque

LU

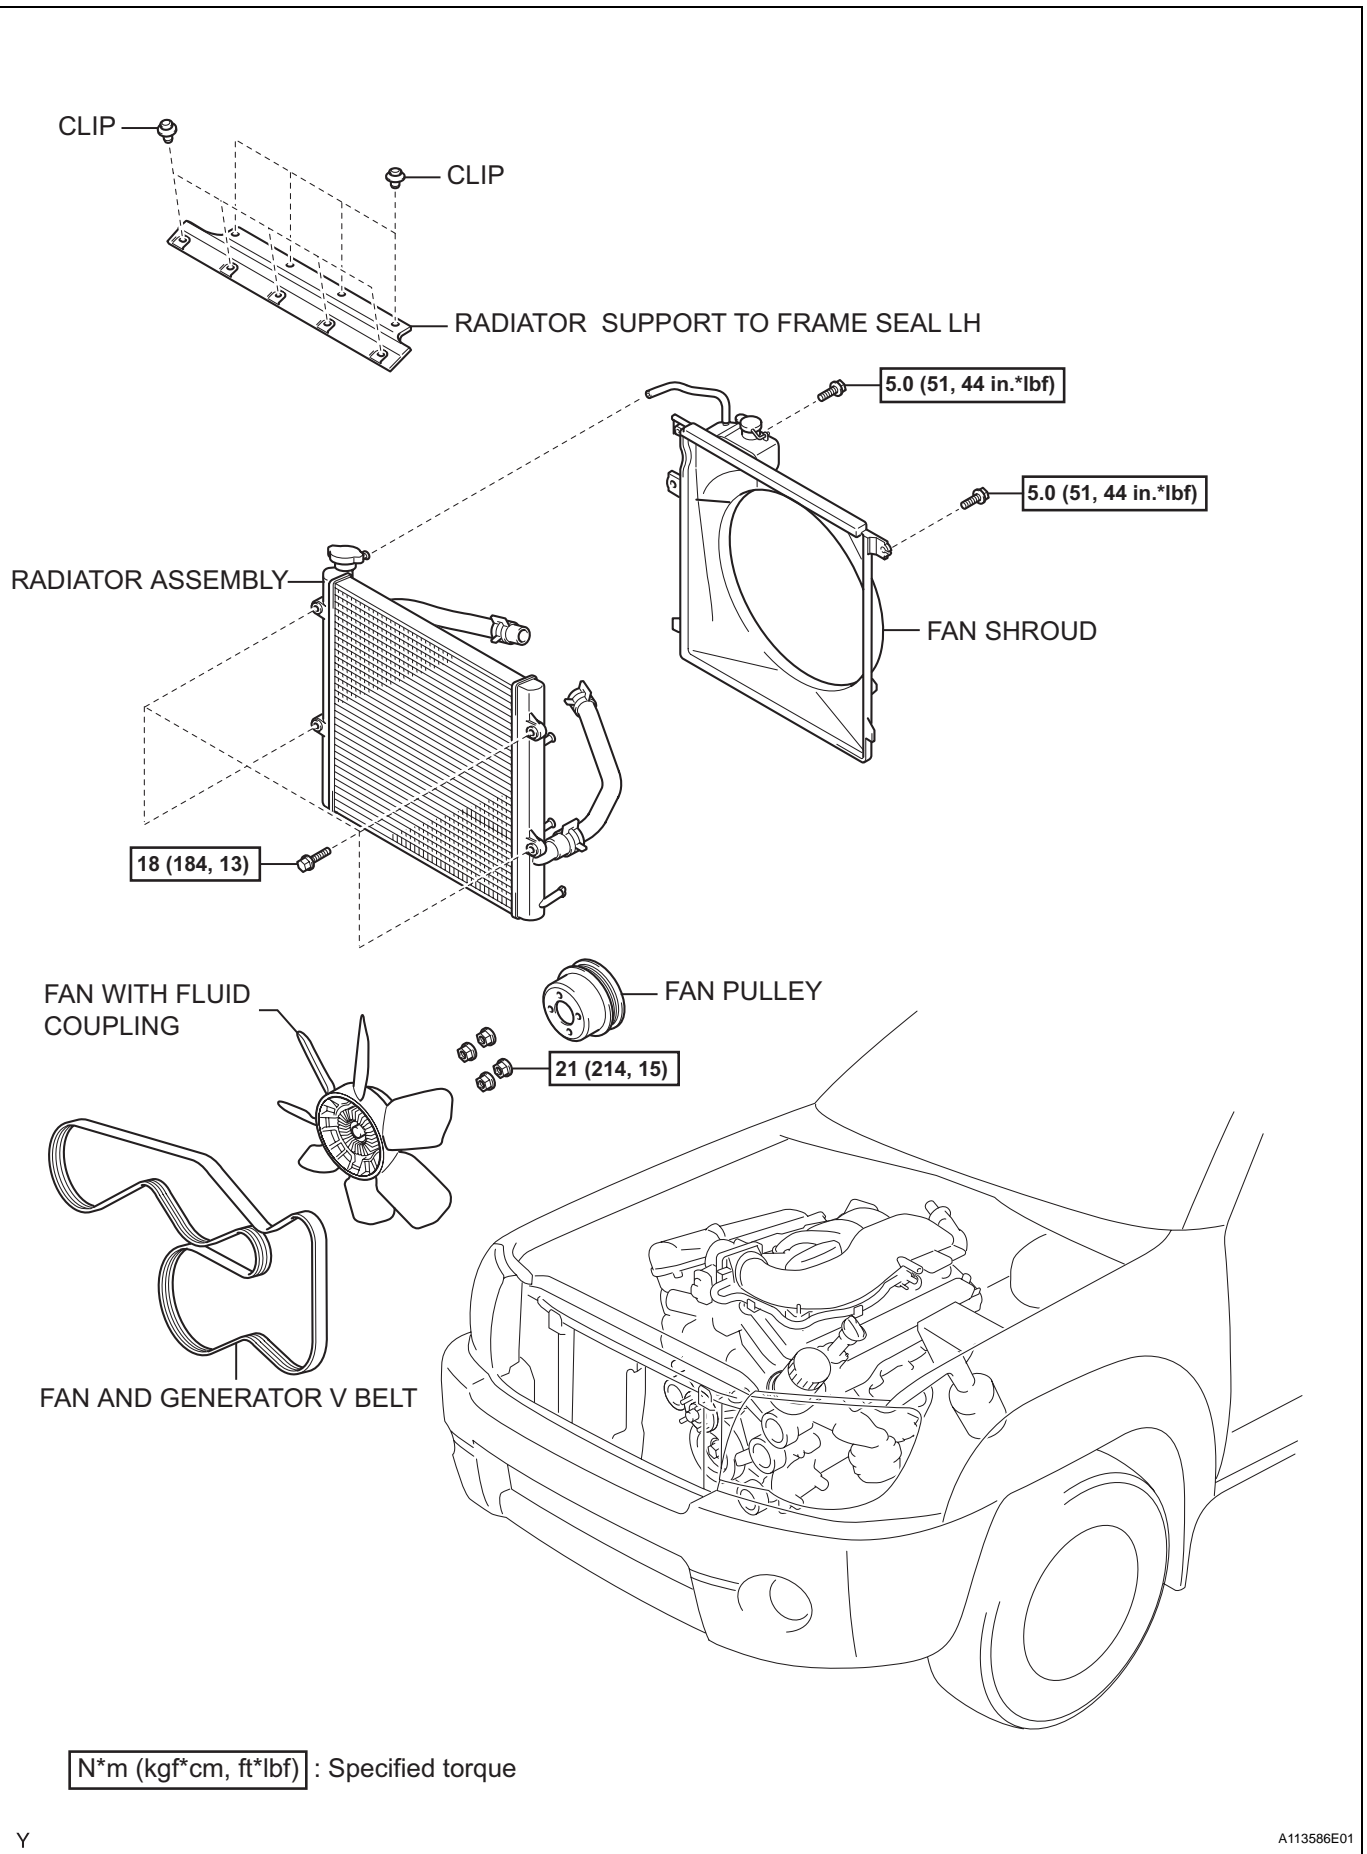


LU

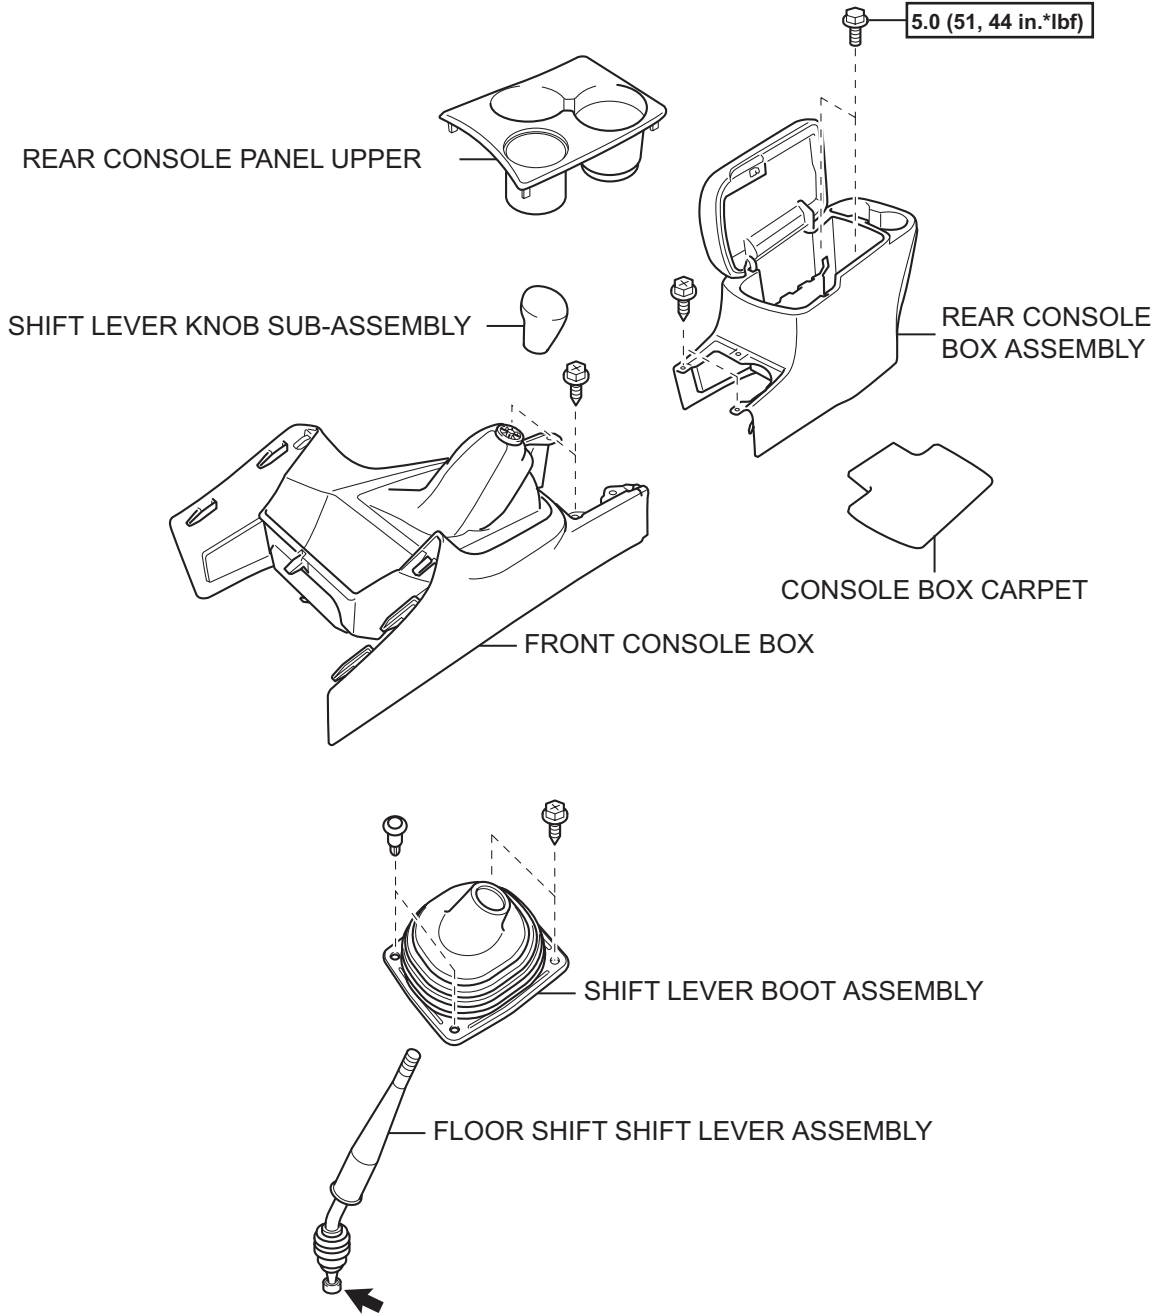

N*m (kgf*cm, ft*lbf) : Specified torque ← MP grease


LU

2WD AND PRE RUNNER, MANUAL TRANSMISSION:

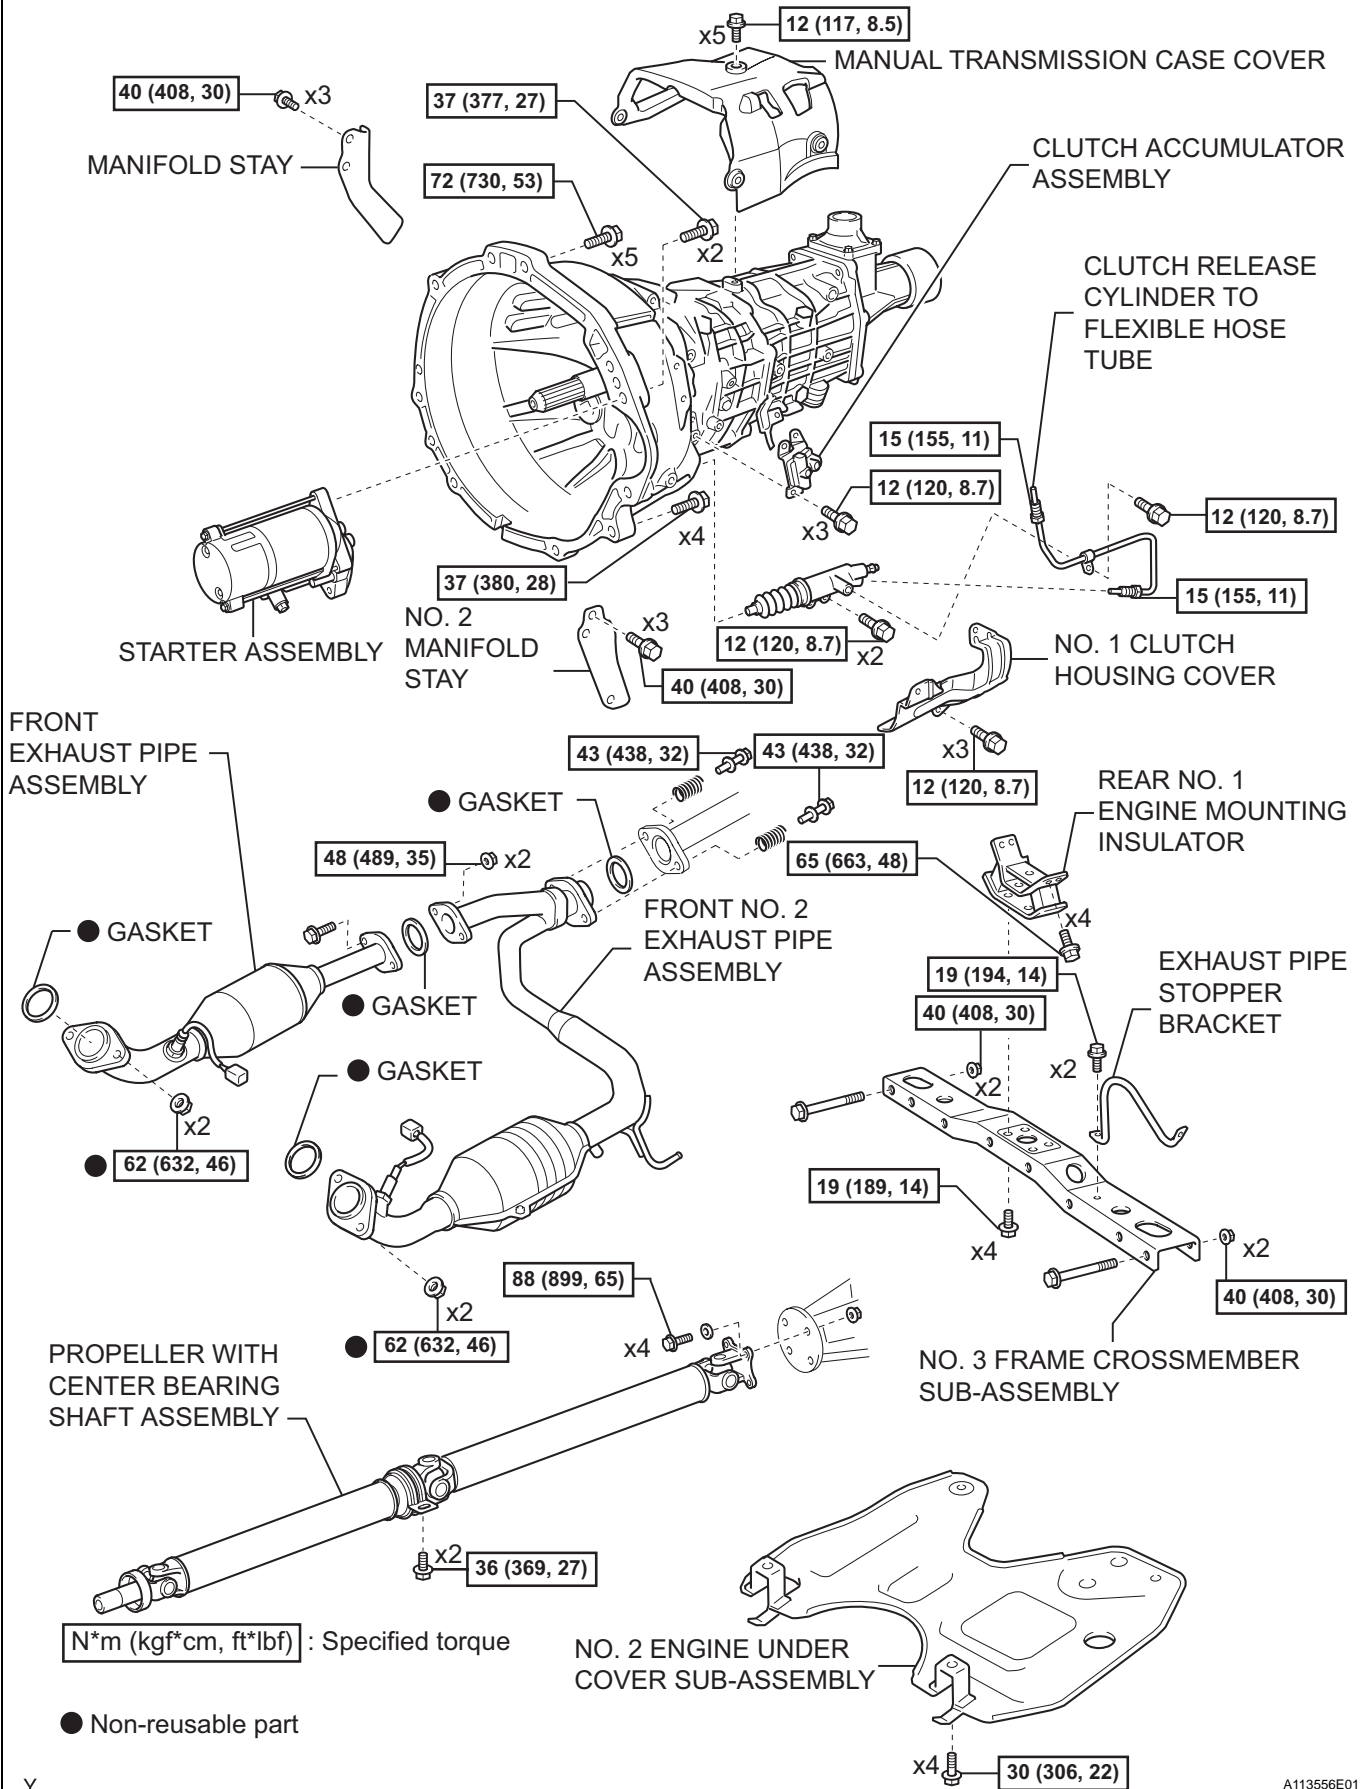


LU

Y

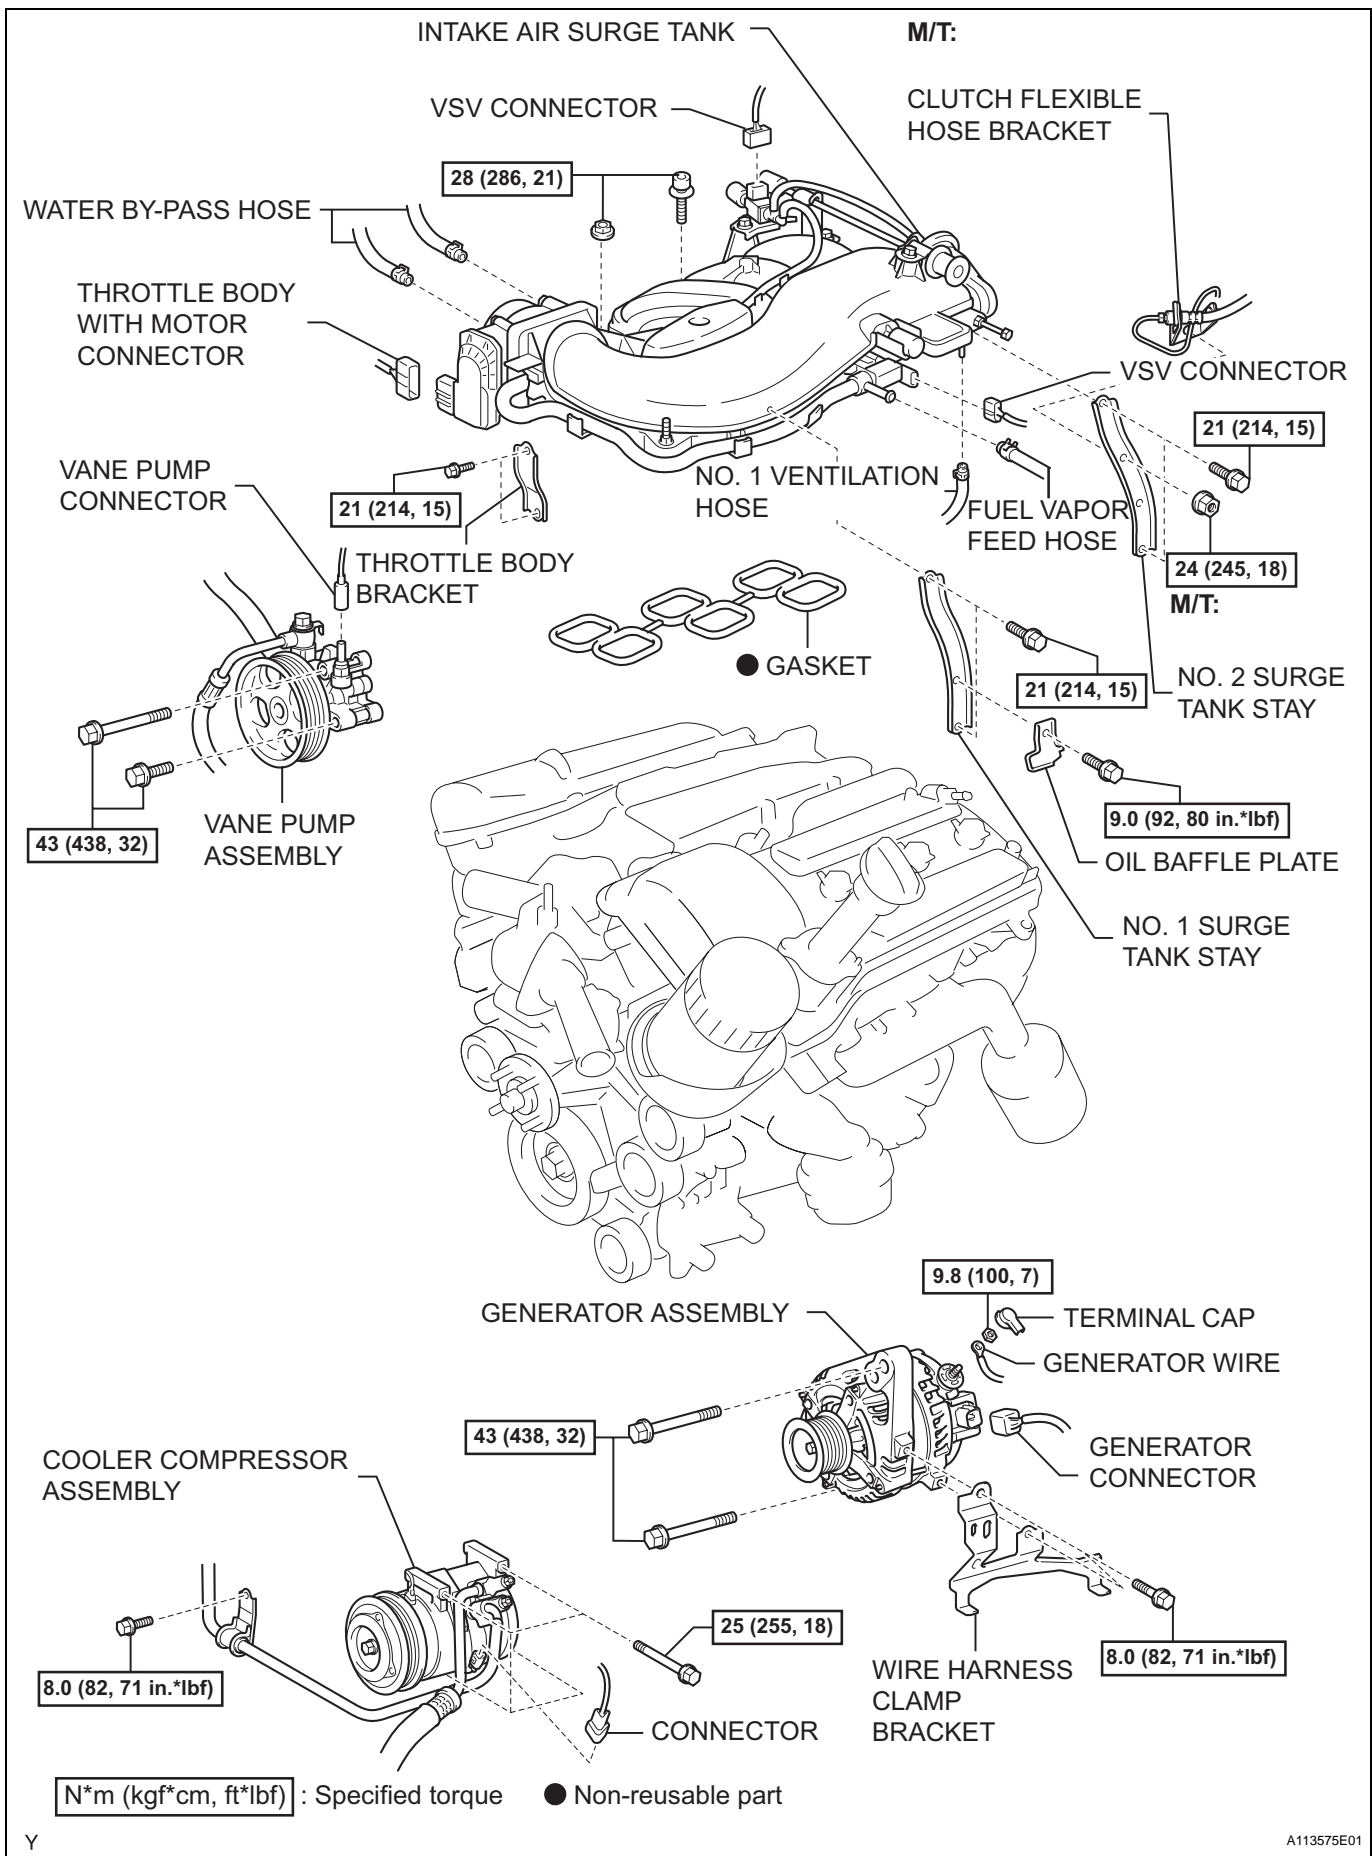

LU

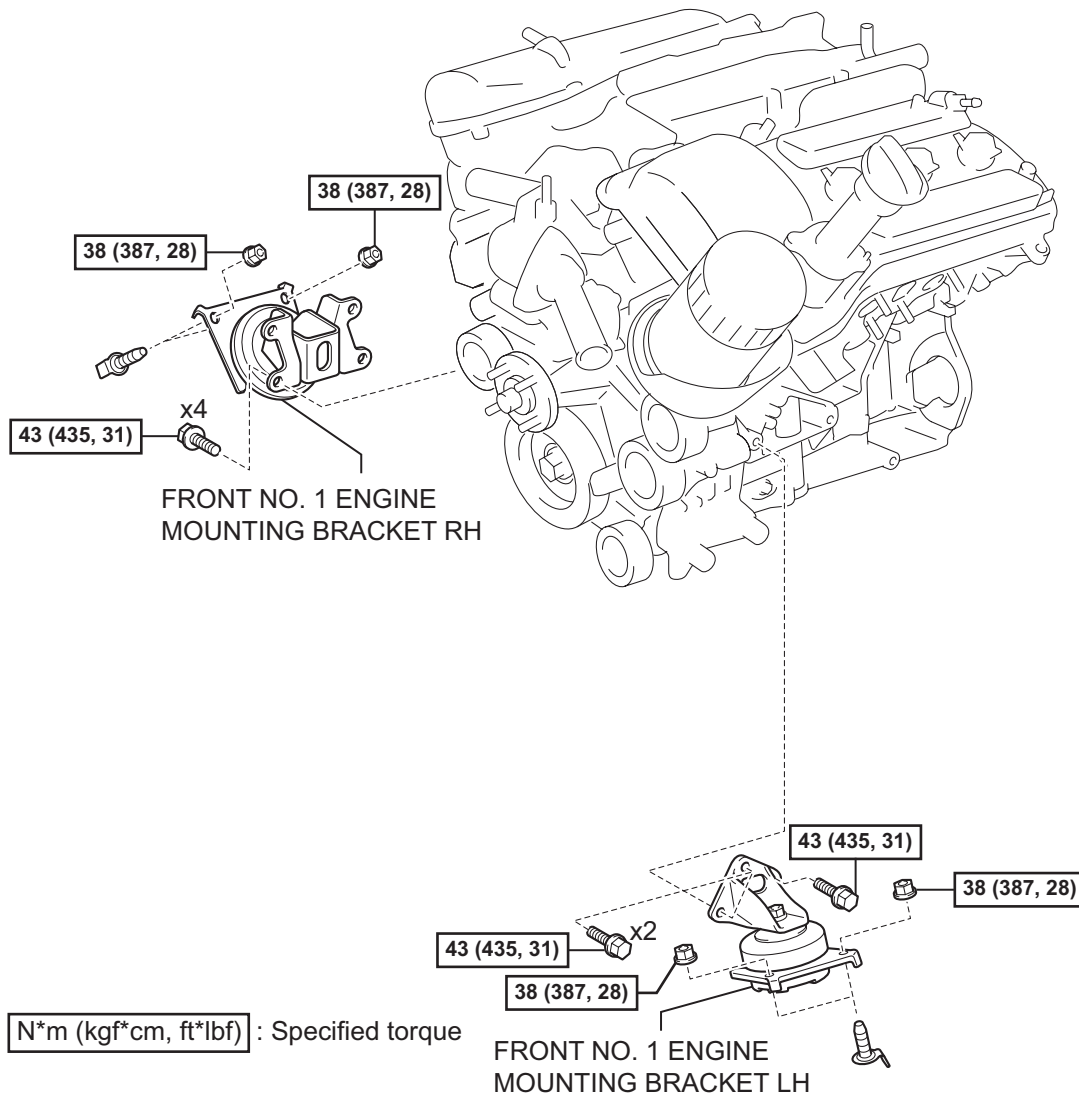



N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part



Y

A113584E01

LU

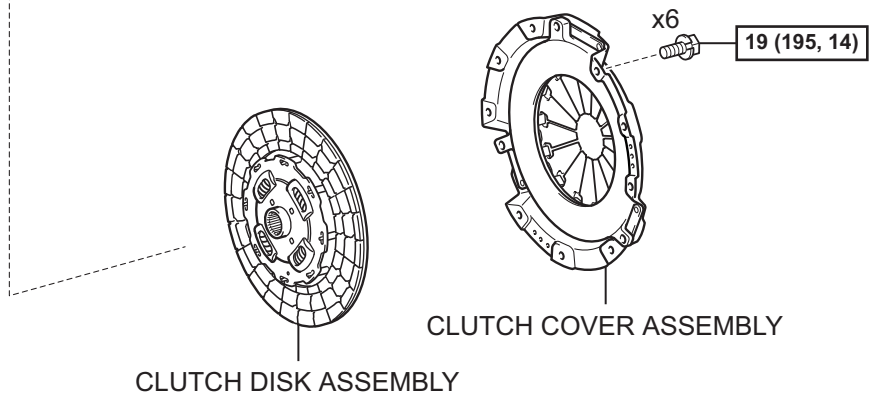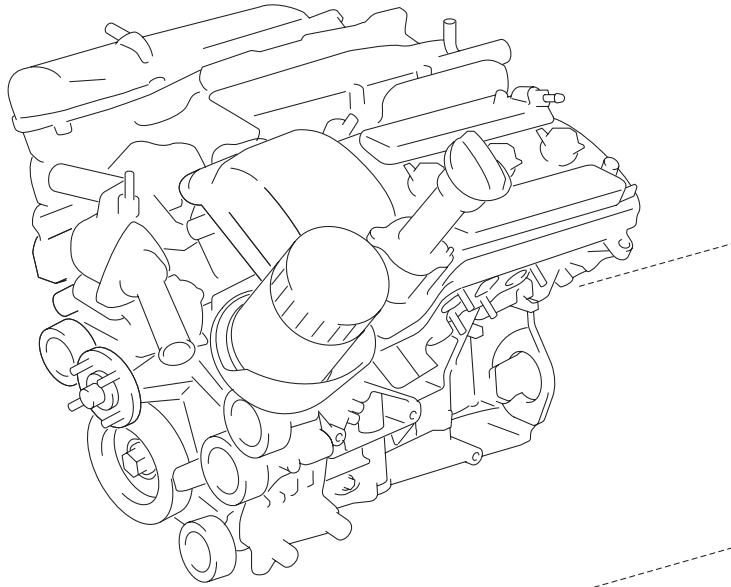


N*m (kgf*cm, ft*lbf) : Specified torque

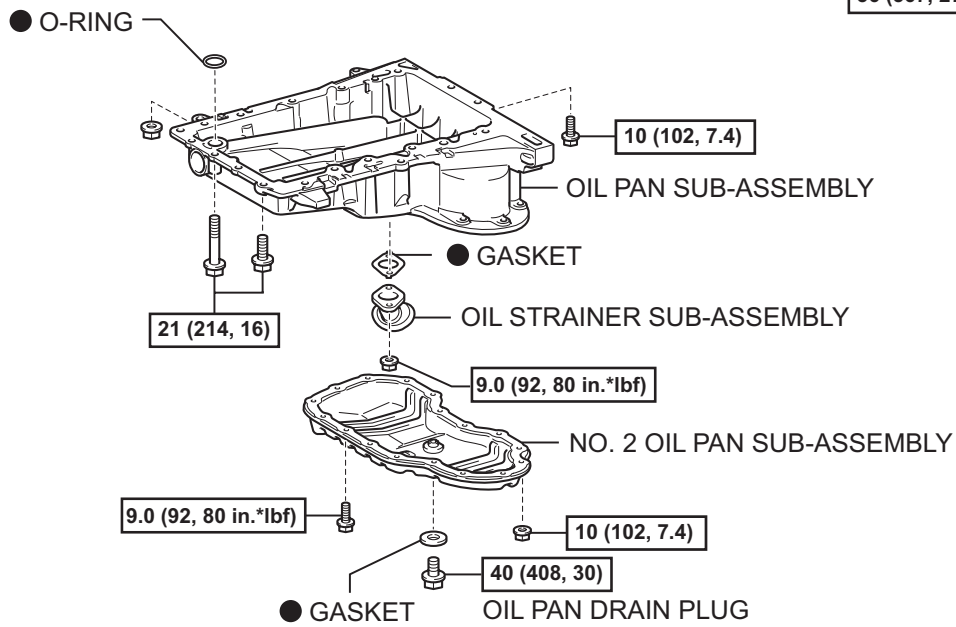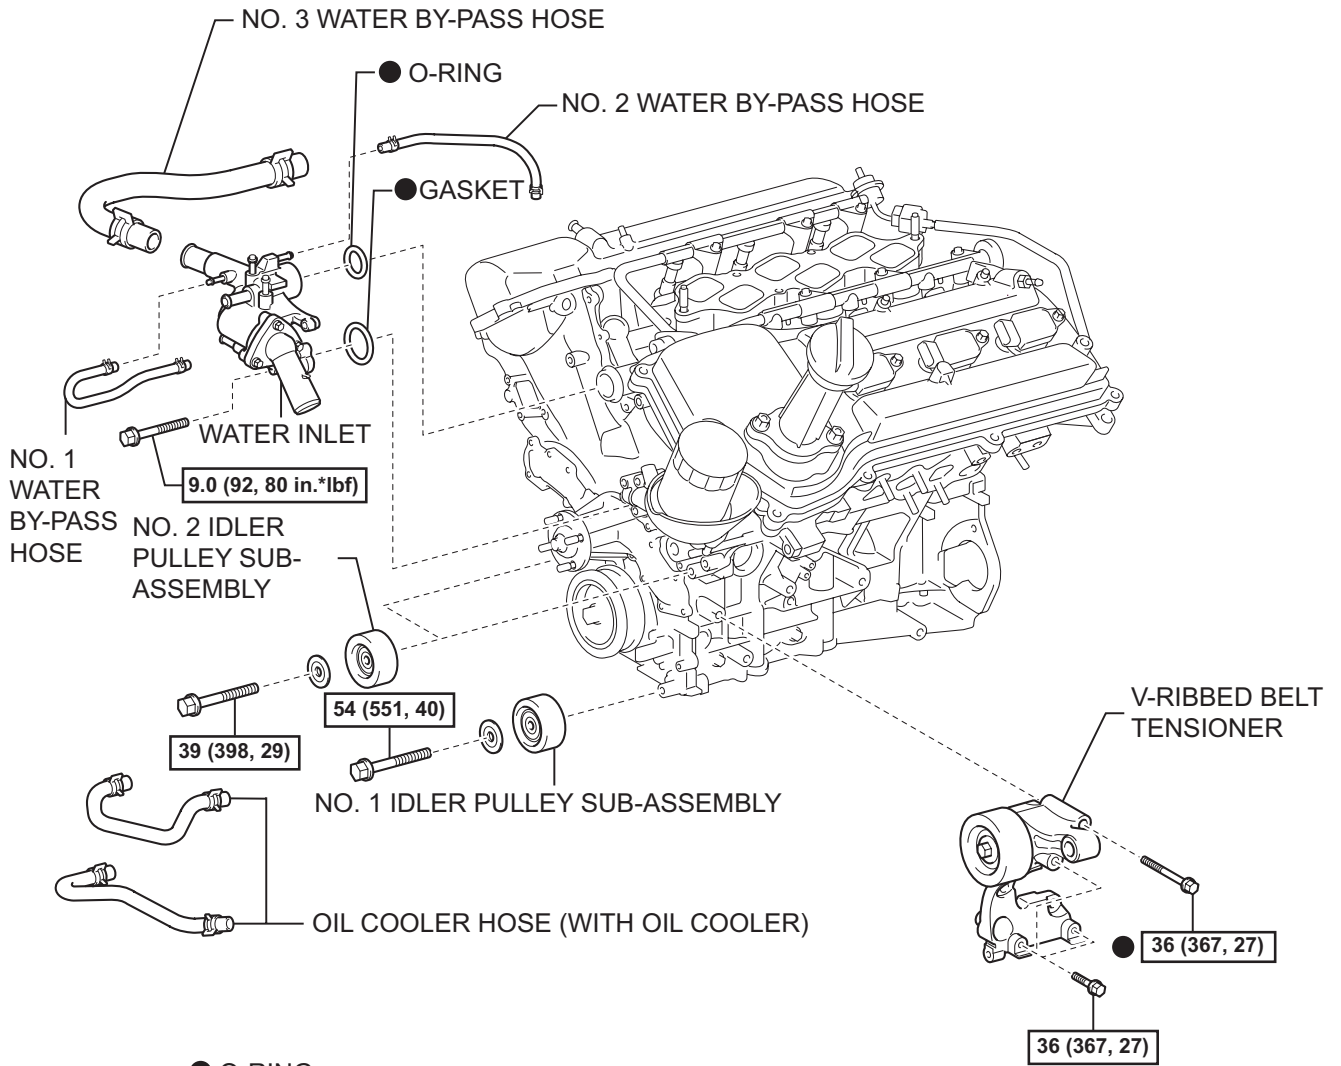

N*m (kgf*cm, ft*lbf) : Specified torque ● Non-reusable part


LU

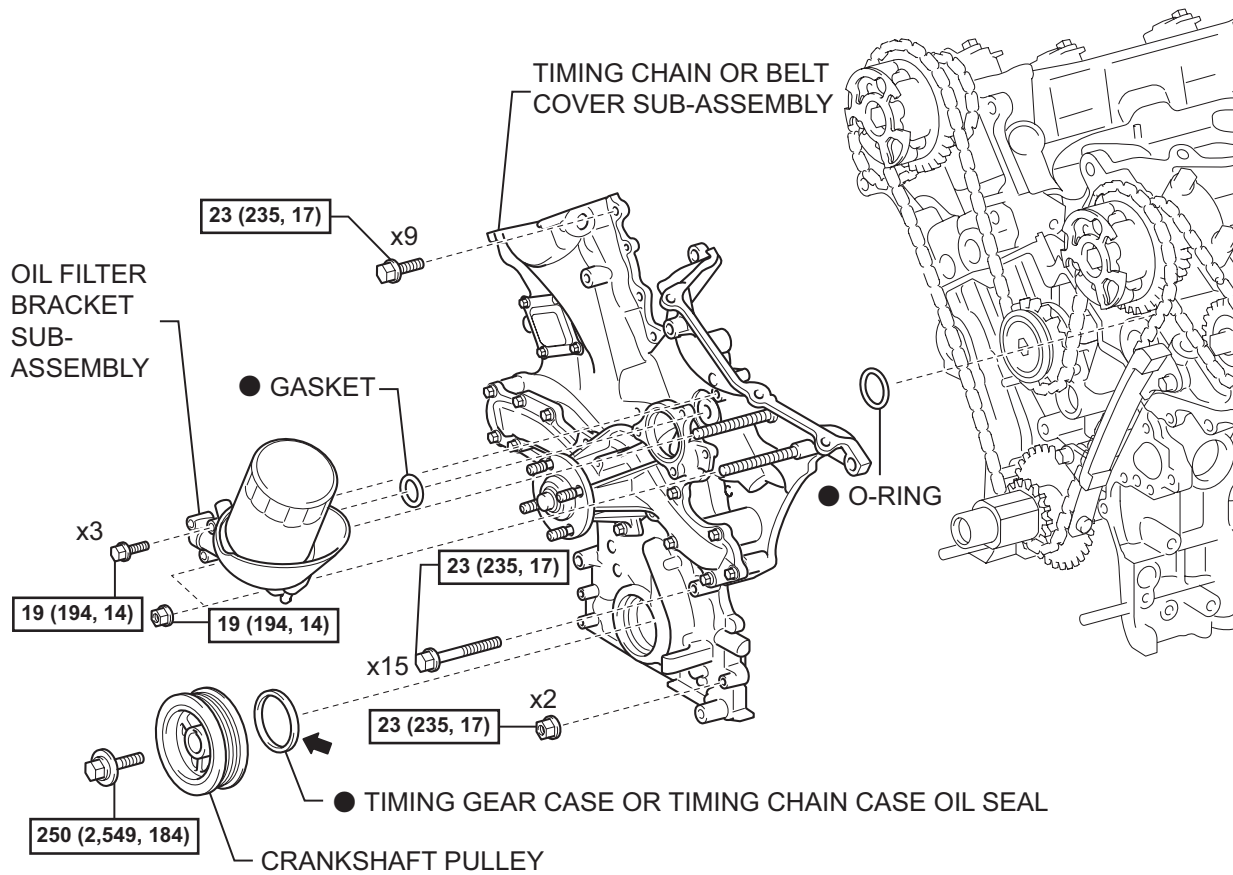

$\boxed{\text{N*m (kgf*cm, ft.*lbf)}}$: Specified torque

● Non-reusable part

← Apply MP grease

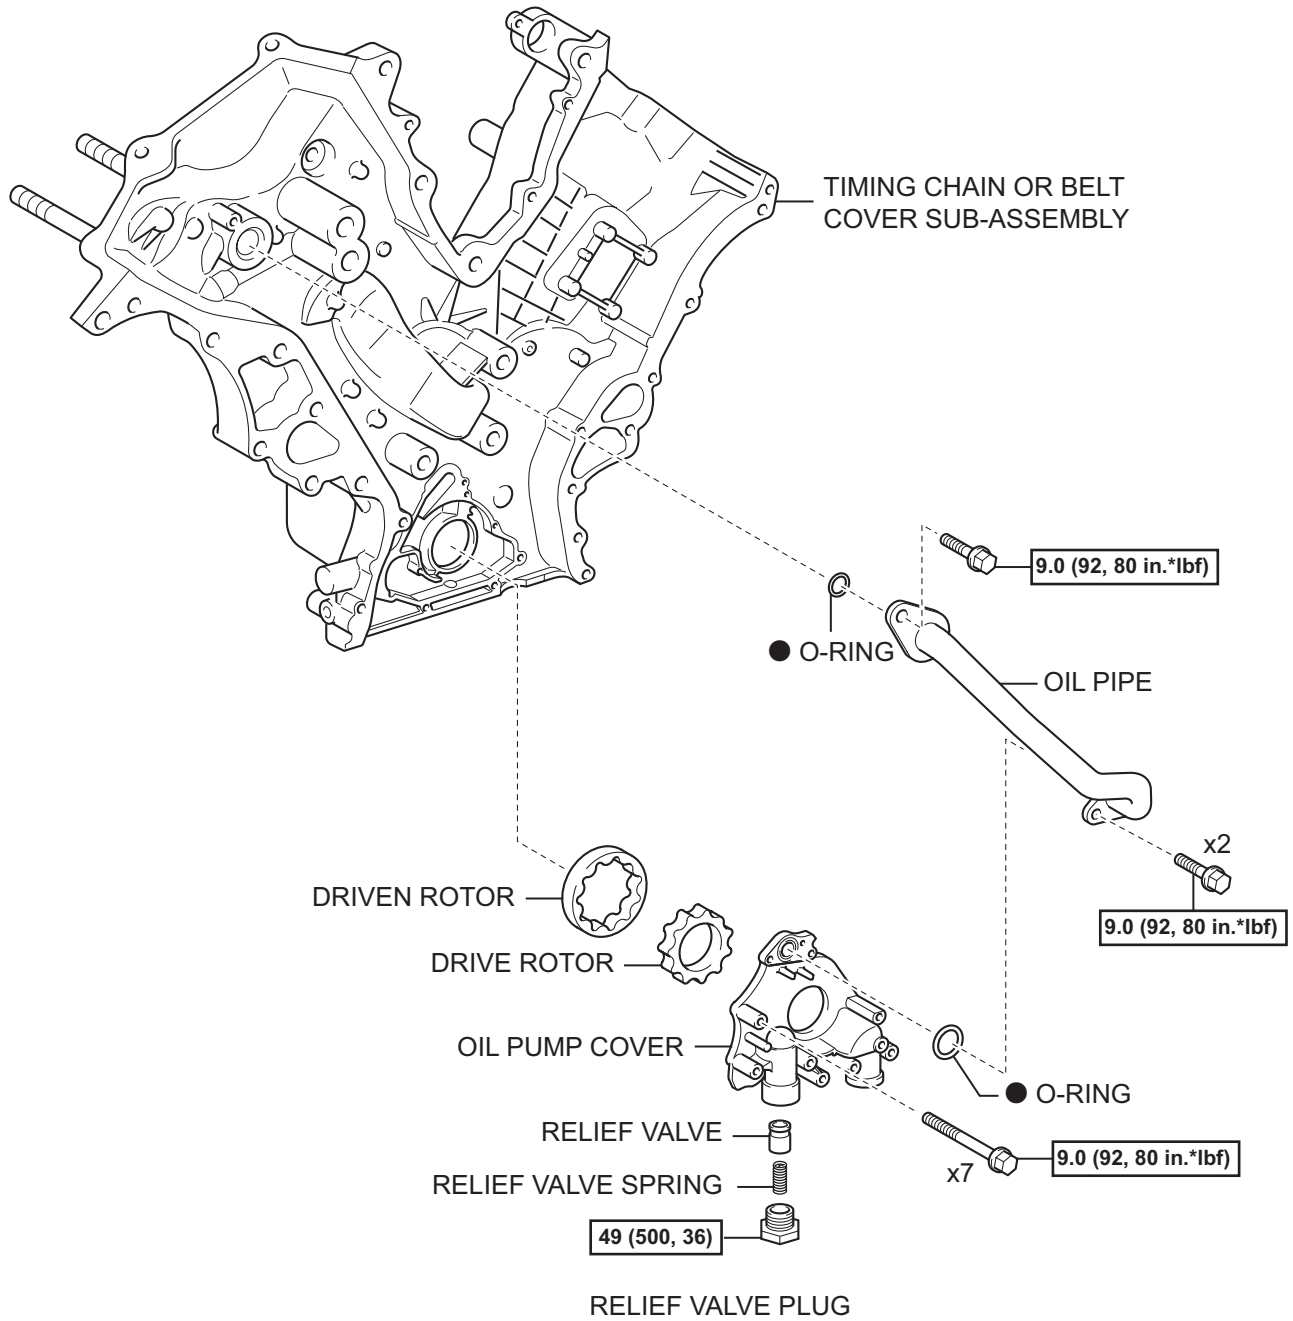

$N \cdot m$ (kgf \cdot cm, ft. \cdot lbf) : Specified torque

● Non-reusable part

Y