


## INSTALLATION

### 1. INSTALL STARTER ASSEMBLY

- (a) Install the starter assembly with the 2 bolts.  
**Torque: 37 N\*m (377 kgf\*cm, 27 ft.\*lbf)**
- (b) Install the wire harness to terminal 30 with the nut.  
**Torque: 9.8 N\*m (100 kgf\*cm, 7 ft.\*lbf)**
- (c) Connect the terminal 50 connector to the starter assembly.

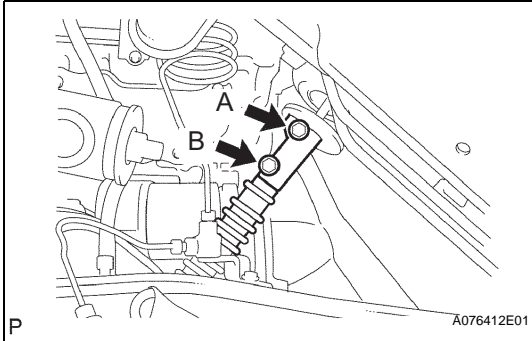

### 2. INSTALL NO.2 STEERING INTERMEDIATE SHAFT

- (a) Install the steering sliding yoke onto steering intermediate shaft No. 2.
- (b) Install bolt B and then tighten bolt B and A.  
**Torque: 36 N\*m (370 kgf\*cm, 27 ft.\*lbf)**

### 3. INSTALL FRONT FENDER SEAL LH

- (a) Install the front fender splash shield rear LH with the 5 clips.

### 4. INSTALL NO.2 EXHAUST FRONT PIPE ASSEMBLY

(See page [EX-3](#))

### 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**

### 6. CHECK FOR EXHAUST GAS LEAKAGE

### 7. INSTALL NO.1 ENGINE UNDER COVER SUB-ASSEMBLY

- (a) Install the engine under cover with the 4 bolts.  
**Torque: 29 N\*m (296 kgf\*cm, 21 ft.\*lbf)**