


STARTER (for 4WD)

COMPONENTS

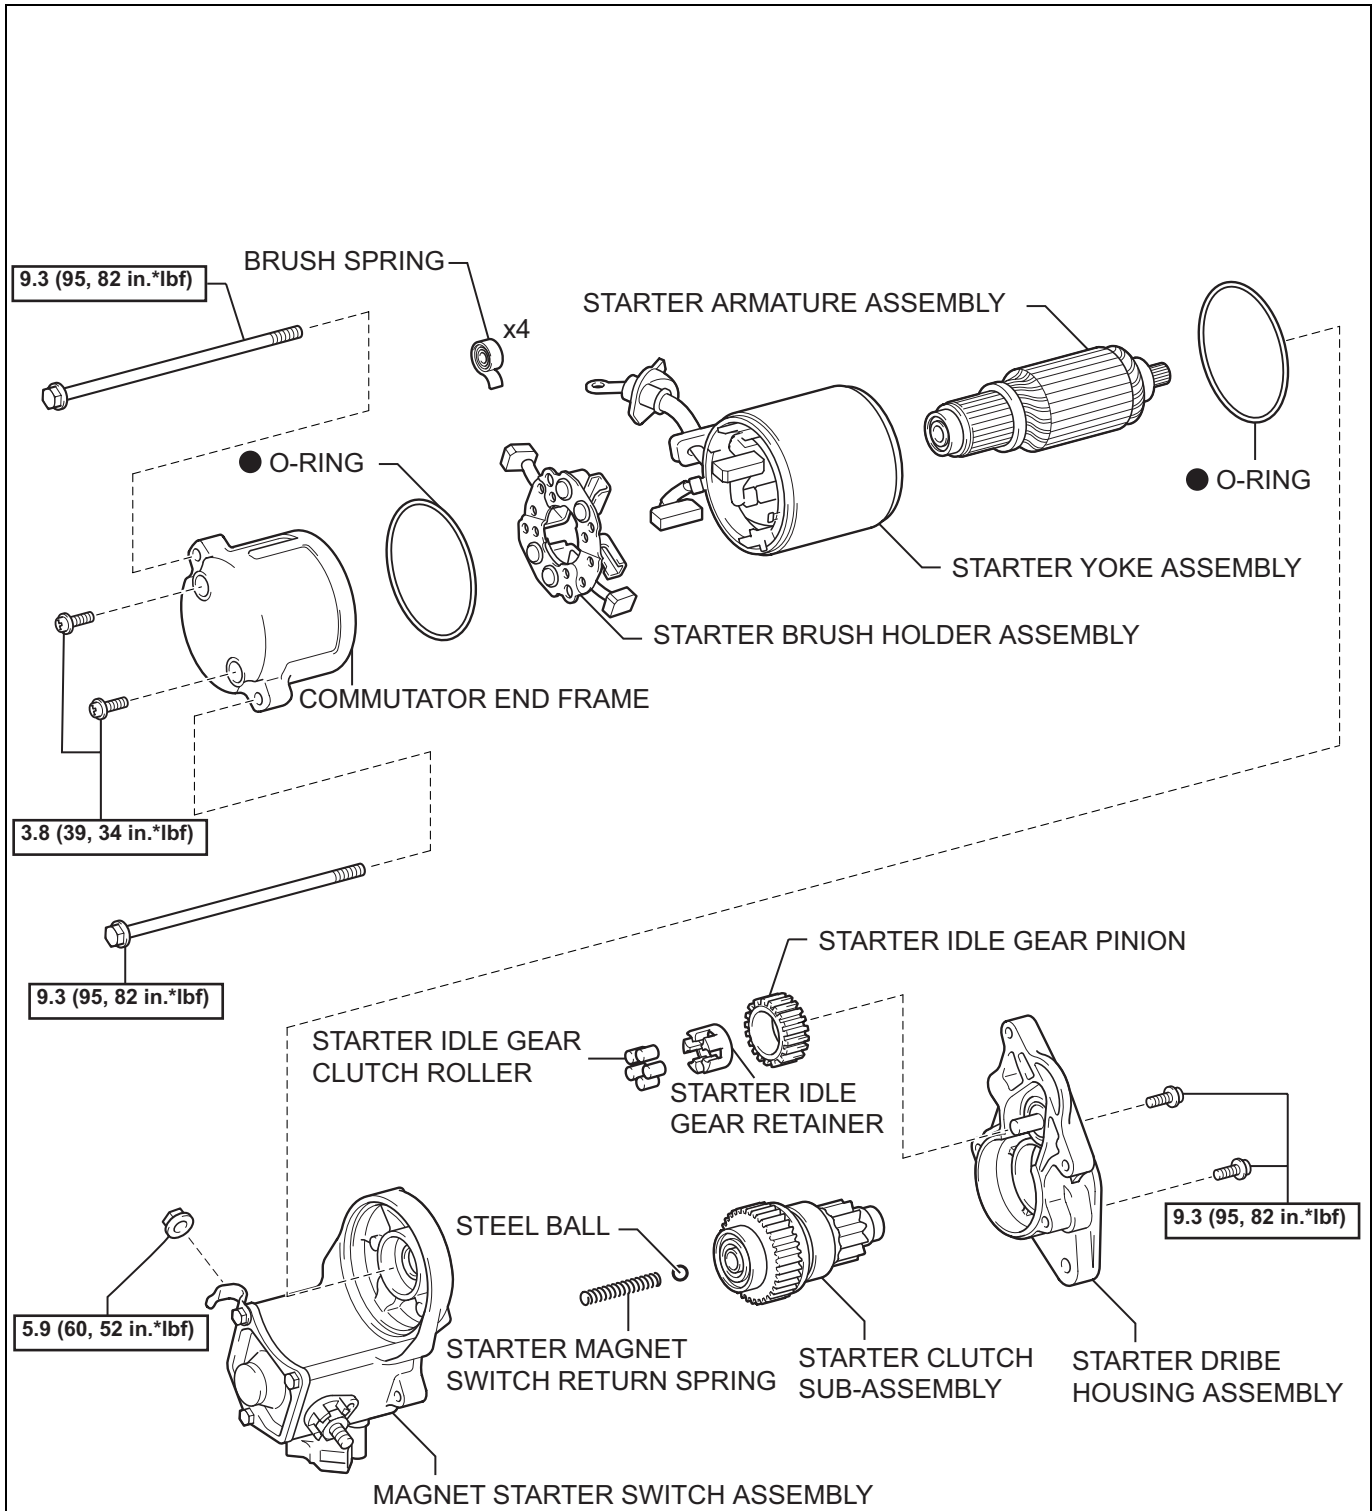


N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part


ST

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE NO.1 ENGINE UNDER COVER SUB-ASSEMBLY**
 - (a) Remove the 4 bolts, then remove the engine under cover.
3. **REMOVE NO.2 EXHAUST FRONT PIPE ASSEMBLY**
(See page [EX-3](#))
4. **REMOVE FRONT FENDER SEAL LH**
 - (a) Remove the 5 clips, then remove the front fender splash shield rear LH.

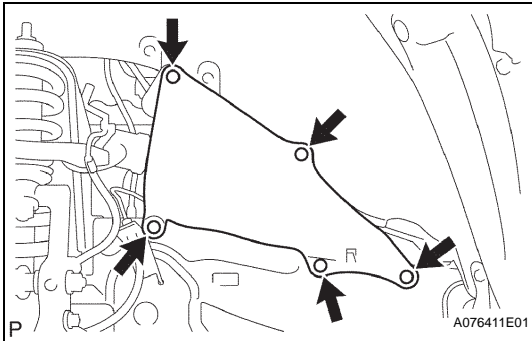

5. **REMOVE NO.2 STEERING INTERMEDIATE SHAFT**
 - (a) Loosen bolt A and remove bolt B, then separate the steering intermediate shaft No. 2

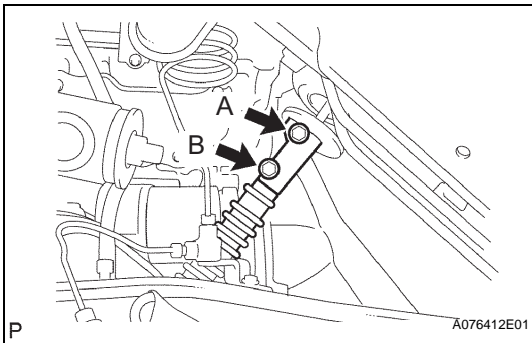

6. **REMOVE STARTER ASSEMBLY**
 - (a) Disconnect the terminal 50 connector from the starter assembly.
 - (b) Remove the nut, then remove the wire harness from terminal 30.
 - (c) Remove the 2 bolts, then remove the starter assembly.

