



STARTER RELAY

INSPECTION

1. INSPECT STARTER RELAY

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard

Tester Connection	Specified Condition
3-5	10k Ω or higher
3-5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the starter relay.