

AUTOMATIC TRANSMISSION FLUID

ON-VEHICLE INSPECTION

1. CHECK THE FLUID LEVEL

HINT:

Drive the vehicle until the engine and transmission are at normal operating temperature.

Fluid temperature:

70 to 80 °C (158 to 176 °F)

- Park the vehicle on a level surface and engage the parking brake.
- With the engine idling and the brake pedal depressed, shift the shift lever into all positions from P to L, and then return it to the P position.
- Pull out the oil level gage and wipe it clean.
- Push it back fully into the pipe.
- Pull it out and check that the fluid level is within the HOT range.

If there is any leakage, repair or replace O-rings, FIPGs, oil seals, plugs or other parts.

