


SPEED SENSOR

REMOVAL

1. REMOVE SPEED SENSOR

- (a) Disconnect the speed sensor connector.
- (b) Remove the bolt and speed sensor.
- (c) Remove the O-ring from the speed sensor.

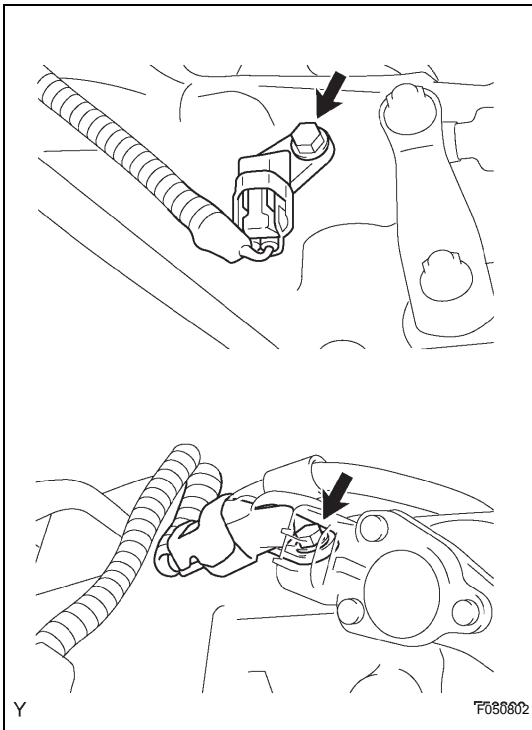

INSTALLATION

1. INSTALL SPEED SENSOR

- (a) Coat a new O-ring with ATF.
- (b) Install the speed sensor with the bolt.
Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)
- (c) Connect the speed sensor connector.

