


SPEED SENSOR

REMOVAL

1. REMOVE TRANSMISSION REVOLUTION SENSOR
 - (a) Disconnect the connector.
 - (b) Remove the bolt and speed sensor.

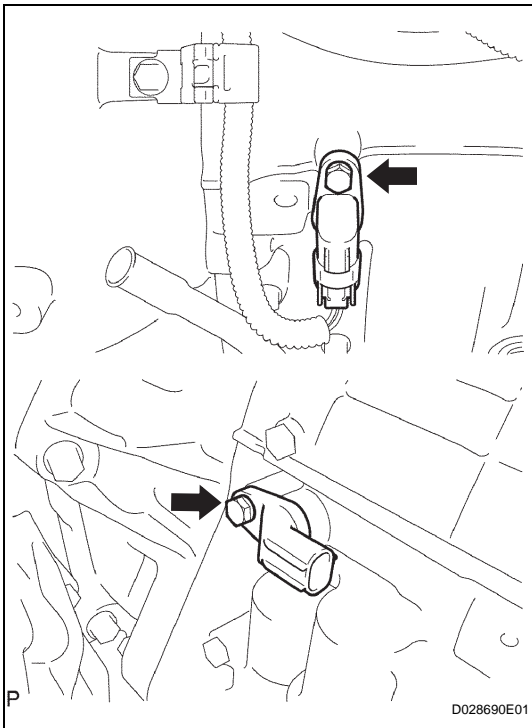

INSTALLATION

1. INSTALL TRANSMISSION REVOLUTION SENSOR
 - (a) Coat a new O-ring with ATF.
 - (b) Install the speed sensor with the bolt.
Torque: 5.4 N*m (55 kgf*cm, 48 in.*lbf)
 - (c) Connect the connector.

