
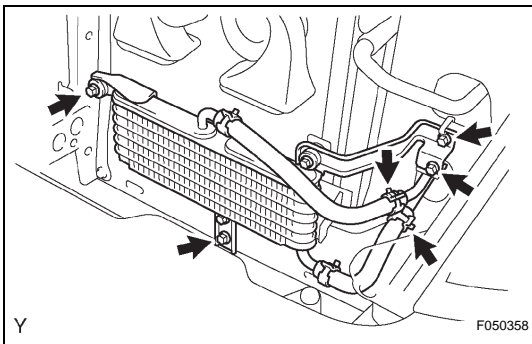


AIR COOLED OIL COOLER

REMOVAL

1. REMOVE RADIATOR GRILLE (See page [ET-4](#))
2. DRAIN AUTOMATIC TRANSMISSION FLUID
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and drain plug.
Torque: 28 N*m (285 kgf*cm, 21 ft.*lbf)
3. REMOVE OIL COOLER WITH HOSE ASSEMBLY
 - (a) Loosen the 2 clips and disconnect the 2 oil cooler hoses.
 - (b) Remove the 4 bolts and the oil cooler with hose assembly.

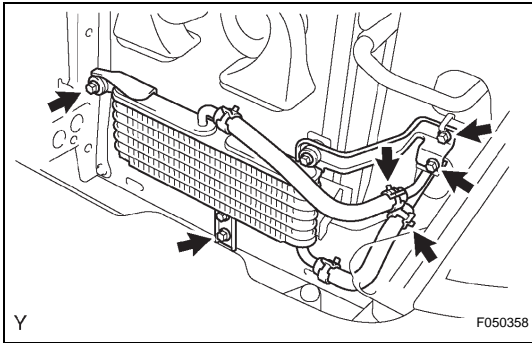

INSTALLATION

1. INSTALL OIL COOLER WITH HOSE ASSEMBLY
 - (a) Install the oil cooler with hose assembly with the 4 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)
 - (b) Install the 2 oil cooler hoses and 2 clips.
2. ADD AUTOMATIC TRANSMISSION FLUID
(See page [AT-135](#))
3. INSTALL RADIATOR GRILLE (See page [ET-11](#))