


**REMOVAL**

1. **REMOVE CLUTCH MASTER CYLINDER ASSEMBLY**  
(See page [CL-11](#))

2. **REMOVE TURN OVER SPRING SEAT COMPRESSION SPRING**


(a) Remove the compression spring.

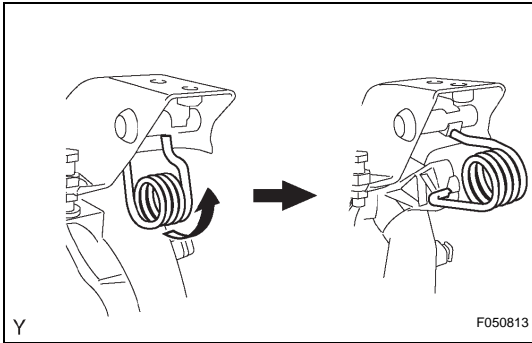

3. **REMOVE CLUTCH PEDAL SUB-ASSEMBLY**

(a) Remove the bolt and nut.


(b) Remove the clutch pedal from the clutch pedal support.

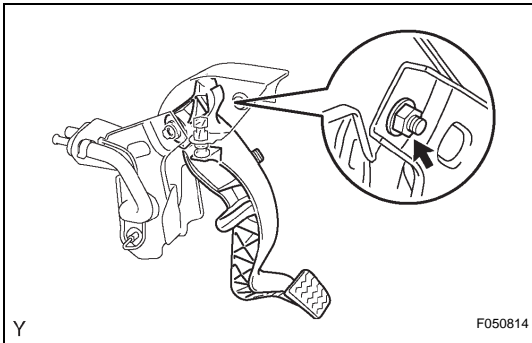

4. **REMOVE CLUTCH PEDAL SPRING HOLDER**


(a) Remove the clutch pedal spring holder from the clutch pedal support.


5. **REMOVE CLUTCH PEDAL PAD**

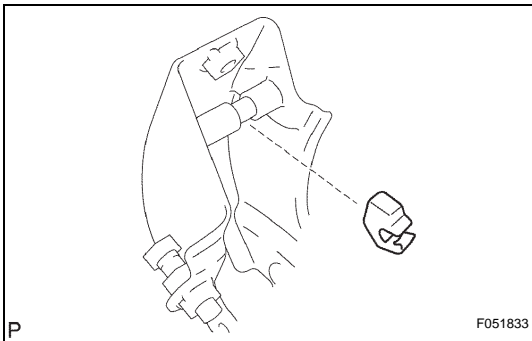


6. **REMOVE CLUTCH PEDAL BUSH**

(a) Remove the 2 bushes from the clutch pedal.

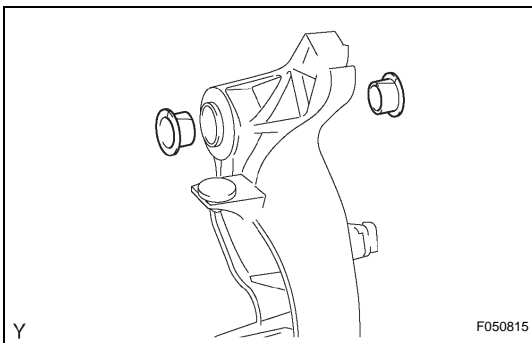

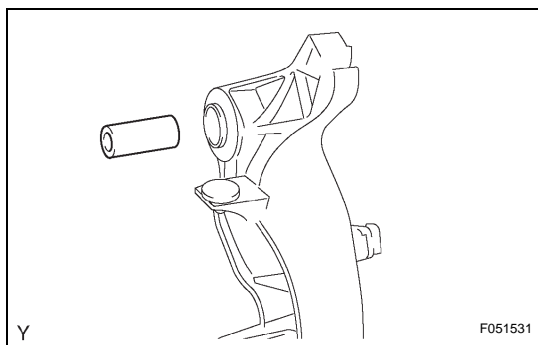**7. REMOVE CLUTCH PEDAL SHAFT COLLAR**

- (a) Remove the clutch pedal shaft collar.

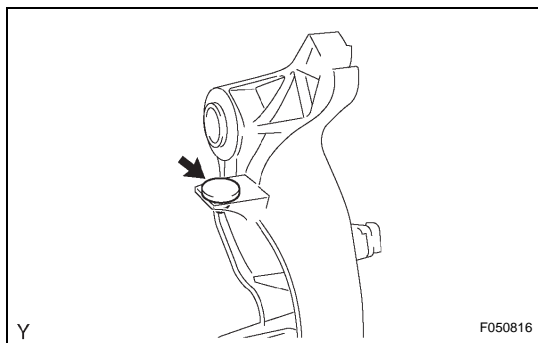**8. REMOVE CLUTCH PEDAL NO.1 CUSHION**

- (a) Using needle-nose pliers, remove the No. 1 cushion from the clutch pedal.