

CLUTCH START SWITCH

ON-VEHICLE INSPECTION

1. CHECK CLUTCH START SYSTEM

- (a) Check that the engine does not start when the clutch pedal is released.
- (b) Check that the engine starts when the clutch pedal is fully depressed.
If necessary, replace the clutch start switch assembly.

REMOVAL

1. REMOVE CLUTCH START SWITCH ASSEMBLY




- (a) Disconnect the clutch start switch assembly connector.
- (b) Remove the nut and clutch start switch assembly from the clutch pedal support.

INSPECTION

1. INSPECT CLUTCH START SWITCH ASSEMBLY

- (a) Measure the resistance between the terminals when the switch is ON and OFF.

Switch Position	Specified Condition
ON (pushed)	Below 1Ω
OFF (free)	10 kΩ or higher

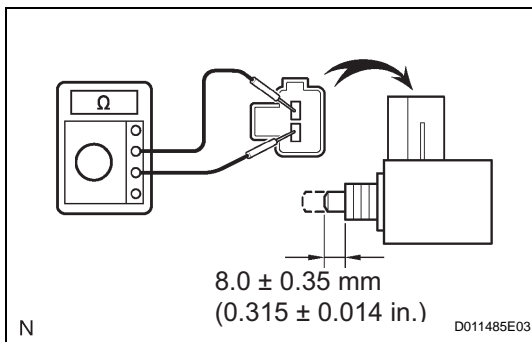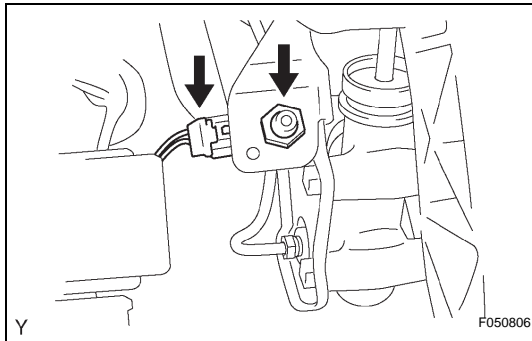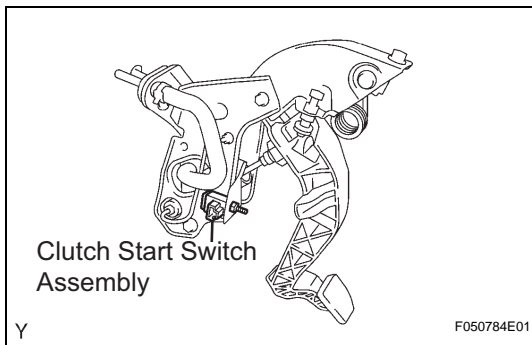

INSTALLATION

1. **INSTALL CLUTCH START SWITCH ASSEMBLY**
 - (a) Install the clutch start switch assembly with the nut.
Torque: 16 N*m (160 kgf*cm, 12 ft.*lbf)
 - (b) Connect the clutch start switch assembly connector.
2. **INSPECT CLUTCH START SWITCH ASSEMBLY (See page [CL-48](#))**