

# MANUAL TRANSMISSION SYSTEM

## PROBLEM SYMPTOMS TABLE

Use the table below to help determine the cause of the problems. The numbers indicate the ranked order of probability of each of the possible causes. Check each part in the order suggested. If necessary, replace the applicable parts.

Symptom	Suspected area	See page
Abnormal noise	1. Oil level (Low)	<a href="#">MT-2</a>
	2. Oil (Wrong)	<a href="#">MT-2</a>
	3. Gears (Worn or damaged)	-
	4. Bearings (Worn or damaged)	-
Oil leakage	1. Oil level (High)	<a href="#">MT-2</a>
	2. Gasket (Damaged)	-
	3. Oil seal (Worn or damaged)	-
	4. O-ring (Worn or damaged)	-
Hard shifting or will not shift	1. Synchronizer ring (Worn or damaged)	-
	2. Shift key spring (Damaged)	-
Jumps out of gear	1. Locking ball spring (Damaged)	-
	2. Shift fork (Worn)	-
	3. Gears (Worn or damaged)	-
	4. Bearings (Worn or damaged)	-

**MT**