



REASSEMBLY

1. INSTALL OUTPUT SHAFT REAR BEARING

- (a) Using SST and a press, install a new output shaft bearing onto the output shaft.

SST 09710-20011 (09710-06061), 09950-60010 (09951-00650)

- (b) Apply a light coat of grease to the bearing.

2. INSTALL OUTPUT SHAFT CENTER BEARING

- (a) Apply gear grease to the output shaft center bearing to the output shaft, and install it onto the output shaft.

3. INSTALL NO. 3 SYNCHRONIZER RING

- (a) Apply gear oil to synchronizer ring No. 3, and install it onto the output shaft.

MT