



## TRANSFER OIL

### ADJUSTMENT

#### 1. INSPECT TRANSFER OIL

- (a) Remove the filler plug and gasket.
- (b) Check that the oil level is within 5 mm (0.20 in.) of the bottom of the filler plug hole.

**NOTICE:**

- **When replacing the oil, recheck the oil level after driving.**
- **Excessively large or small quantities of oil may cause troubles.**

- (c) When the oil level is too low, check for oil leakage.
- (d) Tighten the filler plug with a new gasket.

**Torque: 37 N\*m (377 kgf\*cm, 27 ft.\*lbf)**

#### 2. ADJUST TRANSFER OIL

- (a) Remove the filler plug and gasket then supply oil.

**NOTICE:**

- **When supplying oil, pour slowly.**
- **Pour the oil in several stages allowing several minutes between each step.**

**HINT:**

The oil level should be within 5 mm (0.20 in.) of the bottom of the oil filler plug hole.

- (b) After leaving it alone for 5 minutes, check the oil level again.
- (c) Tighten the filler plug with a new gasket.

**Torque: 37 N\*m (377 kgf\*cm, 27 ft.\*lbf)**