


# REAR PROPELLER SHAFT ASSEMBLY (for Regular Cab 4WD)

## COMPONENTS

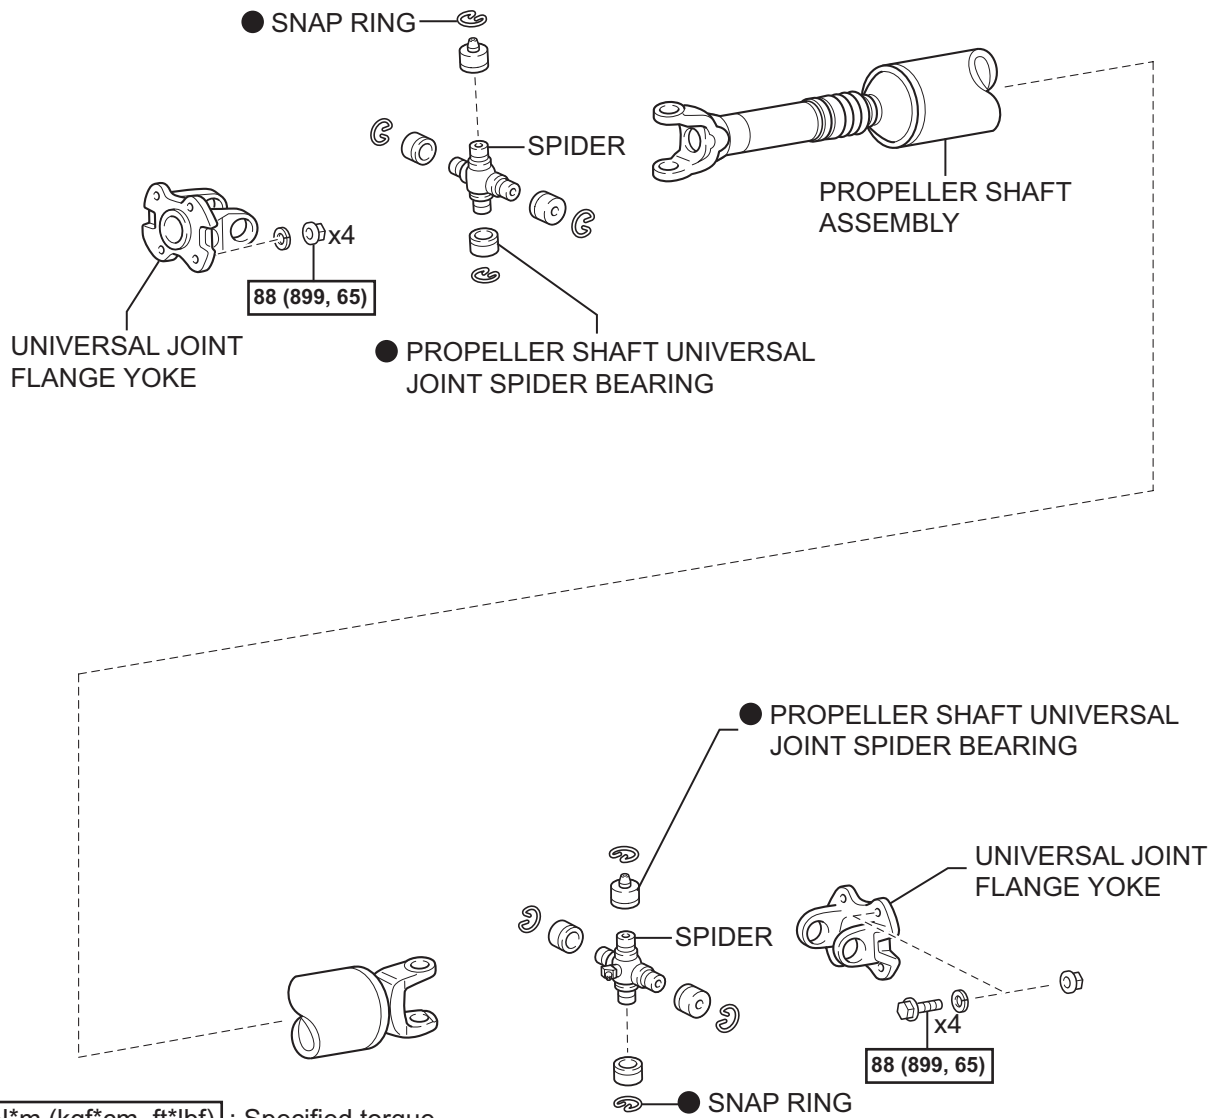


**N\*m (kgf\*cm, ft\*lb)** : Specified torque

● Non-reusable part

## REMOVAL

### 1. REMOVE PROPELLER SHAFT ASSEMBLY

- (a) Place matchmarks on the propeller shaft flange and differential flange.
- (b) Remove the 4 nuts, 4 bolts, 4 washers and front propeller shaft.

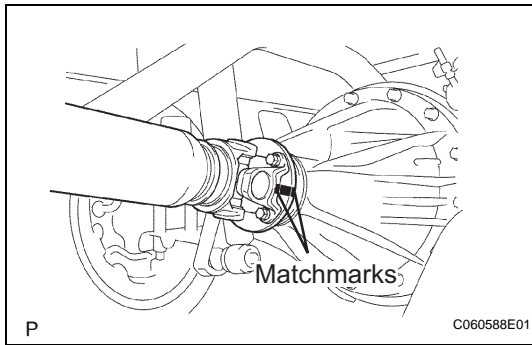

- (c) Place matchmarks on the propeller shaft flange and transfer flange.
- (d) Remove the 4 nuts, 4 washers and front propeller shaft.

