


INSTALLATION

1. INSPECT PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY

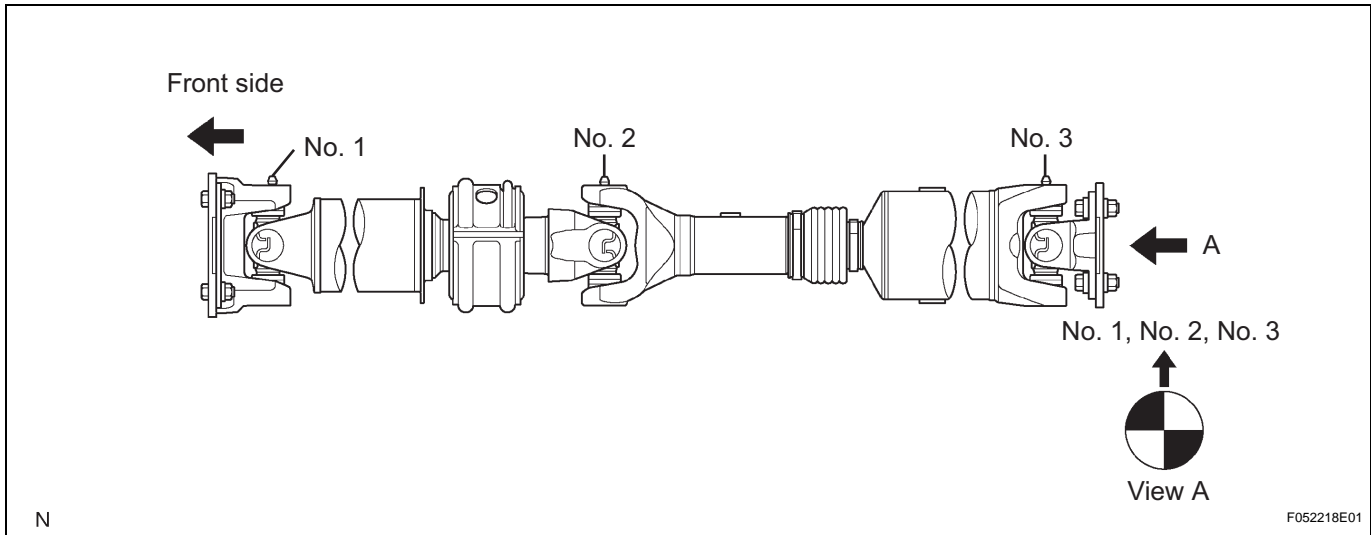



HINT:

When replacing the spider bearing, make sure that the grease fitting assembly hole is facing in the direction shown in the illustration.

2. INSTALL PROPELLER WITH CENTER BEARING SHAFT ASSEMBLY


- Align the matchmarks on the yoke and transfer flange.
- Install the propeller shaft with the 4 nuts and 4 washers.

Torque: 88 N*m (899 kgf*cm, 65 ft.*lbf)

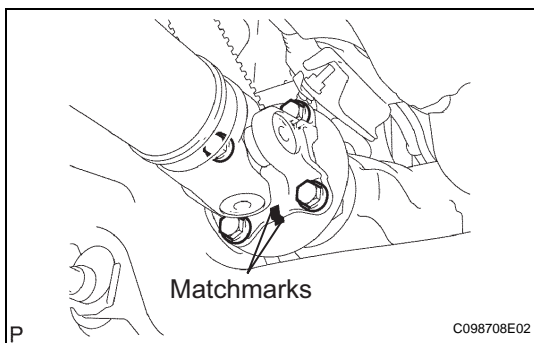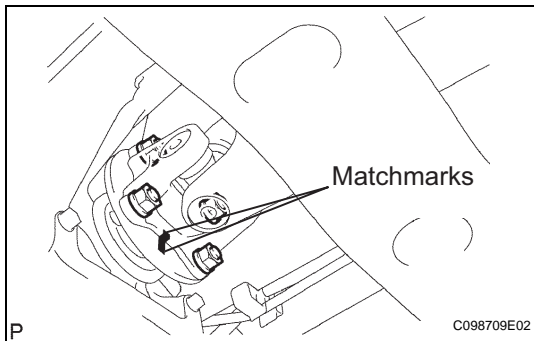

- Align the matchmarks on the yoke and differential flange.
- Install the propeller shaft with the 4 bolts, 4 nuts and 4 washers.

Torque: 88 N*m (899 kgf*cm, 65 ft.*lbf)

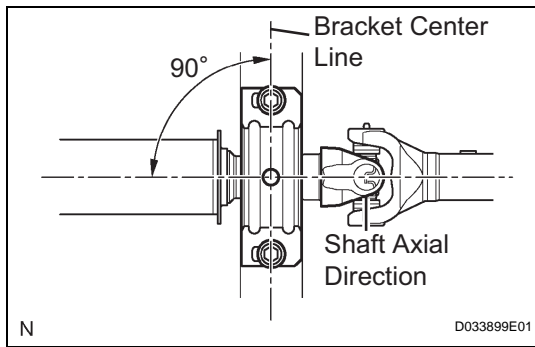

- (e) Provisionally install the center support bearing with 2 mounting bolts.
HINT:
Make sure the bearing is installed with the drain hole facing downwards.
- (f) Torque the 2 bolts.
Torque: 36 N*m (369 kgf*cm, 27 ft.*lbf)